

# TC-WA7ES/WR565/WR665S

## SERVICE MANUAL

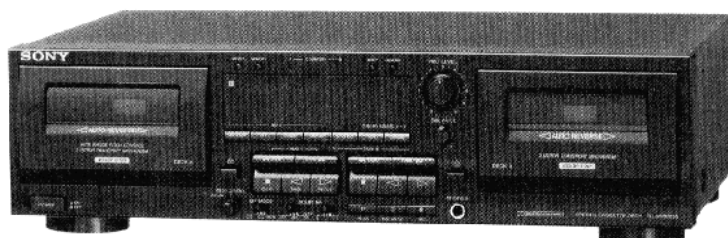


Photo : TC-WR665S

*US Model*  
TC-WA7ES/WR565/WR665S

*Canadian Model*  
*AEP Model*  
*UK Model*  
*E Model*  
*Australian Model*  
*Chinese Model*  
TC-WR565/WR665S

\* Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen.

"DOLBY", the double-D symbol **DD** and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

Model Name Using Similar Mechanism		TC-WR545/WR741
Tape Transport Mechanism Type	DECK A	TC-WR565/WR665S : TCM-190RA14CL TC-WA7ES : TCM-190RA12CL
	DECK B	TCM-190RB12CL

### SPECIFICATIONS

#### System

Recording system  
4-track 2-channel stereo

Fast-winding time (approx.)  
90 sec. (with Sony C-60 cassette)

Bias AC bias

Signal-to-noise ratio (at peak level and weighted with Dolby NR off)  
Type I tape, Sony Type I (NORMAL) : 55 dB  
Type II tape, Sony Type II (HIGH) : 57 dB  
Type IV tape, Sony Type IV (METAL) : 58 dB

S/N ratio improvement (approximate values)  
With Dolby B NR on : 5dB at 1kHz, 10dB at 5kHz  
With Dolby C NR on : 15dB at 500Hz, 20dB at 1kHz  
With Dolby S NR on (TC-WA7ES/WR665S only) :  
10dB at 100Hz, 24dB at 1kHz

Harmonic distortion  
0.4% (with Type I tape, Sony Type I (NORMAL) :  
160 nWb/m 315 Hz, 3rd H.D.)  
1.8% (with Type IV tape, Sony Type IV (METAL) :  
250 nWb/m 315 Hz, 3rd H.D.)

Frequency response (Dolby NR off)  
Type I tape, Sony Type I (NORMAL) :  
30-15,000Hz (  $\pm$  3dB, IEC)  
Type II tape, Sony Type II (HIGH) :  
30-17,000Hz (  $\pm$  3dB, IEC)  
Type IV tape, Sony Type IV (METAL) :  
30-18,000Hz (  $\pm$  3dB, IEC)  
30-13,000Hz (  $\pm$  3dB, - 4dB recording)

#### Wow and flutter

TC-WA7ES/WR665S :  $\pm$  0.13% W. Peak (IEC)  
0.07% W. RMS (NAB)  
 $\pm$  0.18% W. Peak (DIN)  
TC-WR565 :  $\pm$  0.14% W. Peak (IEC)  
0.08% W. RMS (NAB)  
 $\pm$  0.19% W. Peak (DIN)

Variable pitch range (approx.)  
- 30 to +30%

#### Inputs

Line inputs (phono jacks)  
Sensitivity : 0.16V  
Input impedance : 47 kilohms

#### Outputs

Line outputs (phono jacks)  
Rated output level : 0.5V at a load impedance of  
47 kilohms  
Load impedance : Over 10 kilohms  
Headphones (stereo phone jack)  
Output level : 1mW at a load impedance of 32 ohms

- Continued on page 2 -



**STEREO CASSETTE DECK**  
**SONY®**

## General

### Power requirements

Where purchased	Power requirements
US, Canadian model	120V AC, 60Hz
AEP, UK, German, Chinese model	220 - 230V AC, 50/60Hz
Australian model	240V AC, 50/60Hz
E model	120/220/240V AC, 50/60Hz

### Power consumption

26W

### Dimensions (approx) (w/h/d)

Model for U.K. and Australian :

430×123×300mm (w/h/d)

(17 × 4 7/8 × 11 7/8 inches)

Model for other countries :

430×123×290mm (w/h/d)

(17 × 4 7/8 × 11 1/2 inches)

including projecting parts and controls

### Mass (Approx.)

4.5kg (9lbs 15oz)

### Supplied accessories

Audio connecting cords (2 phono plug-2 phone plugs) (2)

### Optional accessory


Remote commander RM J902

Design and specifications are subject to change without notice.

## TABLE OF CONTENTS

Section	Title	Page
	Specifications .....	1
	Safety Check-out .....	3
<b>1. GENERAL</b>		
1-1.	Identifying the Parts .....	4
<b>2. DISASSEMBLY</b>		
2-1.	Front Panel .....	5
2-2.	Mechanism Deck .....	5
2-3.	Capstan Motor, Reel Motor .....	6
2-4.	Head, Pinch Roller .....	6
<b>3. ADJUSTMENTS</b>		
3-1.	Mechanical Adjustments .....	7
3-2.	Electrical Adjustments .....	7
<b>4. EXPLANATION OF IC TERMINALS</b>		11
<b>5. DIAGRAMS</b>		
5-1.	Block Diagram .....	13
5-2.	Printed Wiring Boards (System Control Section) .....	17
5-3.	Schematic Diagram (System Control Section) .....	21
5-4.	Schematic Diagram (Audio Section) .....	27
5-5.	Printed Wiring Boards (Audio Section) .....	31
5-6.	Printed Wiring Boards (Dolby (S) Section) .....	34
5-7.	Schematic Diagram (Dolby (S) Section) .....	34
<b>6. EXPLODED VIEWS</b>		
6-1.	Chassis Section .....	37
6-2.	Front Panel Section .....	39
6-3.	Mechanism Section 1 .....	40
6-4.	Mechanism Section 2 .....	41
<b>7. ELECTRICAL PARTS LIST</b>		42

### MODEL IDENTIFICATION (Specification Label)

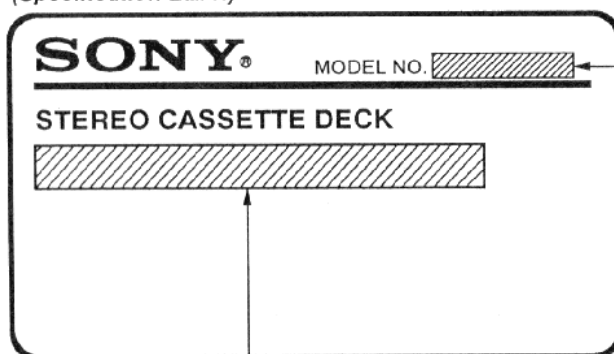

TC-WR565  
TC-WR665S  
TC-WA7ES

US, Canadian model : AC 120V 60Hz  
UK model : AC 240V 50Hz  
Australian model : AC 240V~50/60Hz  
AEP, German model : AC 220-230V~50/60Hz  
E model : AC120, 220, 240V~50/60Hz  
Chinese model : AC 220 - 230V~50/60Hz

## SAFETY CHECK-OUT

Page

.....1  
.....3  
.....4  
.....5  
.....5  
.....6  
.....6  
.....7  
.....7  
.....11  
.....13  
.....17  
.....21  
.....27  
.....31  
.....34  
.....34  
.....37  
.....39  
.....40  
.....41  
.....42

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.

3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

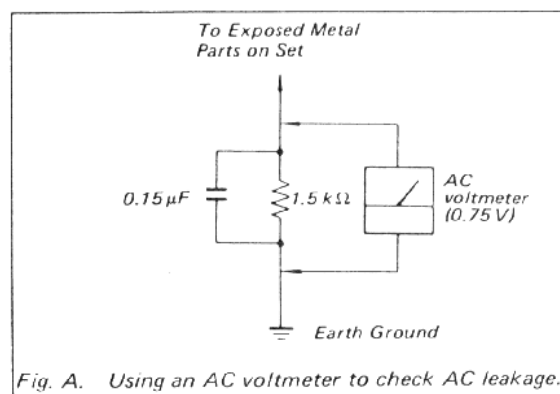


Fig. A. Using an AC voltmeter to check AC leakage.

### SAFETY-RELATED COMPONENT WARNING!!


COMPONENTS IDENTIFIED BY MARK OR DOTTED LINE WITH MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

## SECTION 1 GENERAL

### 1-1. IDENTIFYING THE PARTS

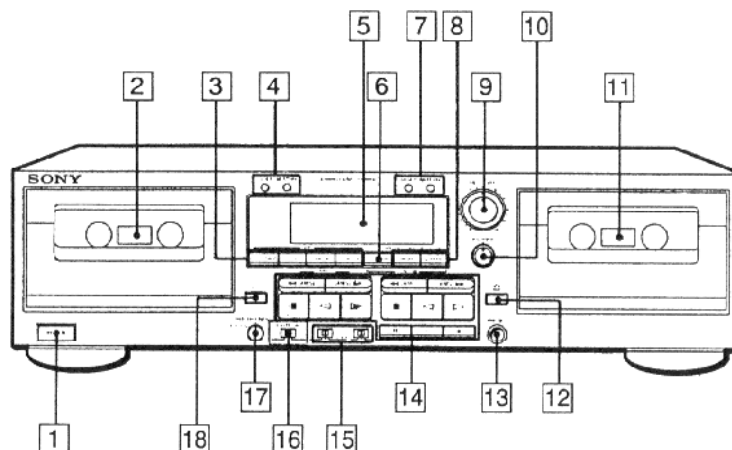

#### FRONT PANEL

- |  |   |
|--|---|
| <p>1 POWER switch</p> <p>2 Deck A</p> <p>3 RMS<sup>™</sup> operation buttons<br/>RMS/START buttons<br/>SET buttons<br/>CHECK buttons<br/>DISPLAY buttons</p> <p>4 COUNTER buttons (deck A)<br/>RESET button<br/>MEMORY button (TC-WA7ES/WR665S only)</p> <p>5 Display panel</p> <p>6 AUTO CAL button</p> <p>7 COUNTER buttons (deck B)<br/>RESET button<br/>MEMORY button (TC-WA7ES/WR665S only)</p> <p>8 SYNCHRO DUBBING buttons<br/>HIGH button<br/>NORMAL button</p> <p>9 REC (recording) LEVEL control</p> <p>10 BALANCE control</p> | <p>11 Deck B</p> <p>12  (eject) button (deck B)</p> <p>13 PHONES jack (stereo phone jack)</p> <p>14 Tape operation buttons<br/>◀◀ (leftward fastwinding)/AMS<sup>™</sup>/<br/>RMS<sup>™</sup> - button<br/>▶▶ (rightward fastwinding)/AMS<sup>™</sup>/<br/>RMS<sup>™</sup> + button<br/>■ (stop)/(RMS<sup>™</sup>) CLEAR button<br/>◀ (reverse play)/(RMS<sup>™</sup>) BACK<br/>button<br/>▷ (forward play)/(RMS<sup>™</sup>) FRONT<br/>button<br/>   PAUSE button<br/>○ REC MUTE (record muting) button<br/>● REC (record muting) button</p> <p>15 DOLBY NR switches<br/>OFF/ON/FILTER ON switch<br/>B/C/S switch</p> <p>16 DIR (direction) MODE switch</p> <p>17 PITCH control</p> <p>18  (eject) button (deck A)</p> |
|--|---|

<sup>™</sup> Random Music Sensor  
<sup>™</sup> Automatic Music Sensor


## SECTION 2 DISASSEMBLY

**Note :** Follow the disassembly procedure in the numerical order given.

### CASE


Unscrew the four case attachment screws  $M3 \times 8$  and remove the case.

### 2-1. FRONT PANEL

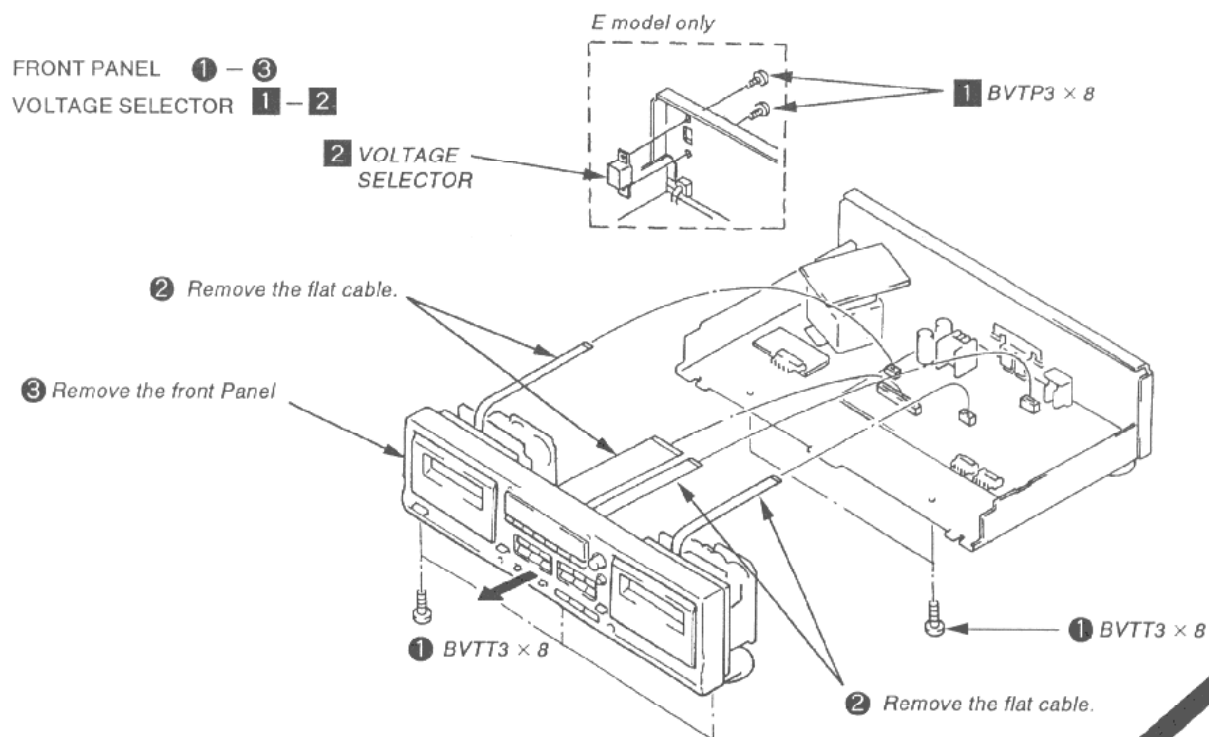


### 2-2. MECHANISM DECK


① Press the EJECT button.

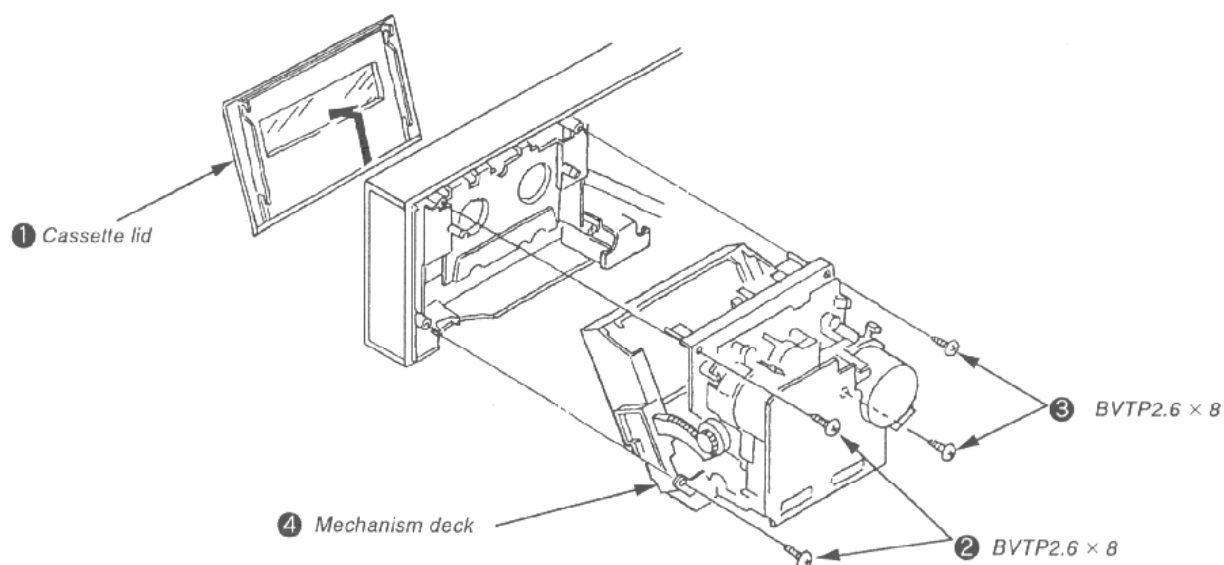

## 2-3. CAPSTAN MOTOR, REEL MOTOR

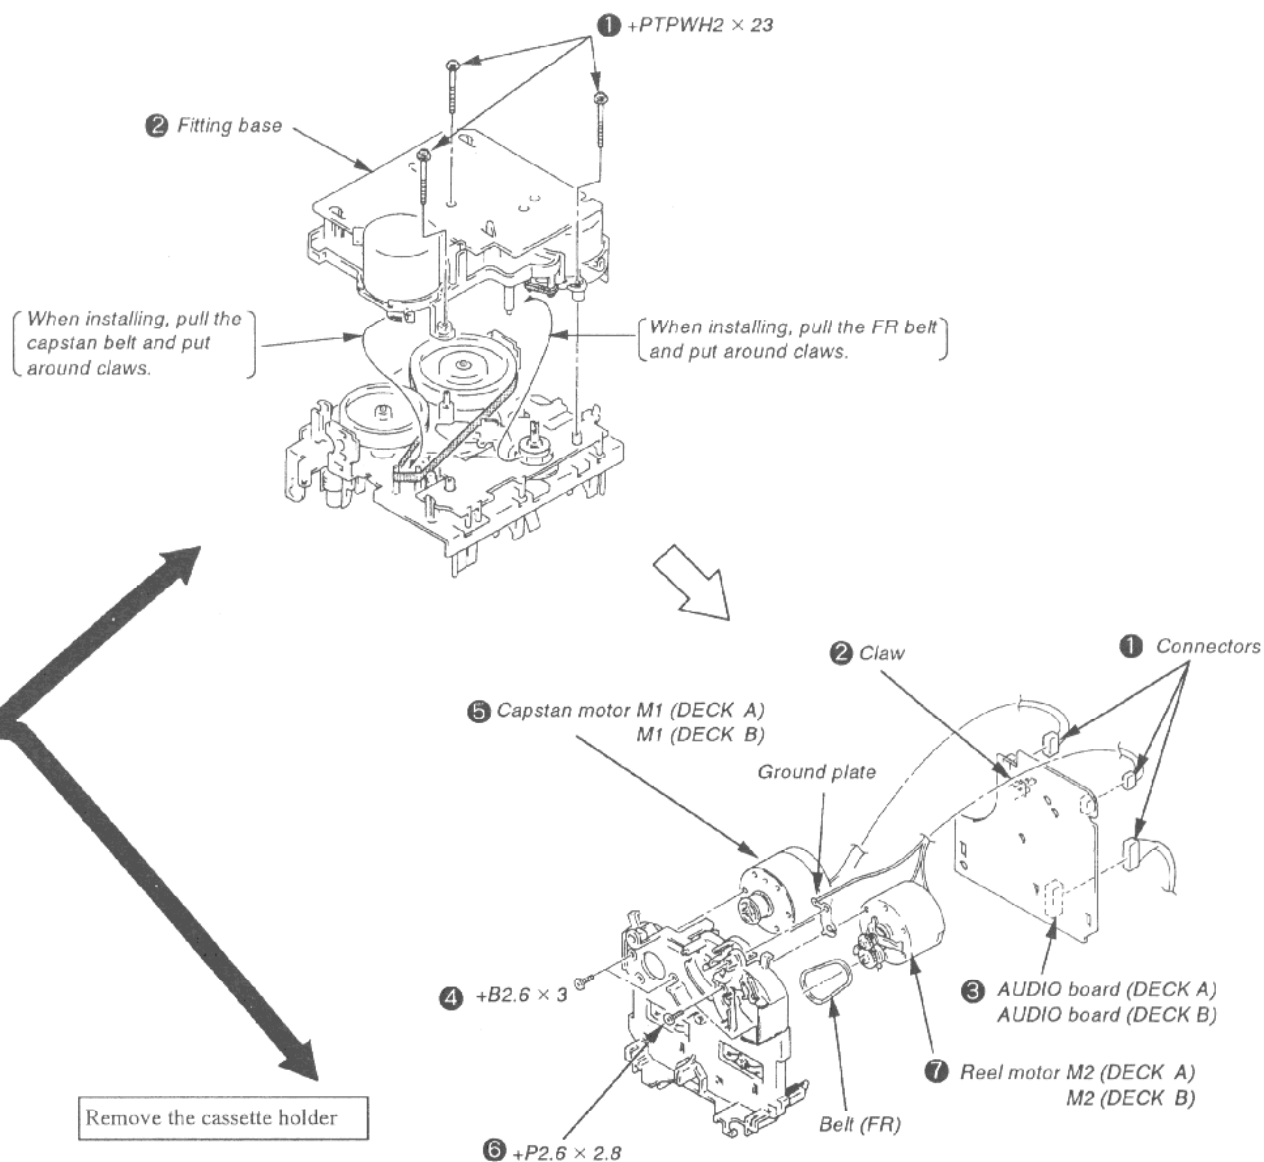

## 2-4. HEAD, PINCH ROLLER

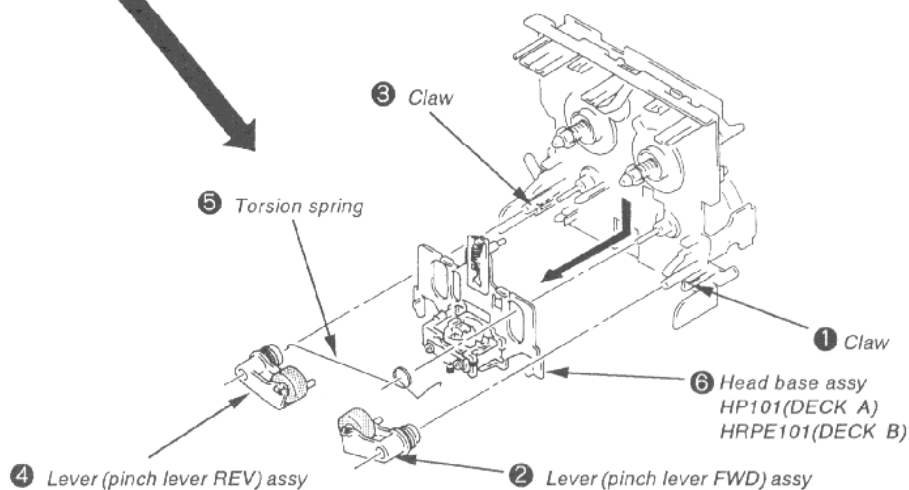

## SECTION 3 ADJUSTMENTS

### 3-1. MECHANICAL ADJUSTMENTS

#### PRECAUTION

1. Clean the following parts with a denatured alcohol-moistened swab:
 

record/playback/erase head	pinch roller
rubber belts	capstan
idlers	
2. Demagnetize the record/playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustment.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

#### Torque Measurement


Torque	Torque meter	Meter reading
Forward	CQ-102C	30 to 65g • cm (0.42 to 0.9 oz • inch)
Forward back tension	CQ-102C	DECK A : 1 to 6g • cm (0.014 to 0.083 oz • inch) DECK B : 2 to 9g • cm (0.03 to 0.12 oz • inch)
Reverse	CQ-102RC	30 to 65g • cm (0.42 to 0.9 oz • inch)
Reverse back tension	CQ-102RC	1 to 6g • cm (0.014 to 0.083 oz • inch)
FF/REW	CQ-201B	70 to 120g • cm (0.98 to 1.66 oz • inch)

### 3-2. ELECTRICAL ADJUSTMENTS

#### PRECAUTION

1. The adjustment should be performed in the publication.  
(Be sure to make playback adjustment at first.)
2. The adjustments and measurement should be performed for both L-CH and R-CH.
  - Switch position  
DOLBY NR switch : OFF  
DIR MODE switch :  $\rightleftarrows$
  - Standard record position :  
Deliver the standard input signal level to input jack and set the REC LEVEL control to obtain the standard output signal level as follows.

— Record Mode —

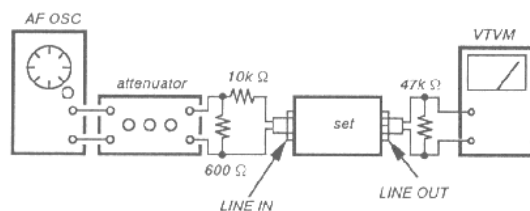

#### Standard Input Level

Input terminal	LINE IN
source impedance	10k $\Omega$
input signal level	0.5V ( - 3.8dB)

#### Standard Output Level

Output terminal	LINE OUT
load impedance	47k $\Omega$
output signal level	0.5V ( - 3.8dB)

#### Test Tape

Tape	Contents	Use
P-4-A100	10kHz, -10dB	Azimuth Adjustment
P-4-L300	315Hz, 0dB	PB Level Adjustment
WS-48B	3kHz, 0dB	Tape Speed Adjustment

0dB=0.775V


#### Test Mode

1. Insert a short-circuit plug into TP801 (2P) and turn ON the power switch.  
At first, all the fluorescent tubes light up, then the system returns to normal display. (However, "0000" is not displayed on the counter.)
2. To release the test mode, remove the short plug and turn off the power switch.
3. Remove the short plug after completion of adjustment.


#### Record/Playback Head Azimuth Adjustment

##### Procedure :


1. Forward playback Mode

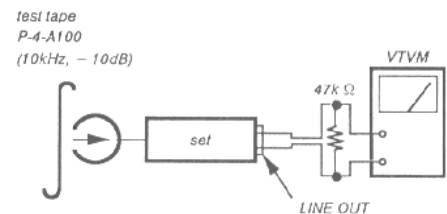

2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 1dB.

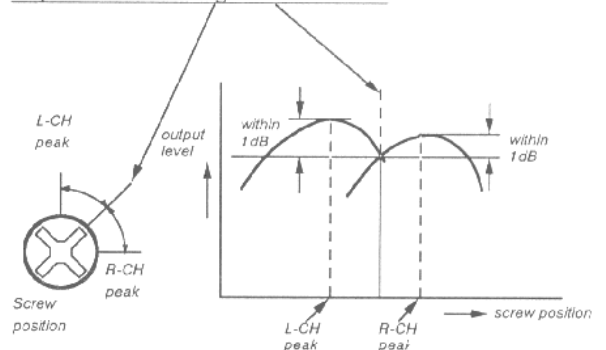


### 3. Playback Mode

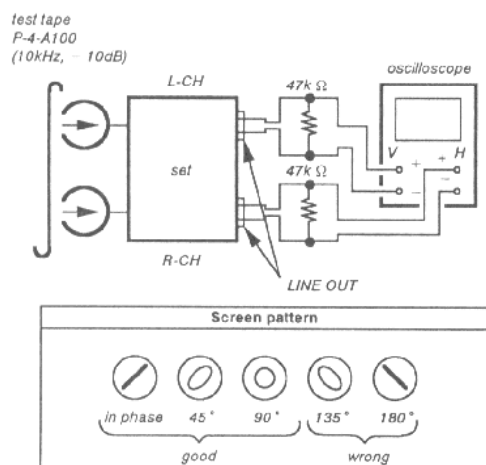

4. Change the reverse playback mode and repeat the steps 1 to 3.
5. After the adjustment, lock the adjustment screws with suitable locking compound.


**Adjustment Location :** — record/playback head —

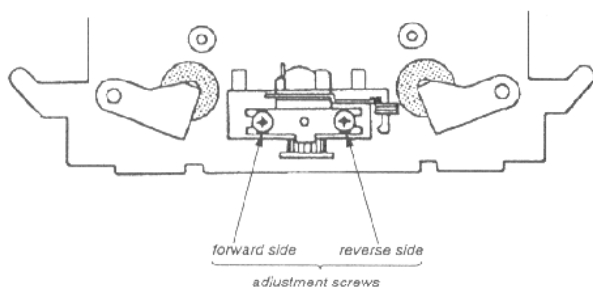

### Tape Speed Adjustment

#### Procedure :

— Forward Playback Mode —

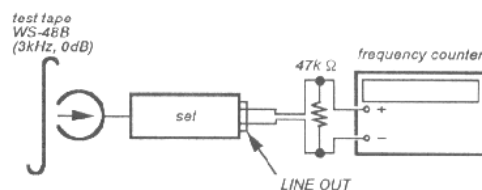

(High speed adjustment)

1. Set to test mode. (Refer to page 7)
2. Set to FWD playback mode.
3. Keep on pressing the HIGH SPEED DUBBING switch.
4. Adjust RV72 so that the frequency counter reading becomes  $6,000 \pm 20\text{Hz}$ .
5. Release test mode after adjustment is completed.

(Normal speed adjustment)

1. Set to FWD playback mode.
2. Adjust RV71 so that the frequency counter reading becomes  $3,000 \pm 10\text{Hz}$ .

(Pitch control adjustment) (TC-WR565, TC-WR665S)

1. Turn ON the PITCH CONTROL switch.
2. Set RV801 to mechanical center.
3. Set to FWD playback mode.
4. Adjust RV802 so that the frequency counter reading becomes  $3,000 \pm 10\text{Hz}$ .

Frequency difference between the beginning and the end of the tape should be within 3%.


Frequency difference between the deck A and deck B the beginning of the tape should be within 1.5%.

**Adjustment Location :** AUDIO board, CONNECTOR board.  
(See page 10)

### Playback Level Adjustment

#### Procedure :

— Forward Playback Mode —

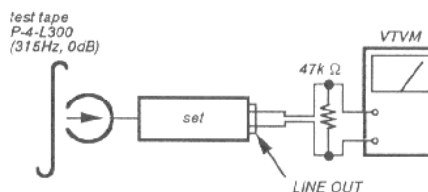

Adjust RV11(L-CH) and RV21(R-CH) so the VTVM reading becomes the adjustment limits below.

#### Adjustment Value :

LINE OUT level : —  $7.7 \pm 0.5\text{dB}$  (0.301 to 0.338V)

Level difference between channels : within 0.5dB

Confirm the LINE OUT level does not change in playback mode while changing the mode from playback to stop several times.


**Adjustment Location :** AUDIO board. (See page 10)

### Bias Consumption Current Adjustment

This adjustment should be performed when replacing the head assy or the bias oscillating transformer (T81, T91).

#### Procedure :

( ) : R-CH

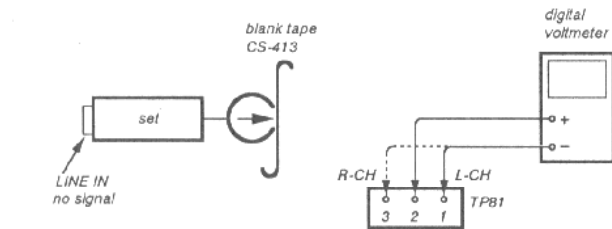

1. Connect the digital voltmeter to test point TP81.
2. Set RV81 (RV91) to mechanical center.
3. Set to FWD record mode.
4. Adjust T81 (T91) so that the digital voltmeter reading becomes minimum.

**Adjustment Value :** Maximum 220mV

**Adjustment Location :** AUDIO board. (See page 10)


### Record Bias Adjustment

#### Setting :


REC LEVEL control : standard record position (Refer to page 7.)

#### Procedure :

1. Record Mode

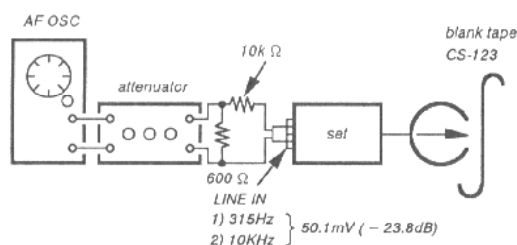

2. Playback Mode

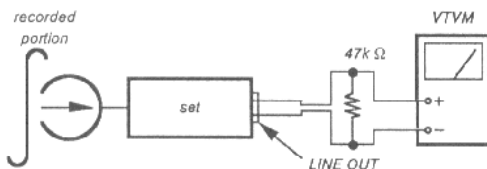

Confirm that the 10kHz playback output is  $0 \pm 0.5\text{dB}$  relative to the 315Hz output. If necessary, adjust RV81 (L-CH), RV91(R-CH) and repeat the steps given above.

**Adjustment Location :** AUDIO board. (See page 10)


### Record Level Adjustment

#### Setting :


REC LEVEL control : standard record position (Refer to page 7.)

#### Procedure :

1. Record Mode

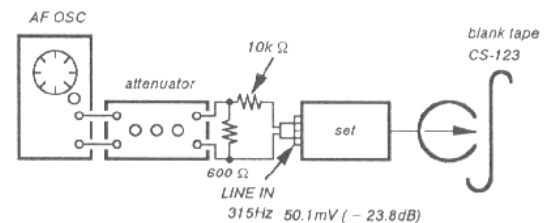

2. Playback Mode

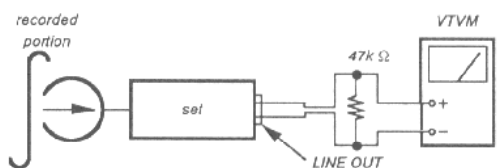

Confirm playback the tape recorded become adjustment level as follows.

If necessary, adjust RV101(L-CH), RV201(R-CH) and repeat the steps 1 and 2.

#### Adjustment Value :


LINE OUT level :  $-23.8 \pm 0.5\text{dB}$  (47.2 to 53mV)

**Adjustment Location :** SYSTEM CONTROL board.


(See page 10)

— Adjustment Parts Location Diagrams —


**[SYSTEM CONTROL BOARD]**

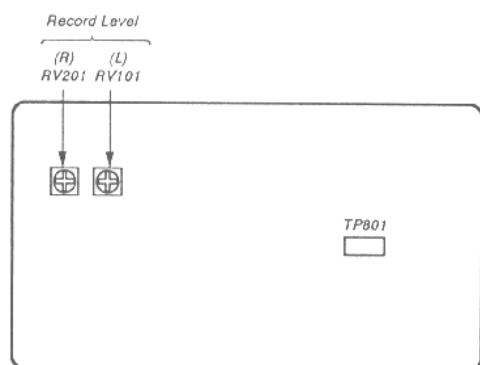


DECK-A :  
**[AUDIO BOARD]**

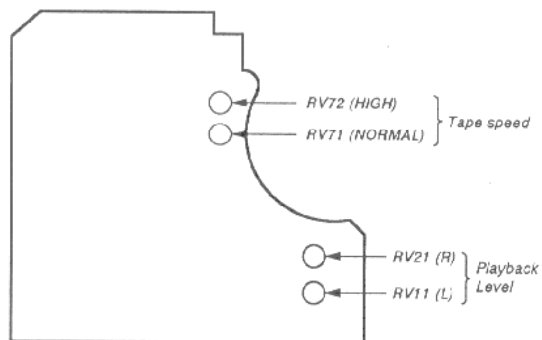

DECK-B :  
**[AUDIO BOARD]**

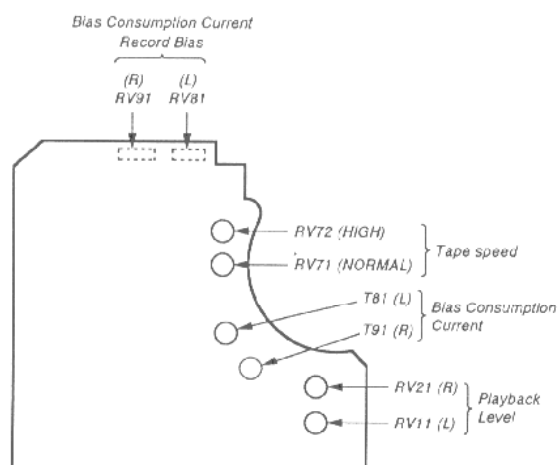

DECK-B :  
**[CONNECTOR BOARD]**

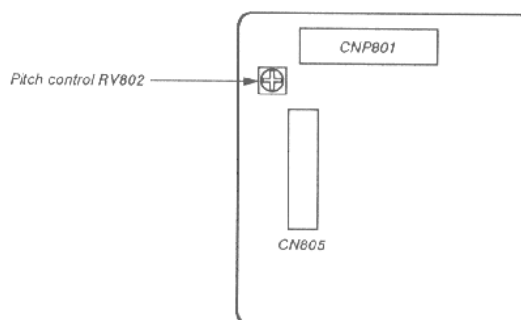

## SECTION 4 EXPLANATION OF IC TERMINALS


### IC801 CXP82316-053Q

Pin No.	Pin name	I/O	Description
1	TEST	I	Test mode terminal. "L" : Test mode, "H" : Normal mode
2	SIRCS	I	Sircs signal in terminal.
3	POWER IN	I	Power OFF. OFF = 0V
4	SPEED H/L	O	Normal/High selector for equalizer.
5	A/B	O	Playback A/B selector. "L" : DECK-A, "H" : DECK-B
6	NR1	O	Dolby NR control.
7	NR0	O	Dolby NR control.
8	MODE0	O	Dolby NR mode control.
9	MODE1	O	Dolby NR mode control.
10	BC/S	O	Dolby NR type selector. "L" : Dolby B, C, "H" : Dolby S
11	LIN MUTE	O	Line mute ON/OFF. "L" : ON
12	IC MUTE	O	Meter mute. "H" : ON
13	REALY REC/PB	O	Recording/Playback selector at DECK-B. "L" : Recording
14	REC CAL0	O	Recording calibration. "H" : ON
15	REC CAL1	O	Recording calibration. "H" : ON
16	EQ CAL0	O	EQ calibration terminal.
17	EQ CAL1	O	EQ calibration terminal.
18	BIAS	O	Bias ON/OFF at DECK-B. "H" : ON
19	POWER OUT	O	Power ON/OFF.
20	METAL (B)	I	Metal tape selector terminal. "H" : Metal
21	70 $\mu$ (B)	I	CrO <sub>2</sub> tape selector terminal. "L" : CrO <sub>2</sub>
22	A/D CTRL0	O	A/D converter analog switch control.
23	A/D CTRL1	O	A/D converter analog switch control.
24	A/D IN0	I	A/D converter analog input.
25	A/D IN1	I	A/D converter analog input.
26	S. REEL (A)	I	S-Side reel rotation detection at DECK-A.
27	S. REEL (B)	I	S-Side reel rotation detection at DECK-B.
28	AMS IN	I	AMS signal input terminal.
29	AMS/BS	O	AMS/BS selector. "L" : BS ON
30	RESET	I	Reset terminal. Reset : 0V
31	EXTAL	O	System clock output terminal.
32	XTAL	I	System clock input terminal.
33	Vss	—	Power supply (GND)
34	BIAS CAL0	O	EQ Bias calibration terminal.
35	BAIS CAL1	O	EQ Bias calibration terminal.
36	BAIS CAL2	O	EQ Bias calibration terminal.
37	BAIS CAL3	O	EQ Bias calibration terminal.
38	REC MUTE	O	Recording mute ON/OFF. "L" : ON
39	OSC ON/OFF	O	OSC ON/OFF control. "H" : OFF
40	OSC H/L	O	OSC H/L control terminal.

Pin No.	Pin name	I/O	Description
41	CAP. MOTOR (B)	O	Capstan motor output at DECK-B.
42	CAP. MOTOR (A)	O	Capstan motor output at DECK-A.
43	CAP. MOT (L/H)	O	Capstan motor speed selector. "L" : Normal
44	PITCH. C. ON/OFF	O	Pitch control ON/OFF.
45	P16	O	VFD Segment.
46	P15	O	VFD Segment.
47	P14	O	VFD Segment.
48	P13	O	VFD Segment.
49	P12	O	VFD Segment.
50	P11	O	VFD Segment.
51	P10	O	VFD Segment.
52	P9	O	VFD Segment.
53	P8	O	VFD Segment.
54	P7	O	VFD Segment.
55	P6	O	VFD Segment.
56	P5	O	VFD Segment.
57	P4	O	VFD Segment.
58	P3	O	VFD Segment.
59	P2	O	VFD Segment.
60	P1	O	VFD Segment.
61	T0	O	VFD Grid.
62	T1	O	VFD Grid.
63	T2	O	VFD Grid.
64	T3	O	VFD Grid.
65	T4	O	VFD Grid.
66	T5	O	VFD Grid.
67	T6	O	VFD Grid.
68	T7	O	VFD Grid.
69	T8	O	VFD Grid.
70	T9	O	VFD Grid.
71	VFDP	—	VFD Power.
72	VDD	—	Power supply (+5V)
73	—	—	+5V
74	REEL (A) +	O	Reel motor (+) output at DECK-A. "H" : FF.
75	REEL (A) —	O	Reel motor ( — ) output at DECK-A. "H" : REW.
76	REEL (B) +	O	Reel motor (+) output at DECK-B. "H" : FF.
77	REEL (B) —	O	Reel motor ( — ) output at DECK-B. "H" : REW.
78	STOP SW (A)	I	Mechanism stop switch input for DECK-A.
79	STOP SW (B)	I	Mechanism stop switch input for DECK-B.
80	HALF (A)	I	Half pawl input for DECK-A. "L" : Available


## SECTION 5 DIAGRAMS

### 5-1. BLOCK DIAGRAM

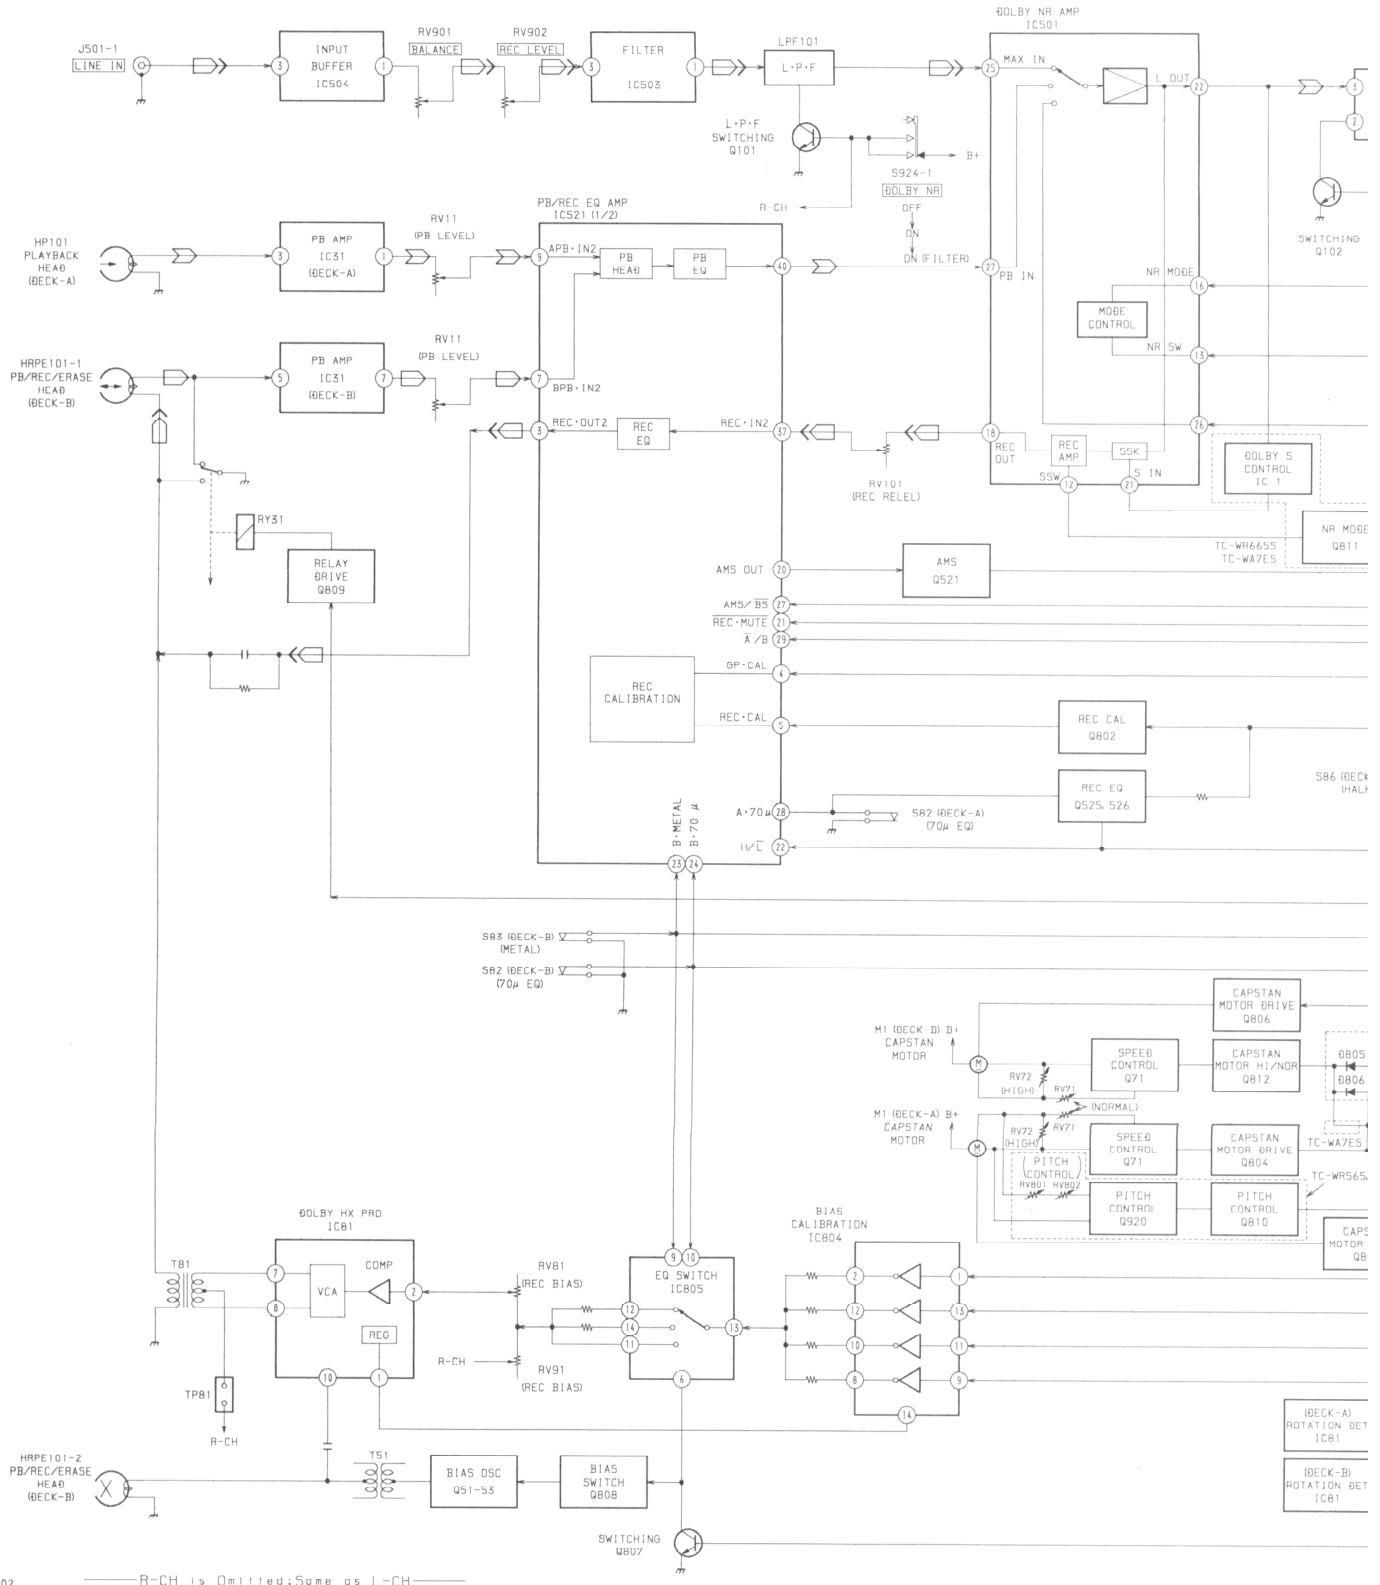

02

— R-CH is Omitted; Same as L-CH —

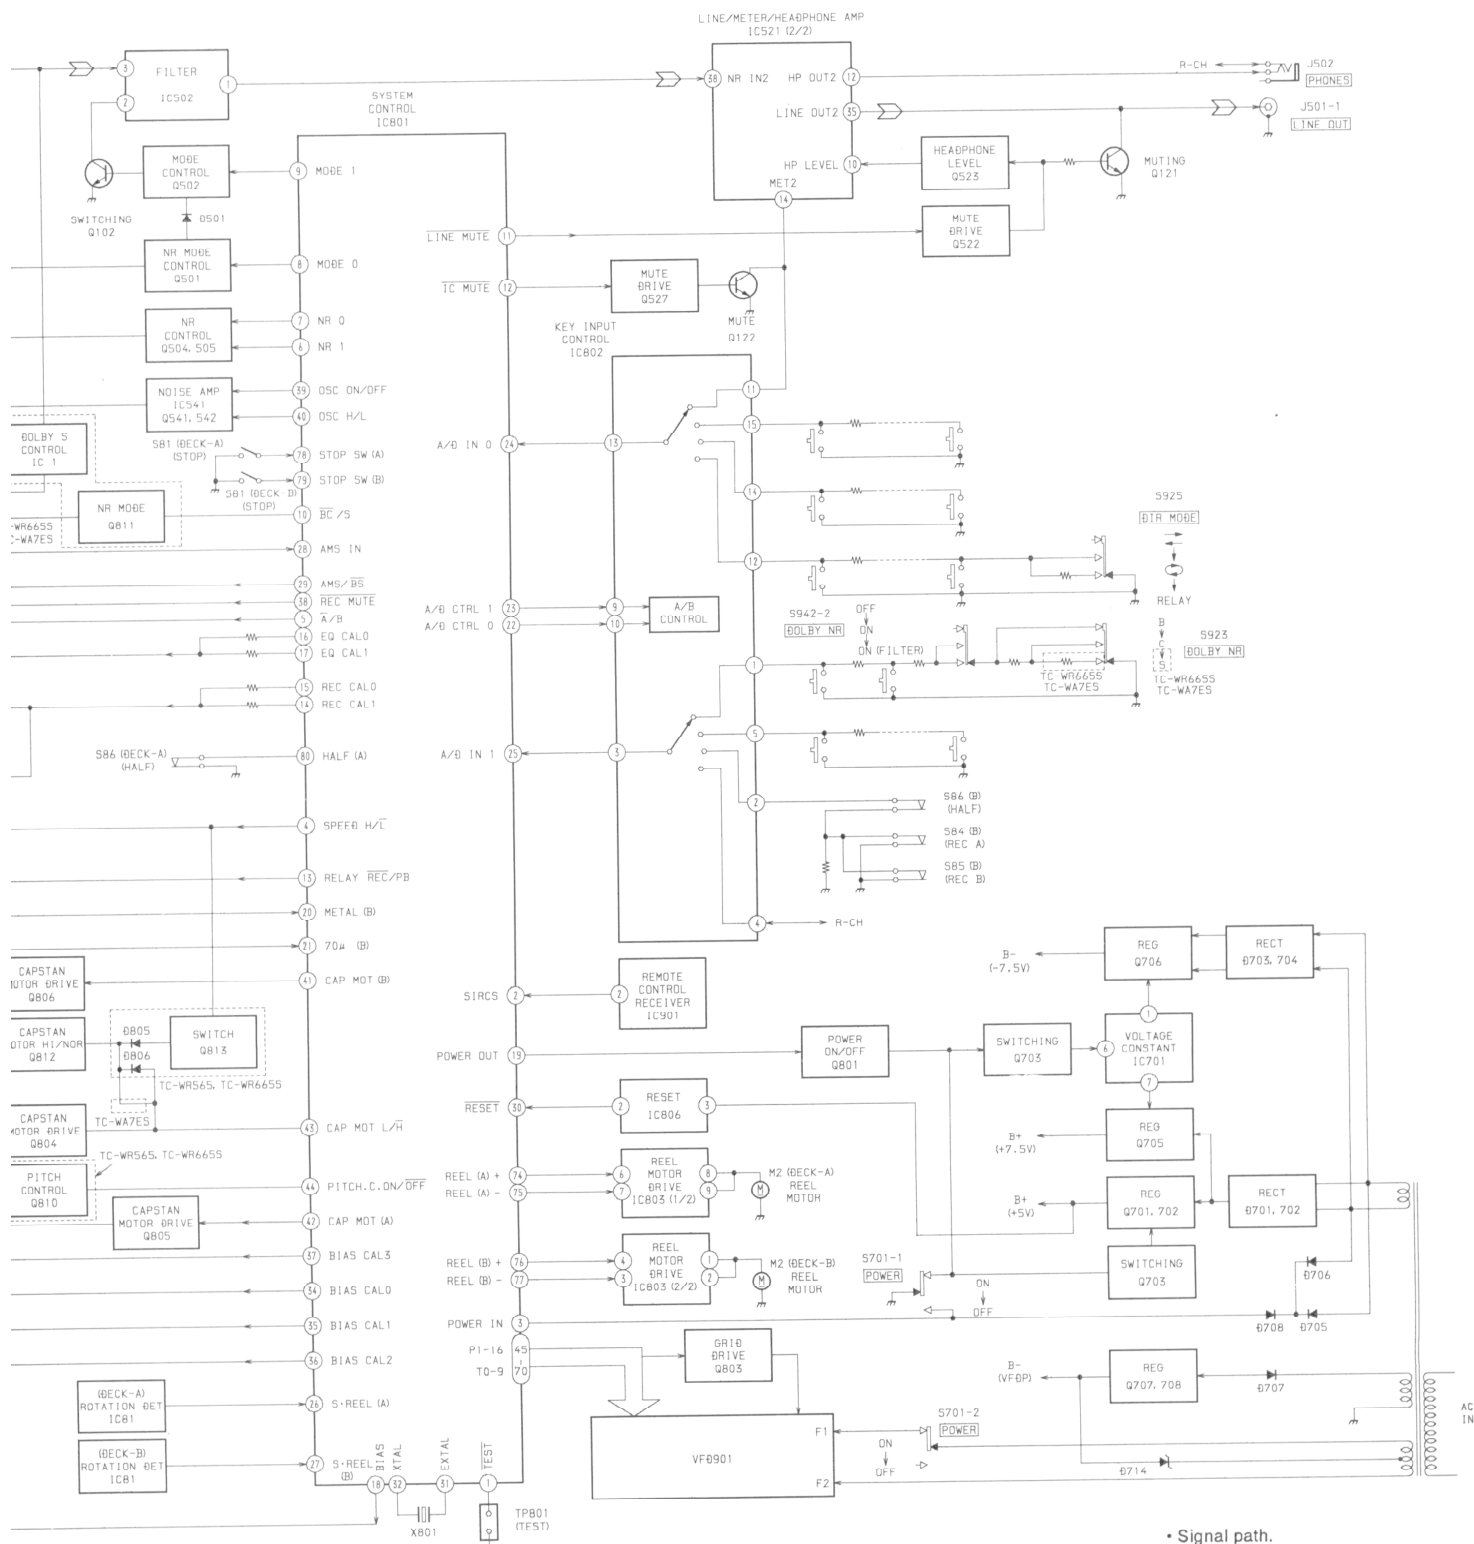

• Signal path.

- : PB (DECK A)
- : PB (DECK B)
- : REC (DECK B)

## SECTION 2 DISASSEMBLY

**Note :** Follow the disassembly procedure in the numerical order given.

### CASE

Unscrew the four case attachment screws  $M3 \times 8$  and remove the case.

### 2-1. FRONT PANEL

FRONT PANEL ① - ③

VOLTAGE SELECTOR ① - ②

② VOLTAGE SELECTOR

*E model only*

① BVTP3  $\times 8$

② Remove the flat cable.

③ Remove the front Panel

① BVTT3  $\times 8$

② Remove the flat cable.

① BVTT3  $\times 8$

### 2-2. MECHANISM DECK

① Press the EJECT button.

① Cassette lid


④ Mechanism deck

③ BVTP2.6  $\times 8$


② BVTP2.6  $\times 8$

● SEMICONDUCTOR LEAD LAYOUTS


CXA1417Q  
CXA1599Q

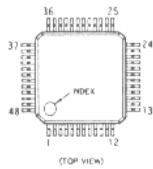


M5218AL

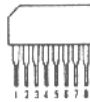


μ PC4570G2

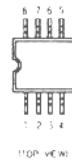


2SA1175-HFE

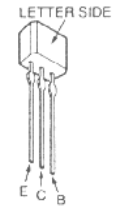


HZS6A1L  
UZL-7L2  
1SS202-1  
11ES2-NTA2B

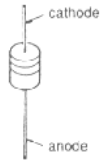


CXA1563S

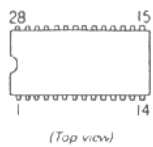


M5218AP

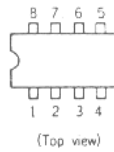


μ PC1297CA

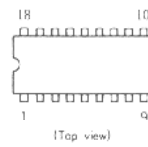


2SB1094-LK  
2SD2012

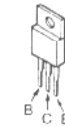

MA110

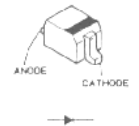


PST600E-T

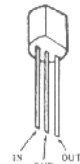


DTA144ES  
DTC143TS  
2SC2603-EF  
2SD2144S




2SB1116A-L  
2SD1387

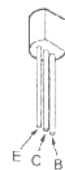


NJL5165K-B (H1)

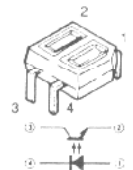


CXP82316-053Q

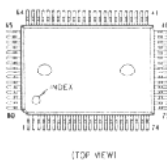


SBX1610-59

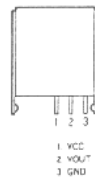


LA6510

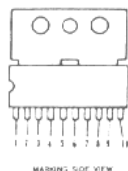


2SA1162-G

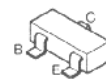

2SD1622-S

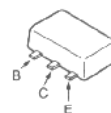

1N4148M

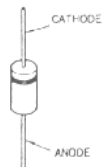


## ● SEMICONDUCTOR LOCATION

Ref. No.	Location	Ref. No.	Location
D121	D-7	Q101	D-4
D221	E-7	Q102	E-3
D501	E-4	Q121	B-5
D502	E-4	Q122	D-7
D503	C-2	Q201	D-2
D504	C-2	Q202	E-2
D505	C-4	Q221	B-5
D506	C-3	Q222	E-7
D521	E-7	Q501	E-4
D531	C-5	Q502	D-4
D541	B-2	Q503	E-4
D542	B-2	Q504	E-4
D701	B-10	Q505	E-4
D702	B-10	Q521	E-7
D703	B-10	Q522	F-4
D704	C-10	Q523	G-4
D705	B-10	Q525	E-10
D706	B-10	Q526	E-10
D707	C-10	Q527	E-7
D708	B-11	Q541	B-2
D709	B-9	Q542	B-2
D710	B-6	Q701	B-8
D711	C-8	Q702	B-8
D712	C-9	Q703	B-9
D713	C-10	Q704	B-6
D714	C-11	Q705	B-7
D715	C-9	Q706	C-8
D801	F-10	Q707	C-10
D802	F-10	Q708	C-11
D803	F-10	Q801	D-11
D804	F-10	Q802	D-10
D805	H-8	Q803	G-10
D806	H-11	Q804	H-10
D807	D-10	Q805	H-10
		Q806	H-9
IC501	D-3	Q807	E-5
IC502	E-3	Q808	E-5
IC503	D-5	Q809	G-4
IC504	B-3	Q810	H-9
IC521	G-3	Q811	D-7
IC541	B-2	Q812	H-8
IC701	C-7	Q813	H-8
IC801	E-10	Q920	F-21
IC802	F-8		
IC803	G-6		
IC804	D-5		
IC805	E-5		
IC806	E-9		
IC901	F-18		


## Note:

- : parts extracted from the component side.
- ▨ : Pattern on the side which is seen.
- Abbreviation  
CND : Canadian  
G : German  
AUS : Australian  
CH : Chinese

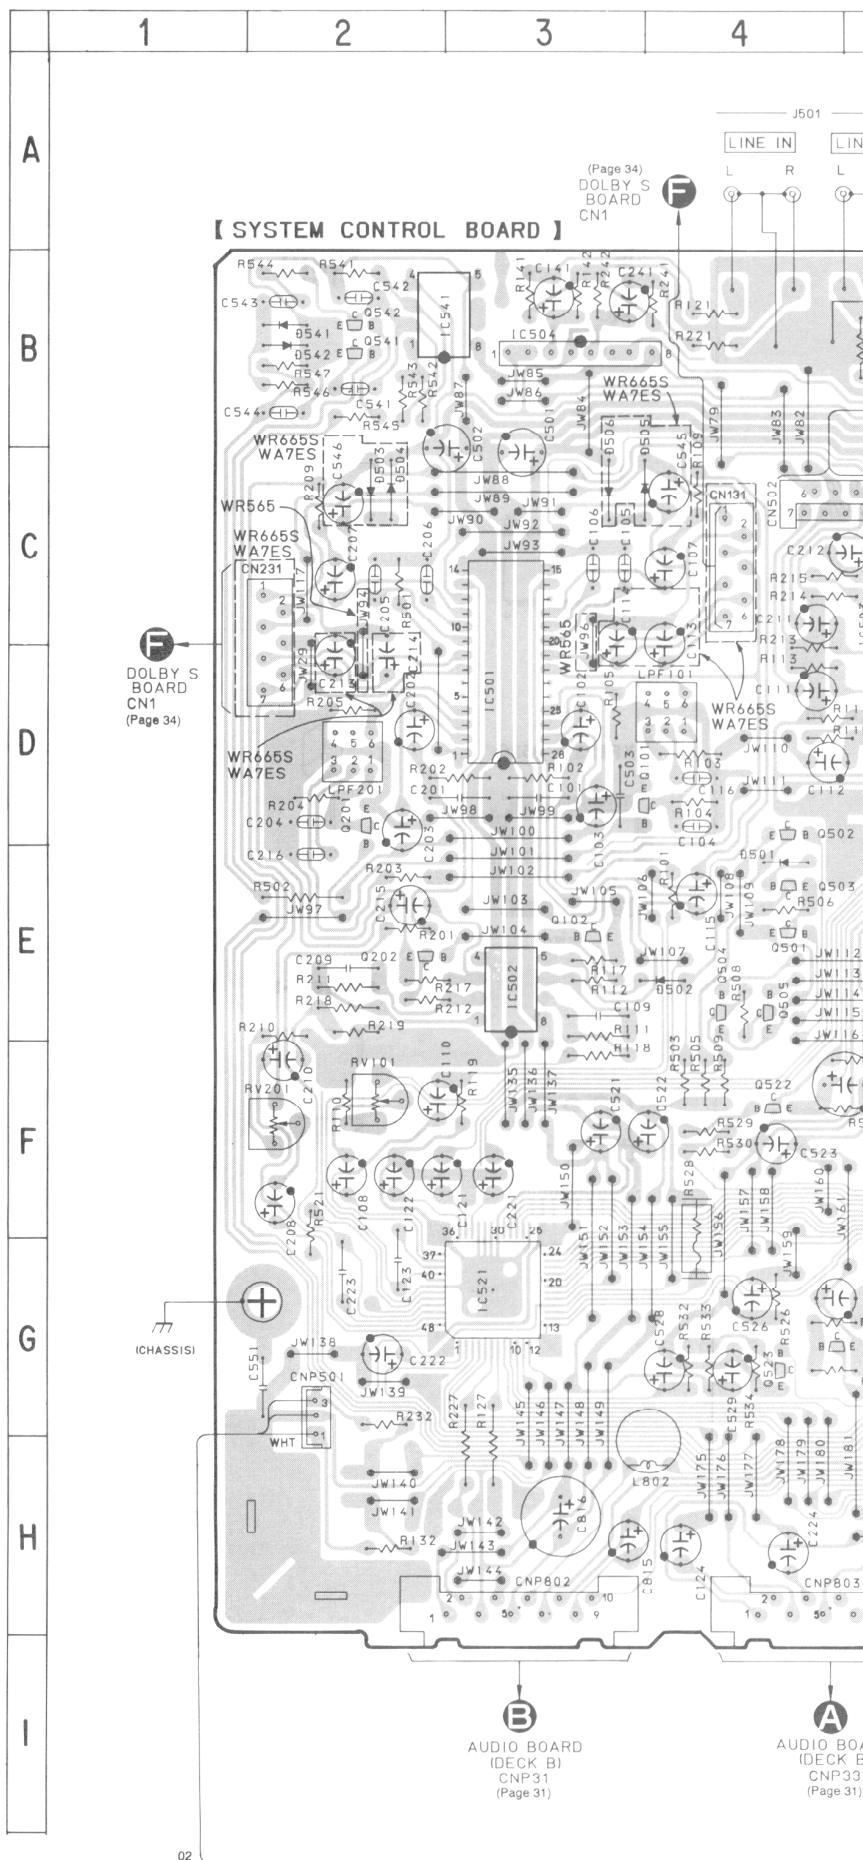


er to page 16 for Semiconductor Lead Layouts.

5	6	7	8	9	10	11	1
---	---	---	---	---	----	----	---

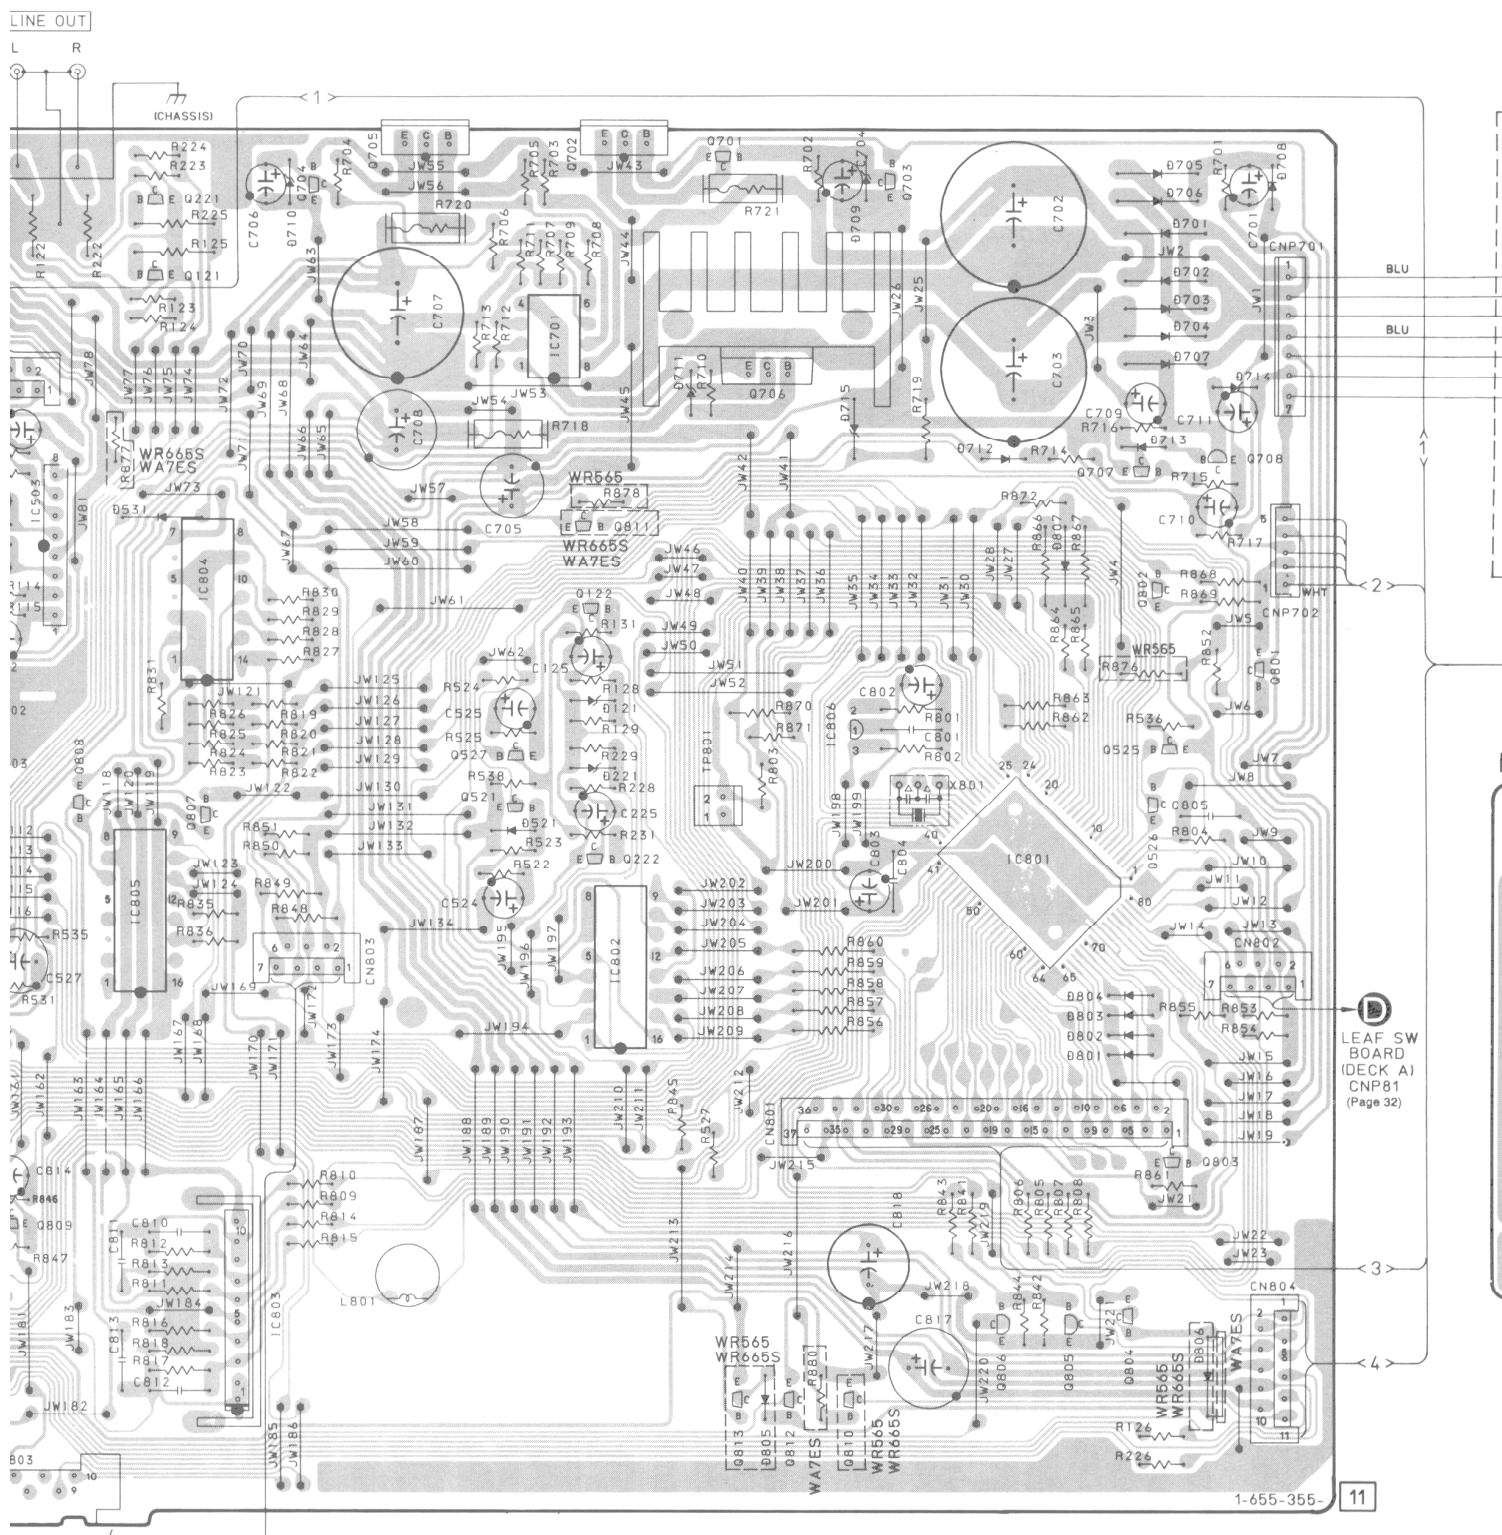


BOARD  
K B)  
233  
a 31)

LEAF SW BOARD  
(DECK B)  
CNP81  
(Page 31)

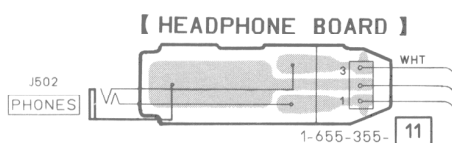


IS, Canadian Model

### 【 TRANSFORMER BOARD 】

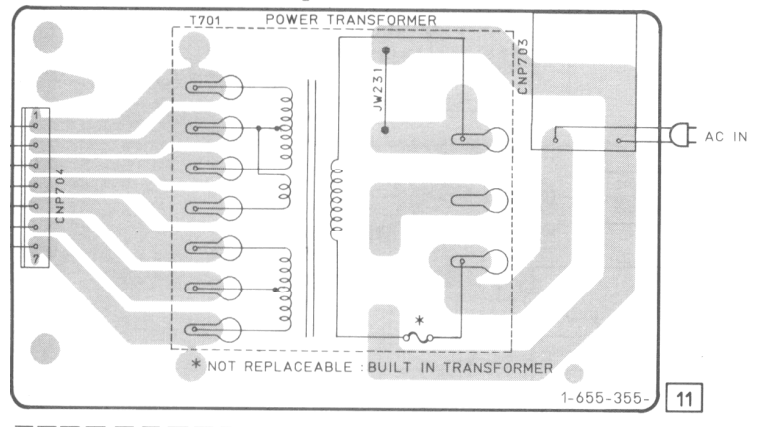


AEP, G, UK, CH, AUS Model

### 【 TRANSFORMER BOARD 】

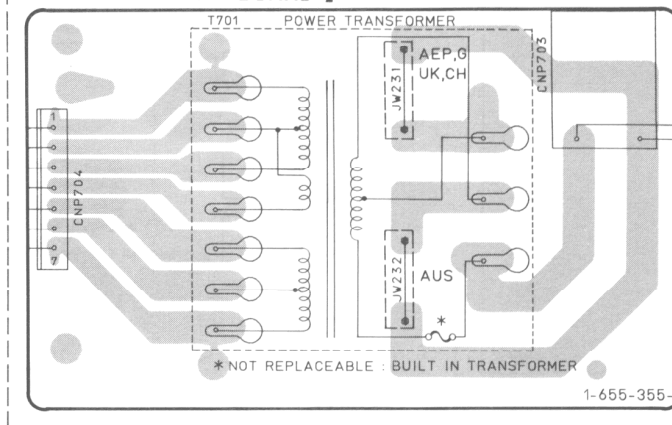




### PANEL BOARD

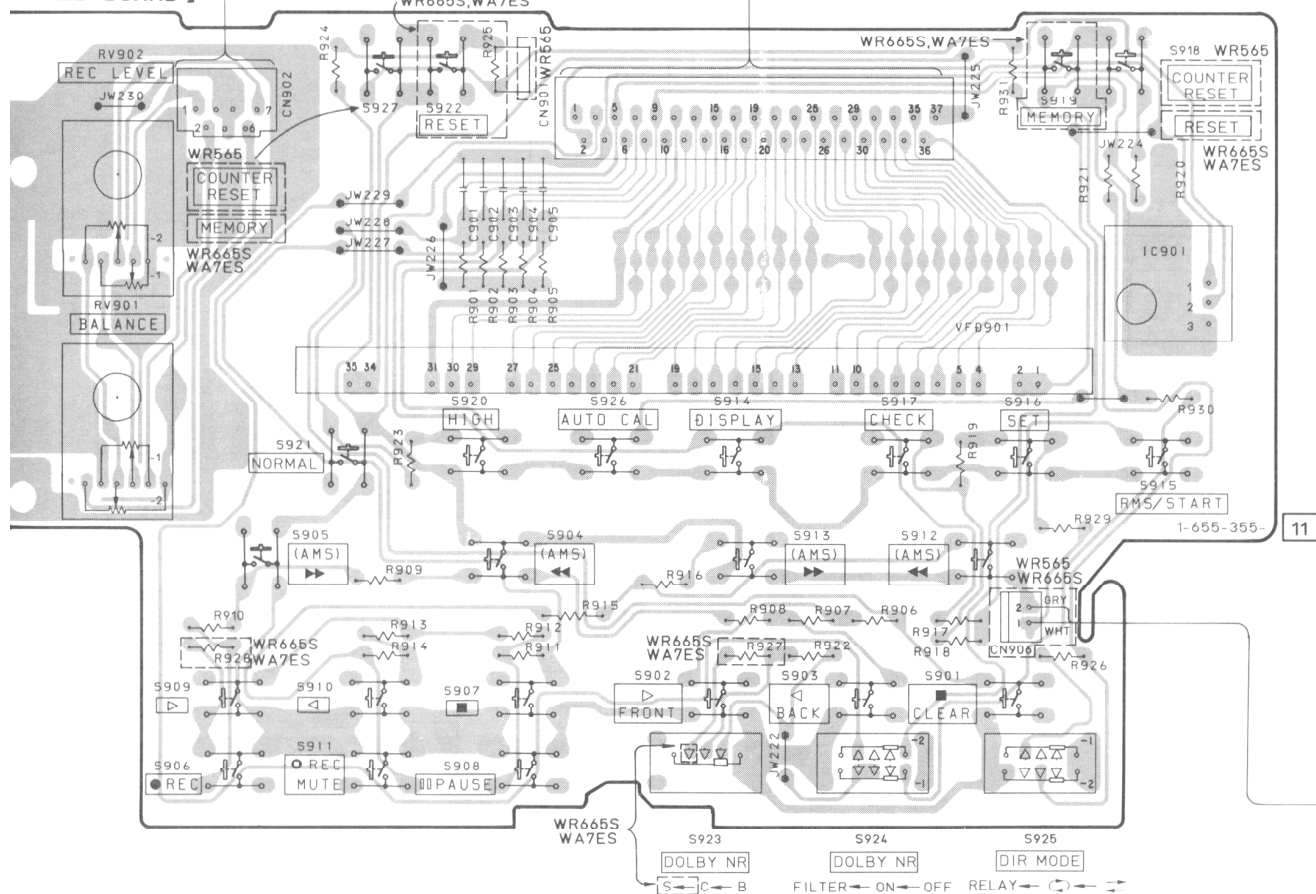

### 【 CONNEC




18	19	20	21	22	23	24
----	----	----	----	----	----	----

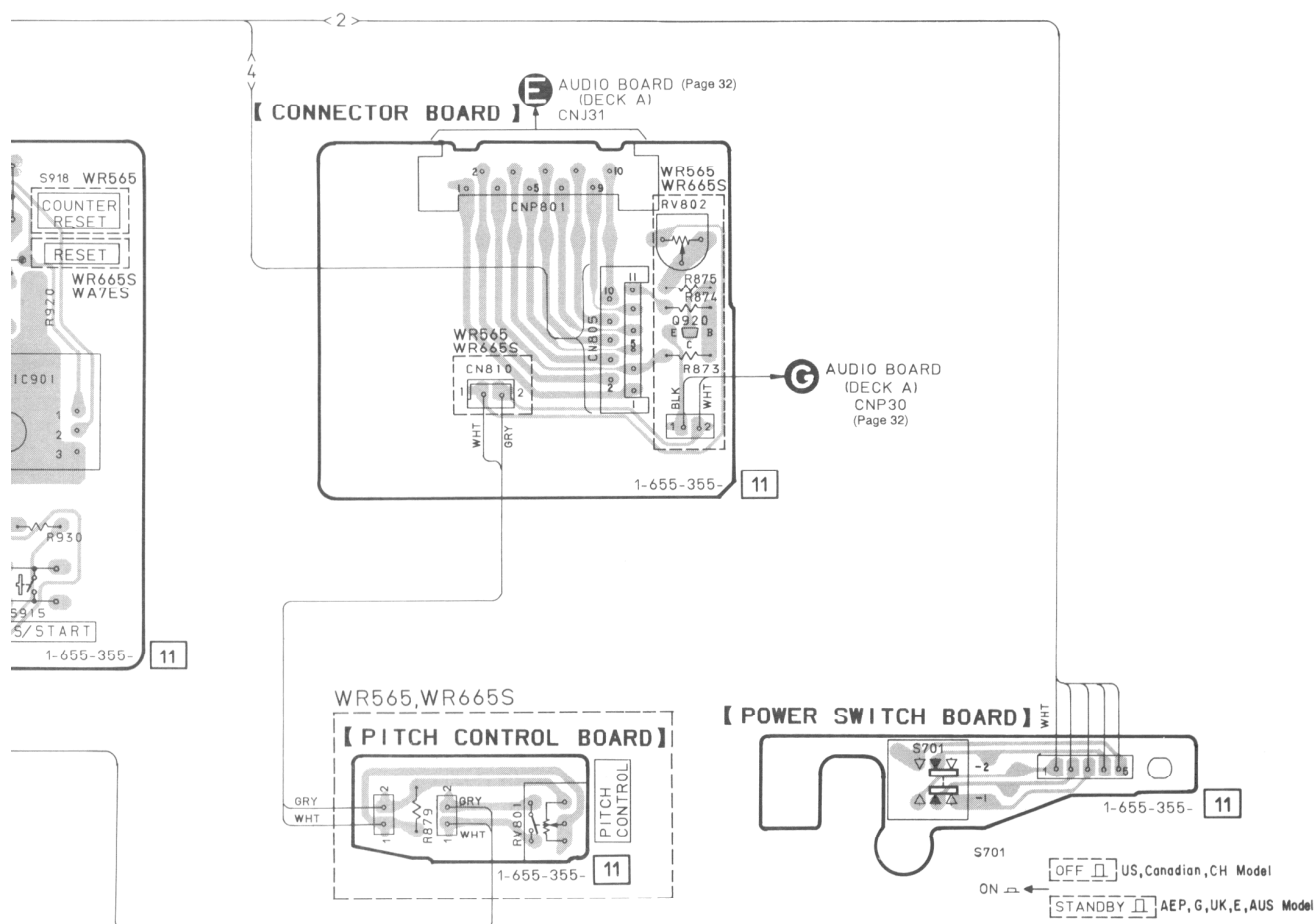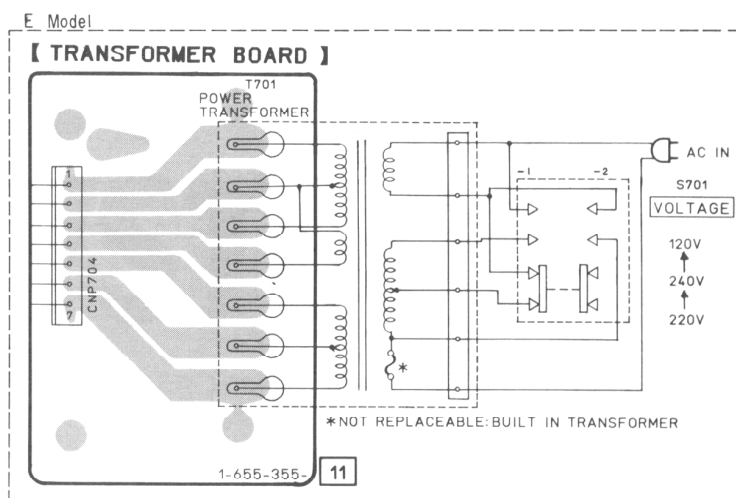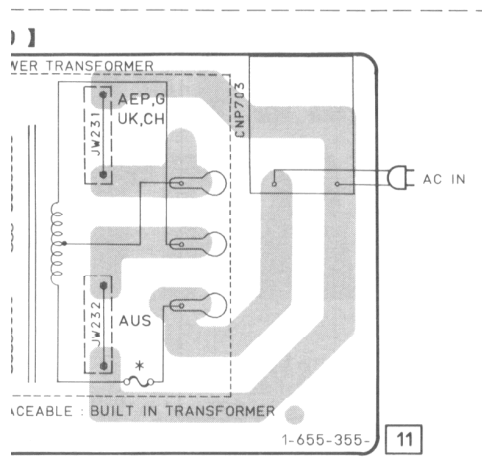


### 5-3. SCHEMATIC DIAGRAM (SYSTEM CONTROL SECTION)

● Refer to page 36 for IC Block Diagrams.

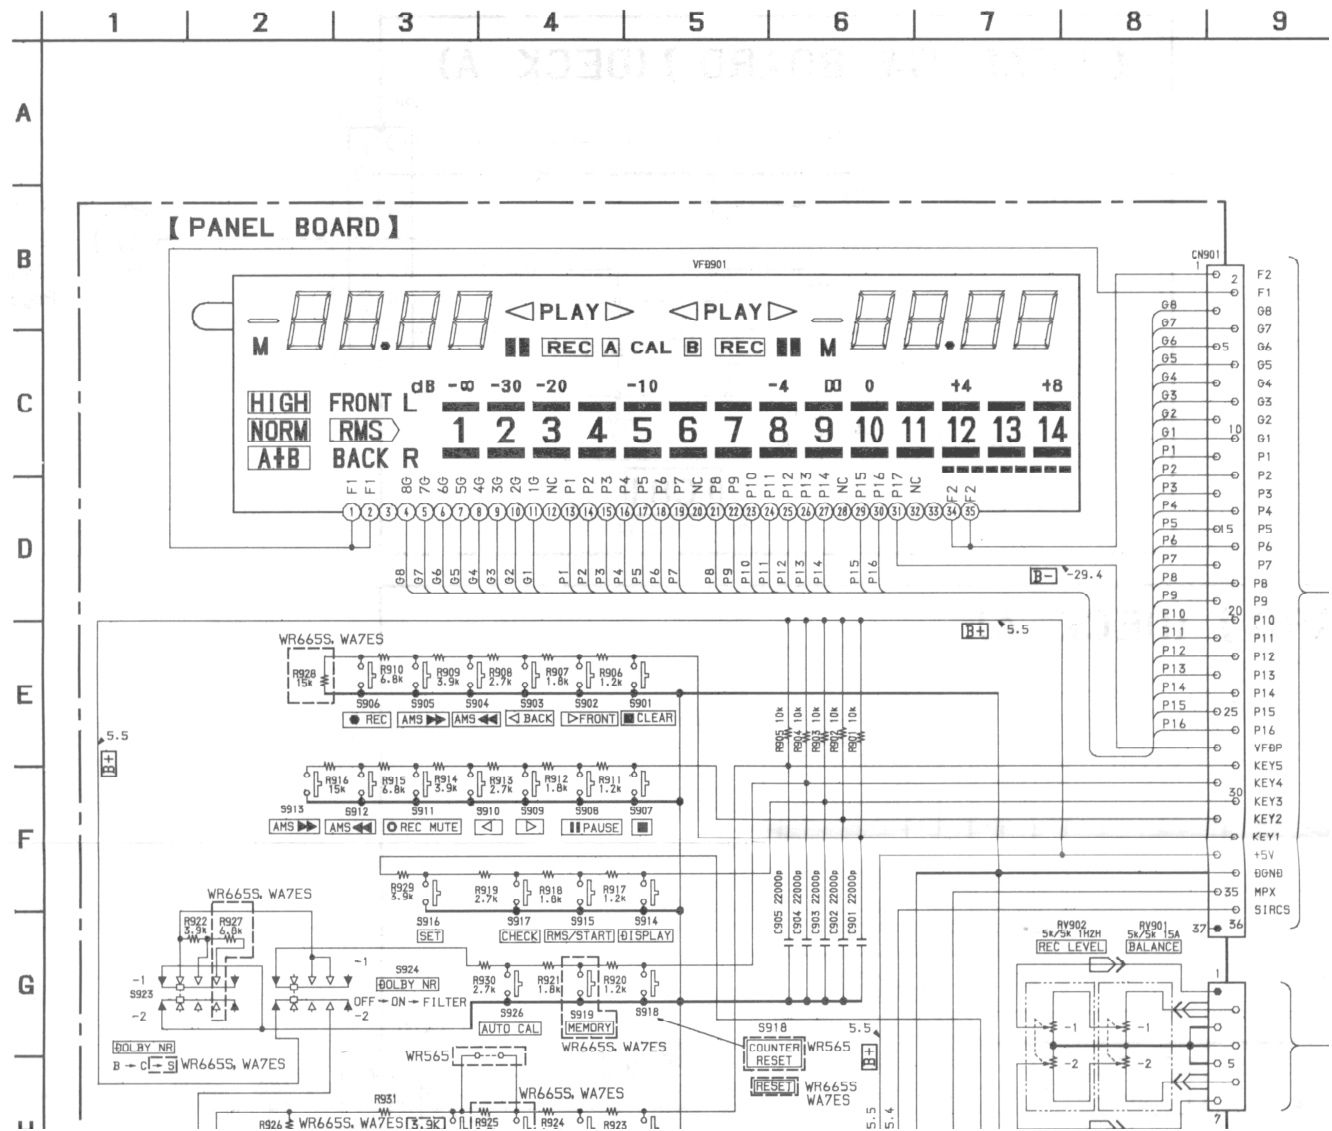

# • WAVEFORMS – SYSTEM CONTROL SECTION –

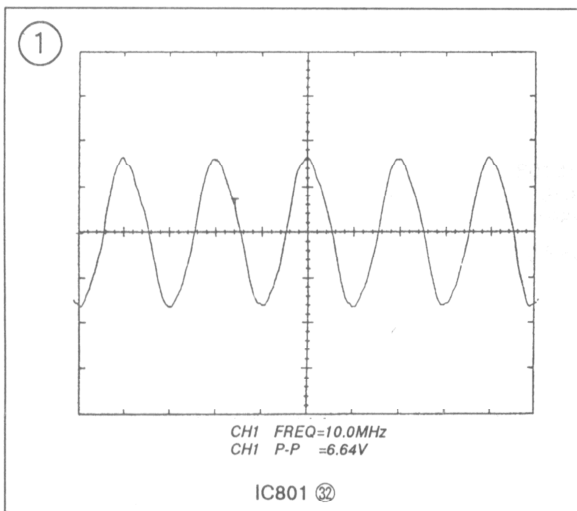

## Note :

- All capacitors are in  $\mu F$  unless otherwise noted. pF:  $\mu F$  50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4}W$  or less unless otherwise specified.
- $\Delta$  : internal component.
- : fusible resistor.

## Note :

The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

## Note :

Les composants identifiés par une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line
- : B- Line
- : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal ( detuned ) conditions.  
no mark : STOP  
( ) : REC
- Voltages are taken with a VOM ( Input impedance 10M  $\Omega$  ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.  
 : PB ( DECK A )  
 : PB ( DECK B )  
 : REC ( DECK B )
- Abbreviation  
CND : Canadian  
G : German  
AUS : Australian  
CH : Chinese

G

H

I

J

K

L

M


N

O


P


Q


R

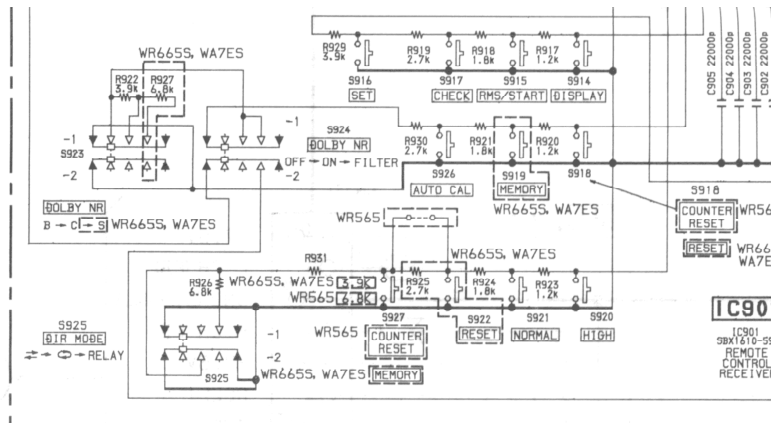



WR565, WR665S

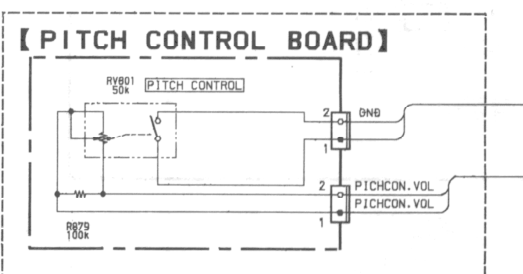


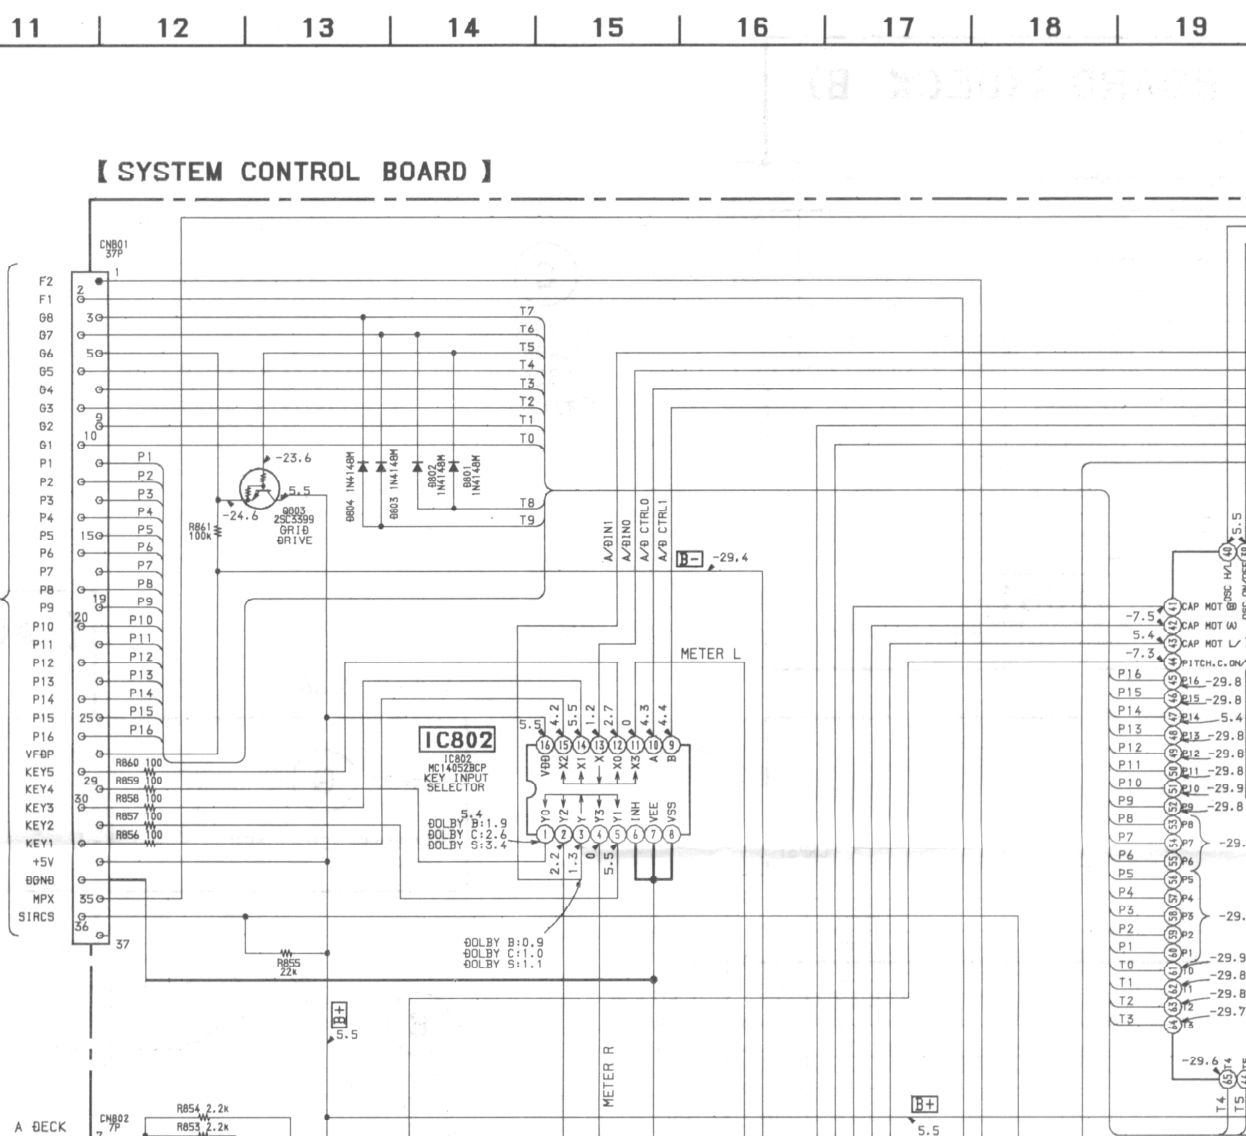

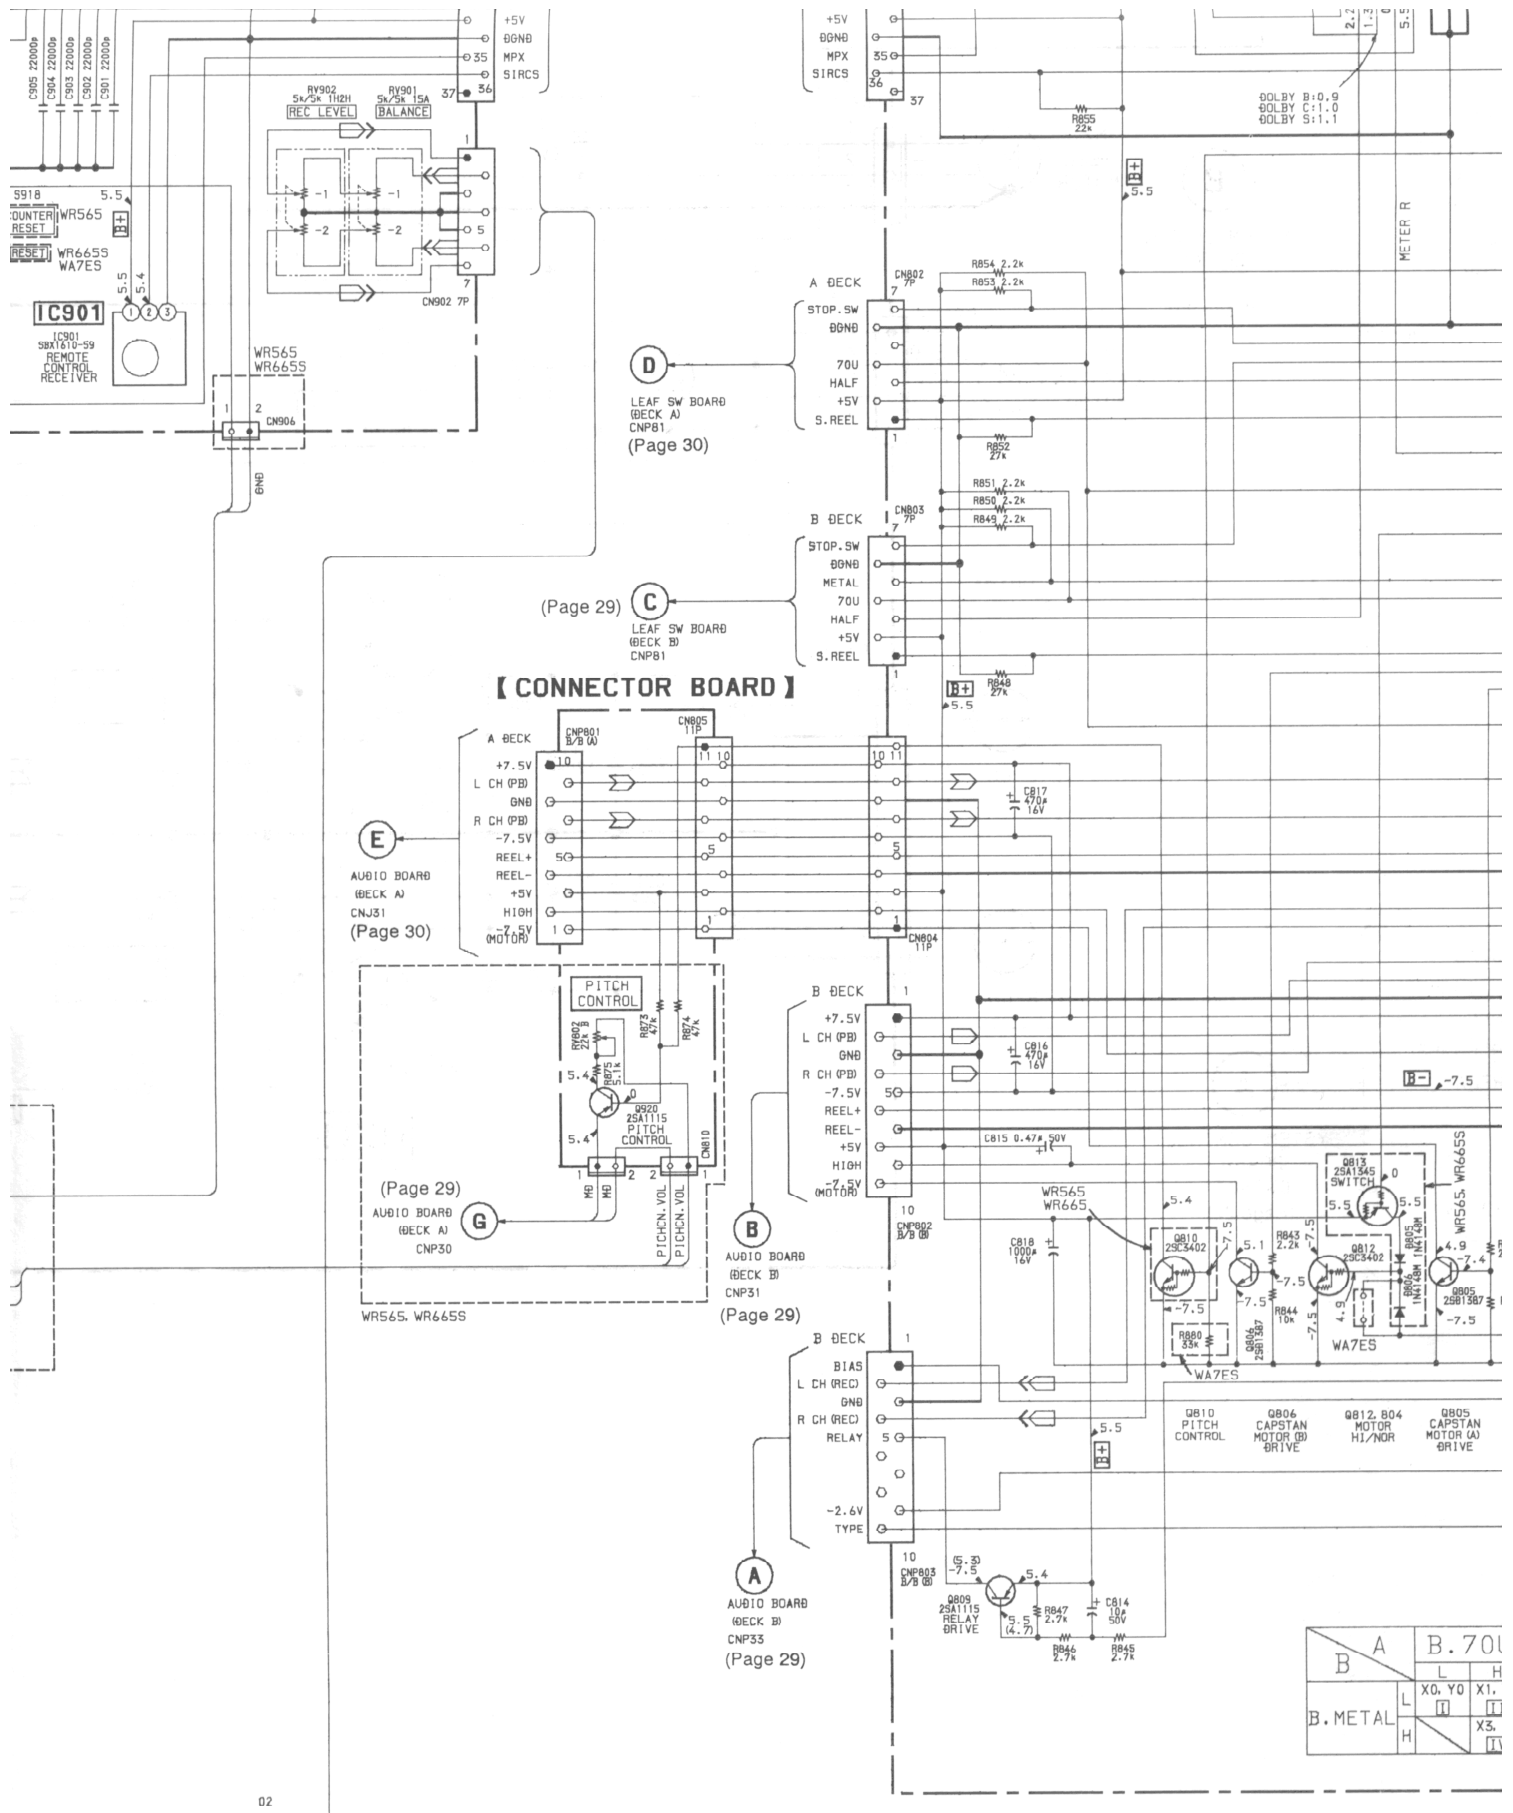


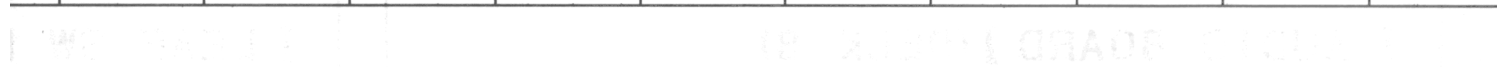

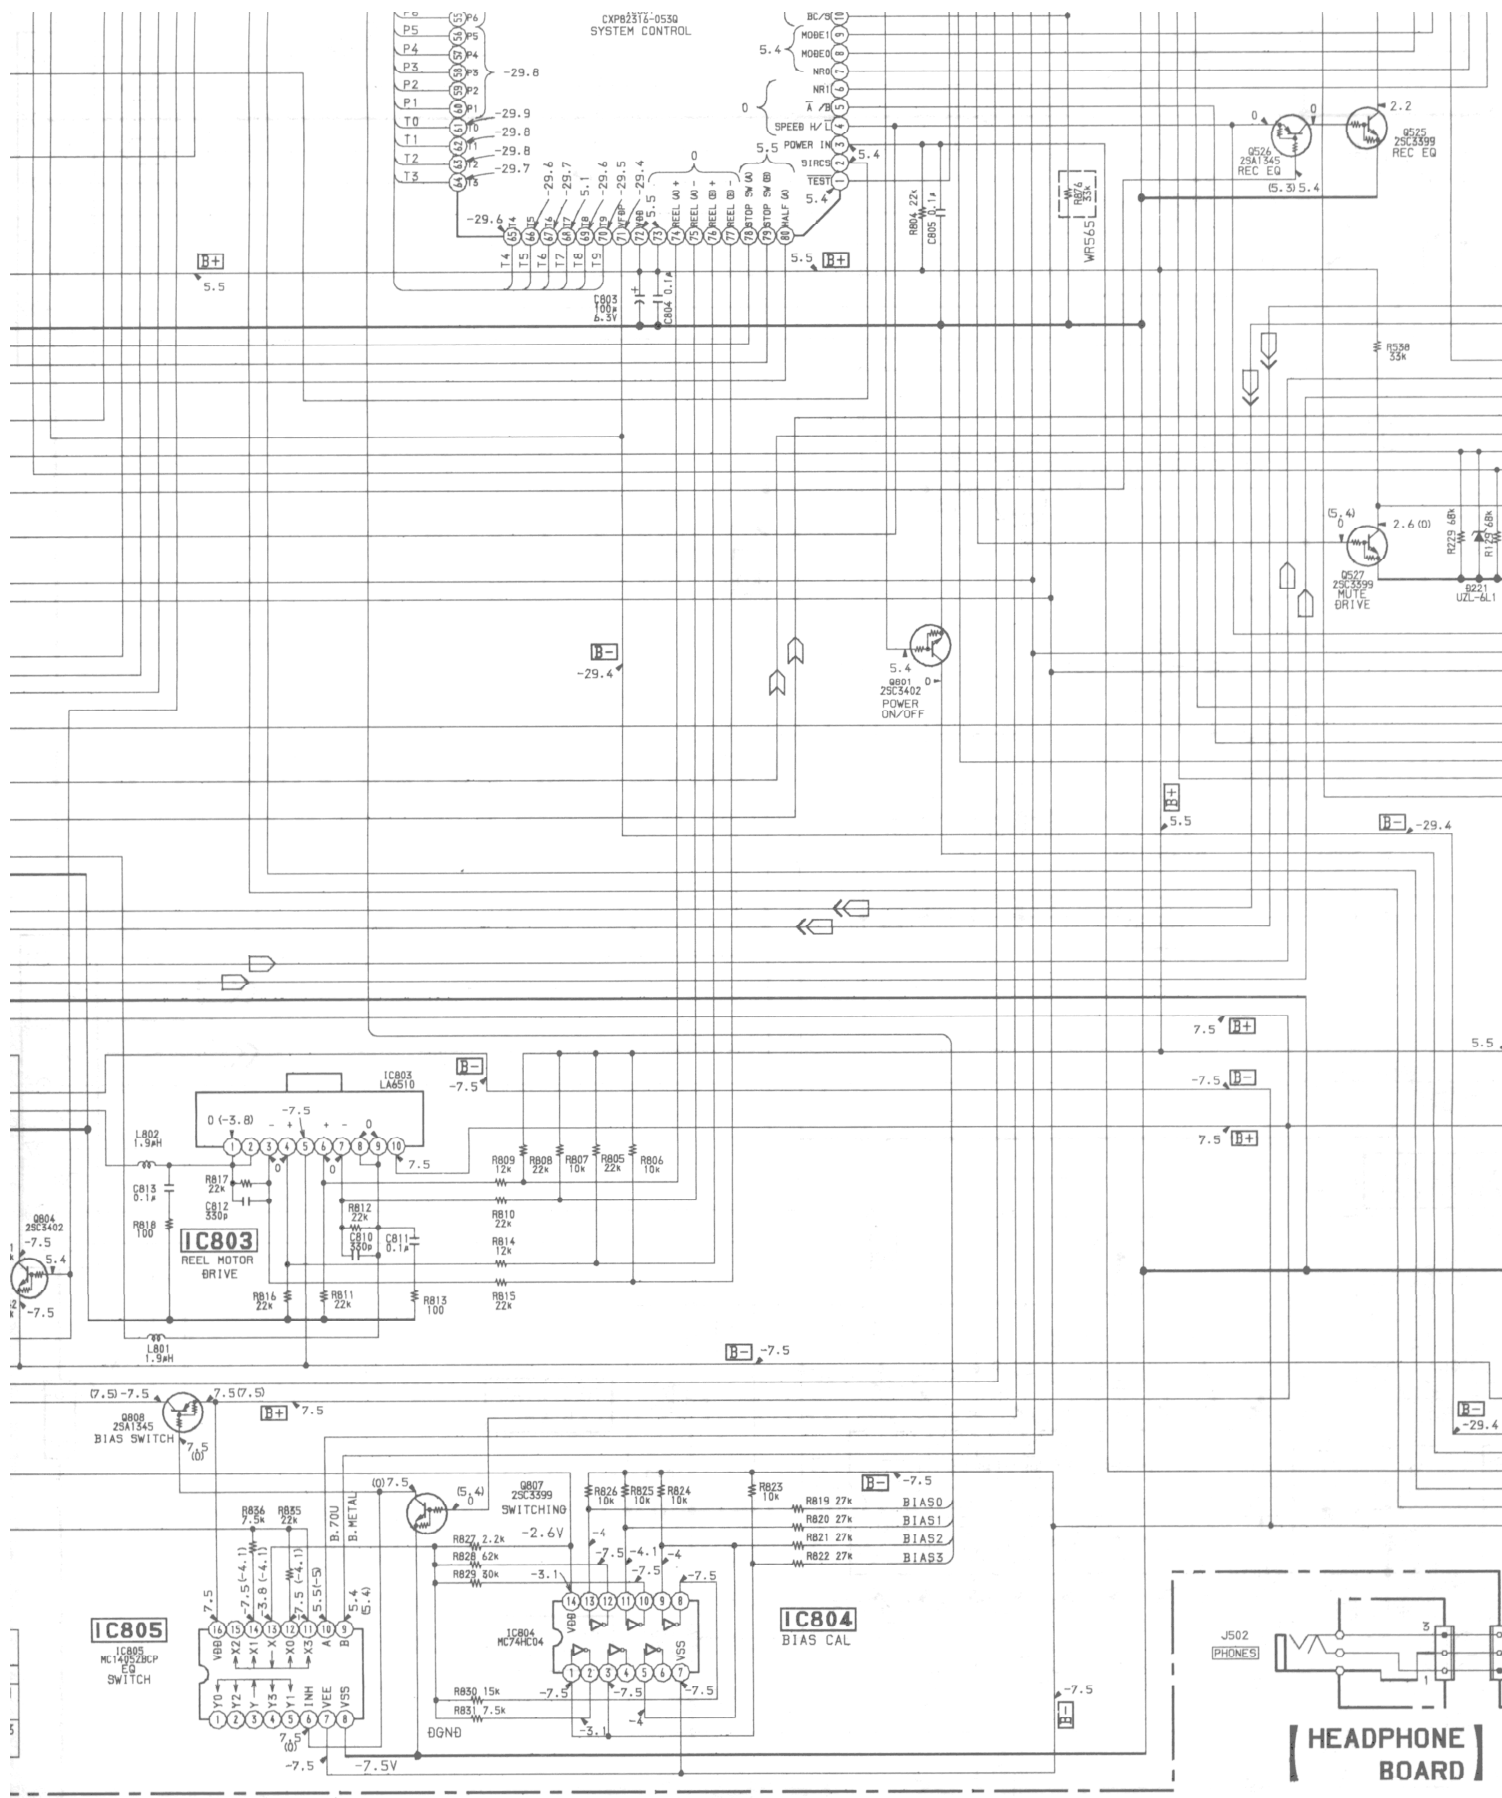


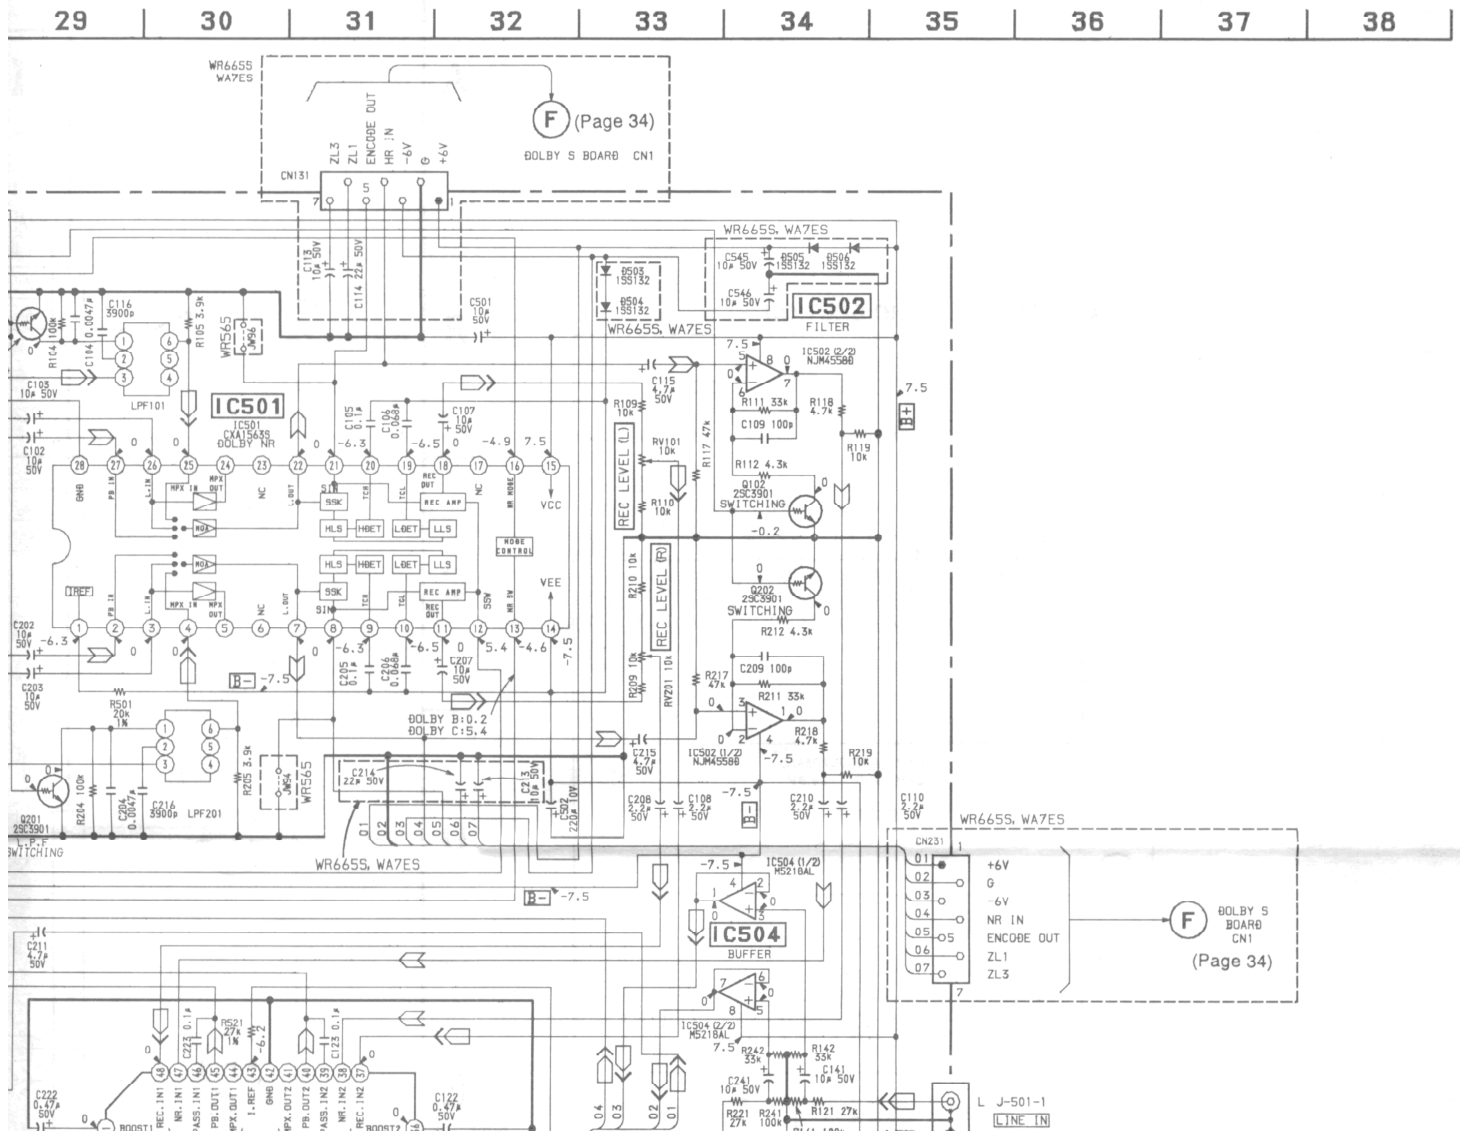




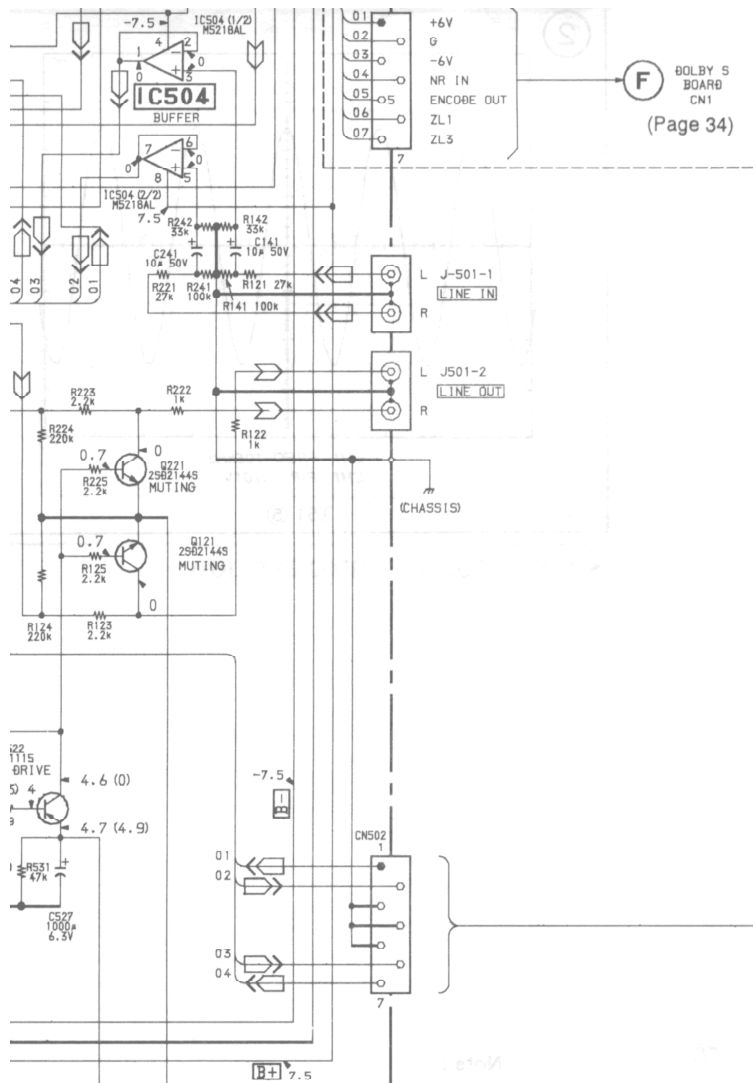


## 【 TRANSFORMER BOARD 】

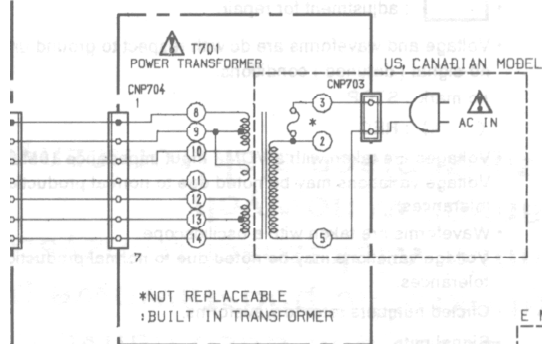



AEP, G, UK, CH, AUS MODEL

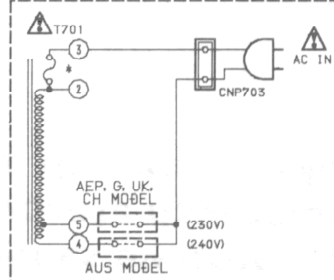


E MODEL

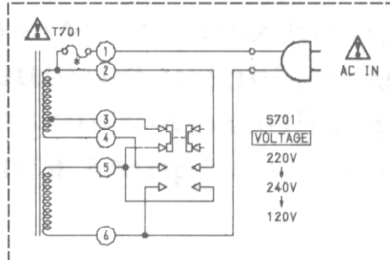


• WAVEFORMS – AUDIO SECTION –

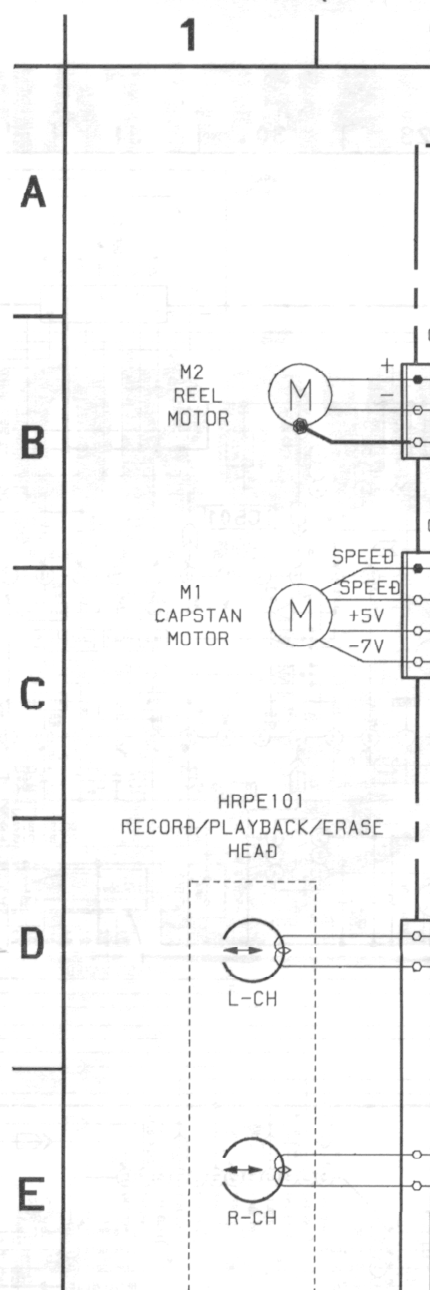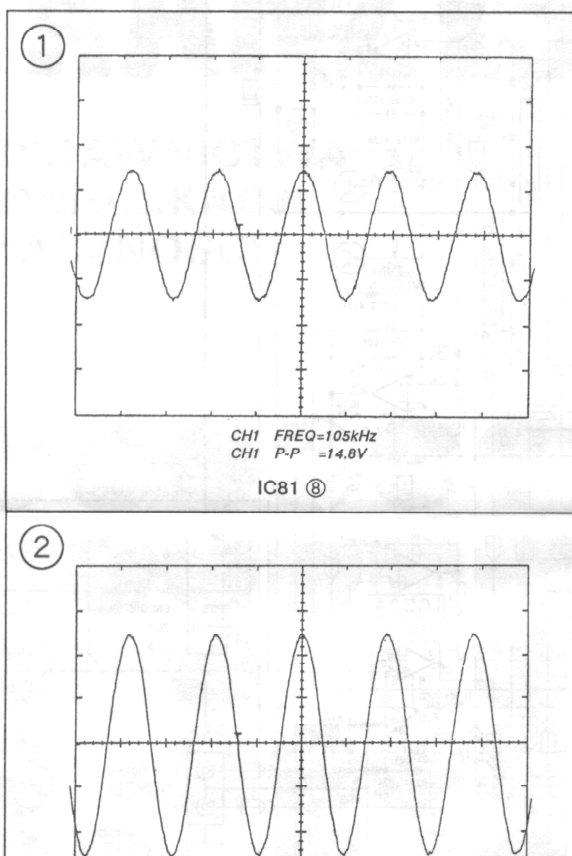

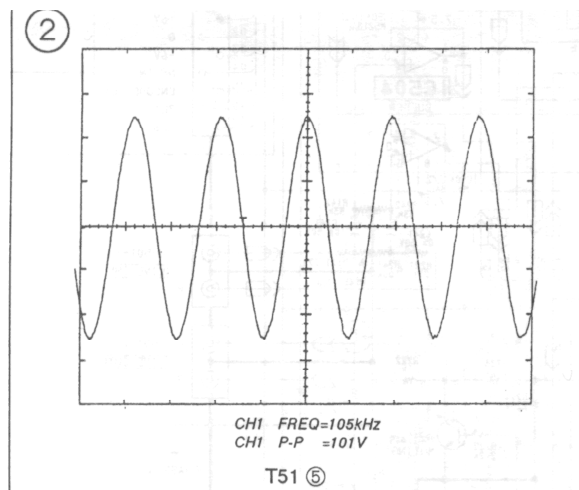

**Note :**

- All capacitors are in  $\mu$  F unless otherwise noted. pF:  $\mu$   $\mu$  F  
50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4}$ W or less unless otherwise specified.
- **B+** : B+ Line
- **B-** : B - Line
- : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal ( detuned ) conditions.  
no mark : STOP  
(    ) : REC
- Voltages are taken with a VOM ( Input impedance 10M  $\Omega$  ).  
Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.  
Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.  
▶ : PB ( DECK A )  
▷ : PB ( DECK B )  
▶▶ : REC ( DECK B )
- Abbreviation  
 CND : Canadian  
 G : German  
 AUS : Australian  
 CH : Chinese

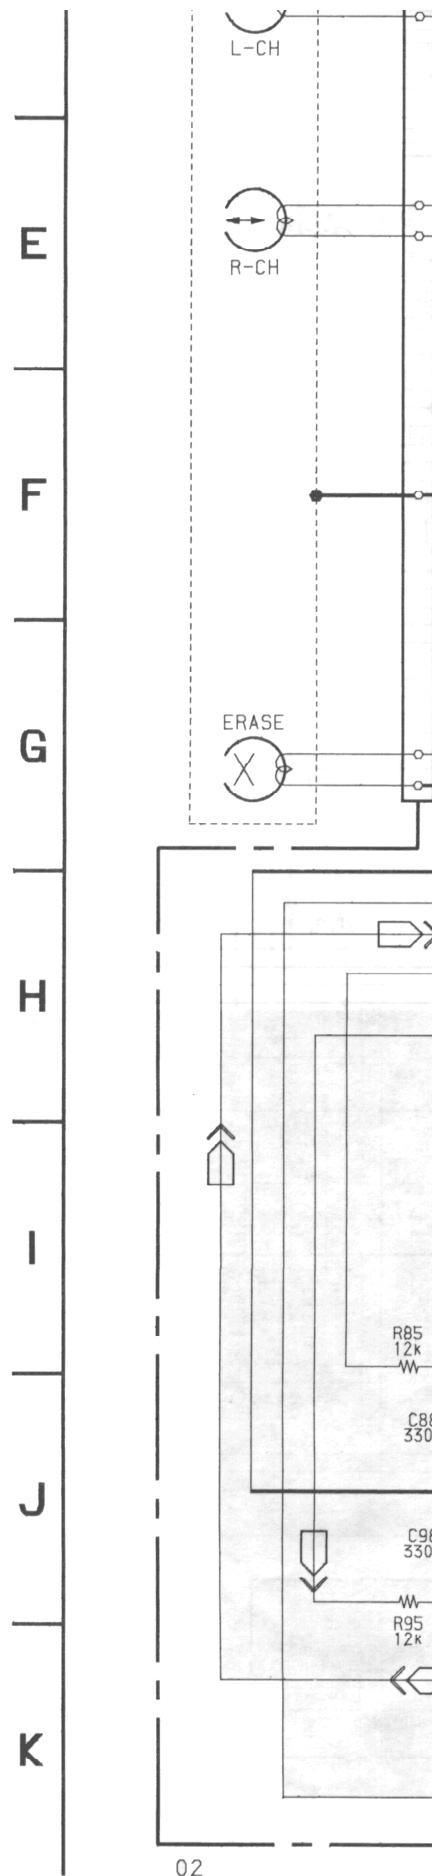

IO SECTION)

2

3

4


5


6


7


# 【 AUDIO BOARD 】(DECK B)

# 【 LEAF SW BO

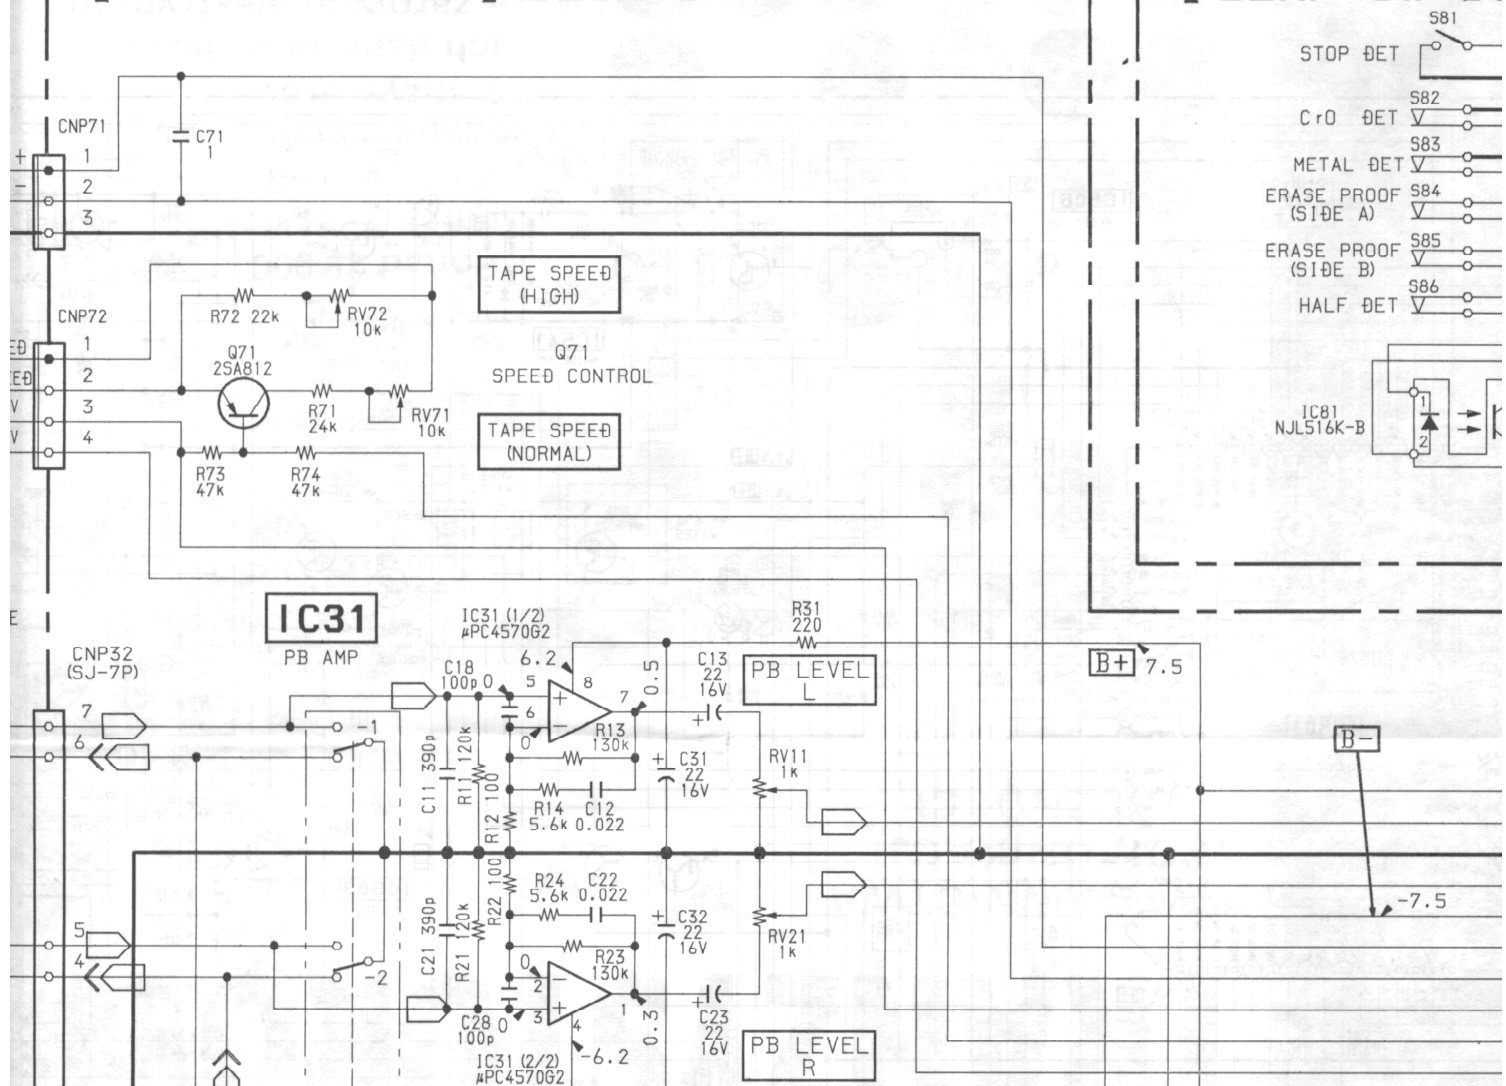


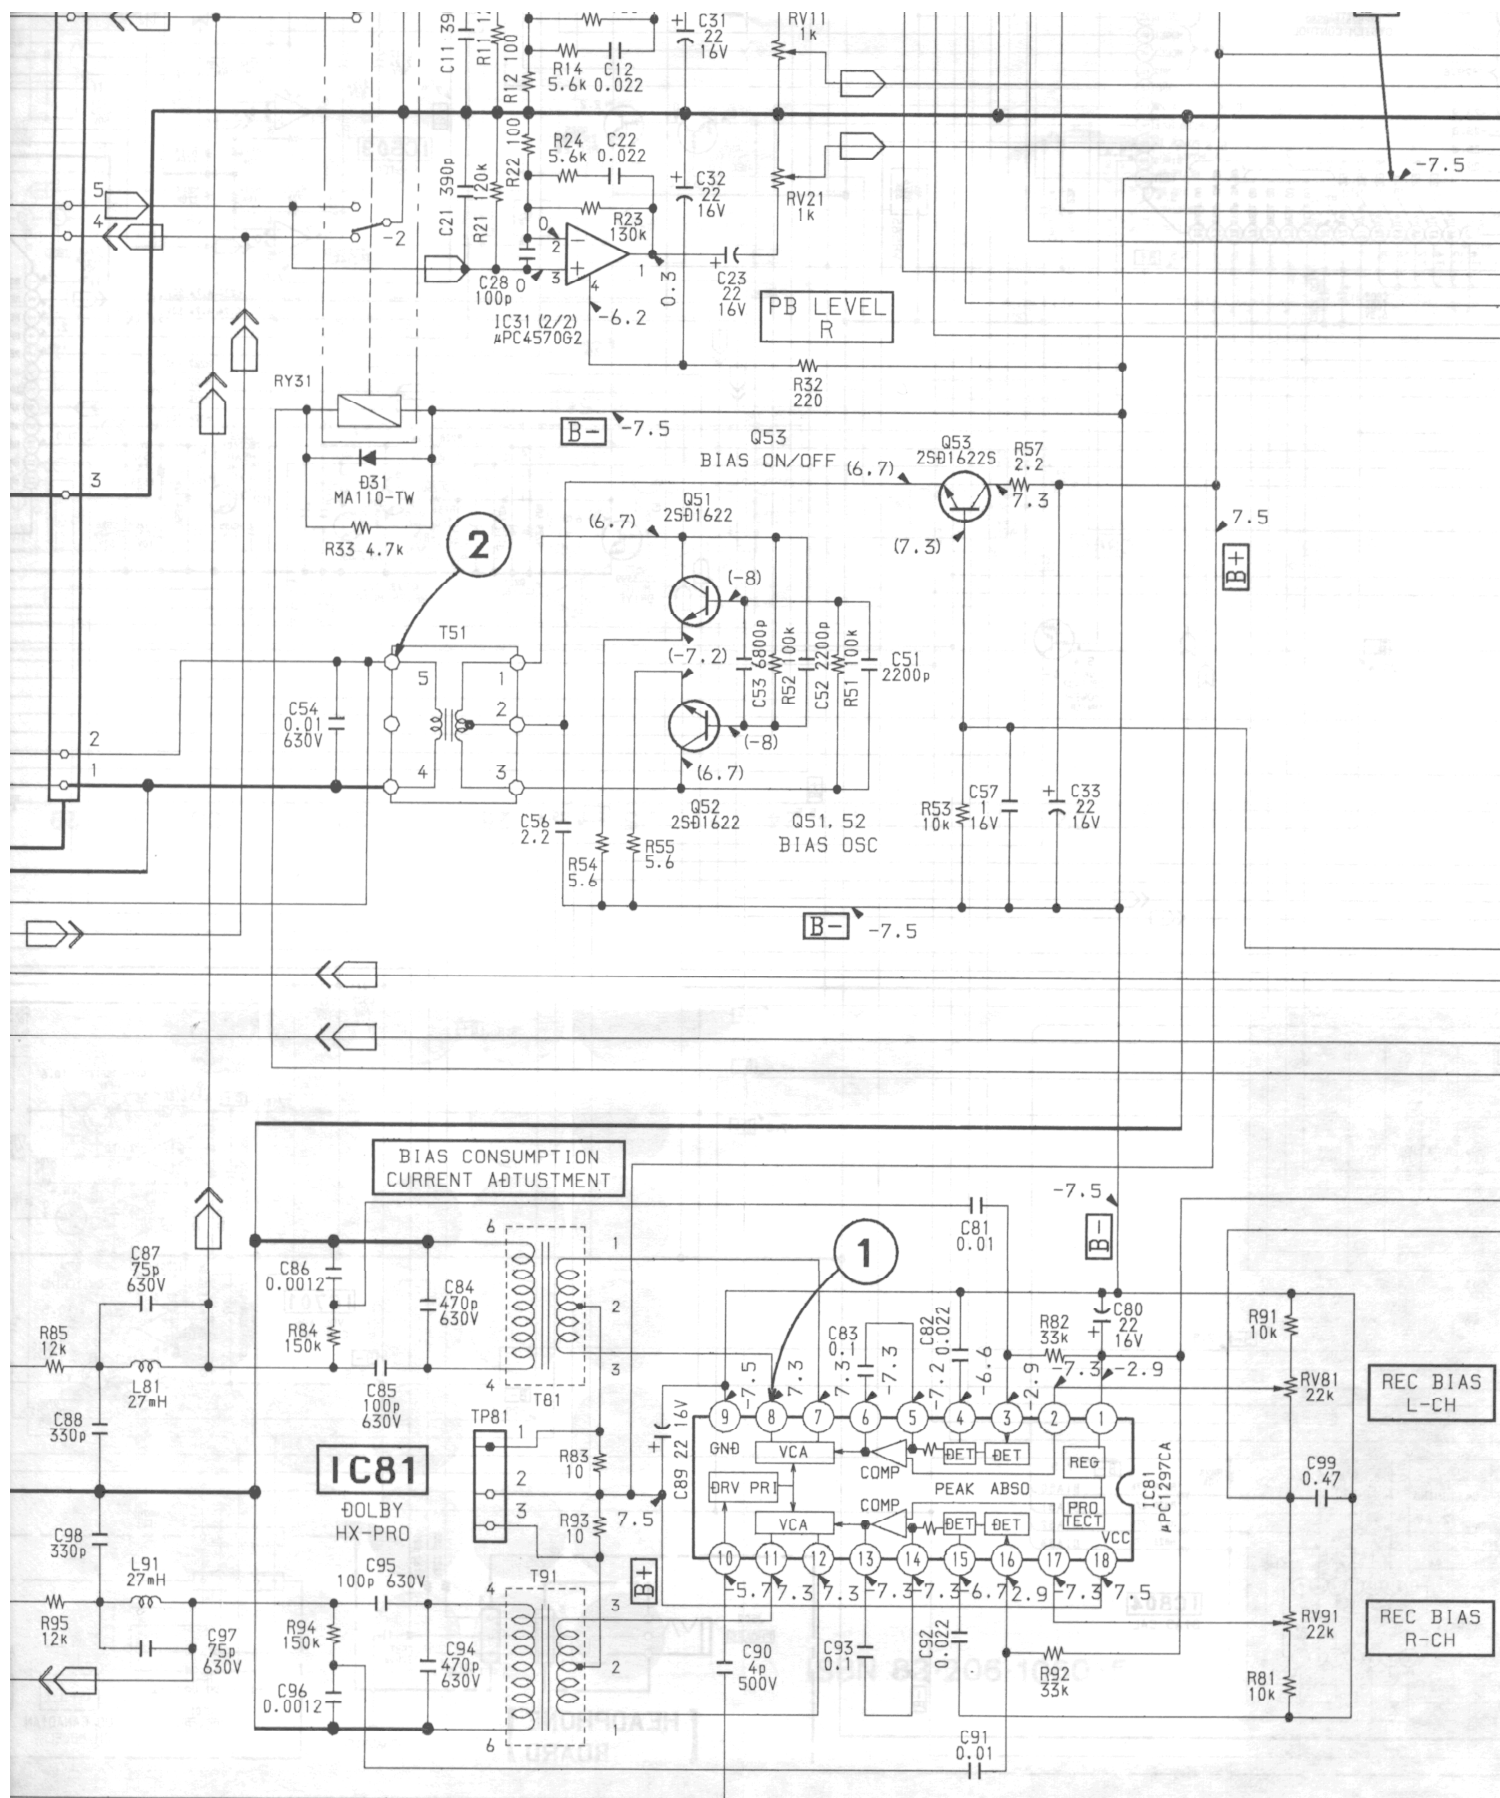

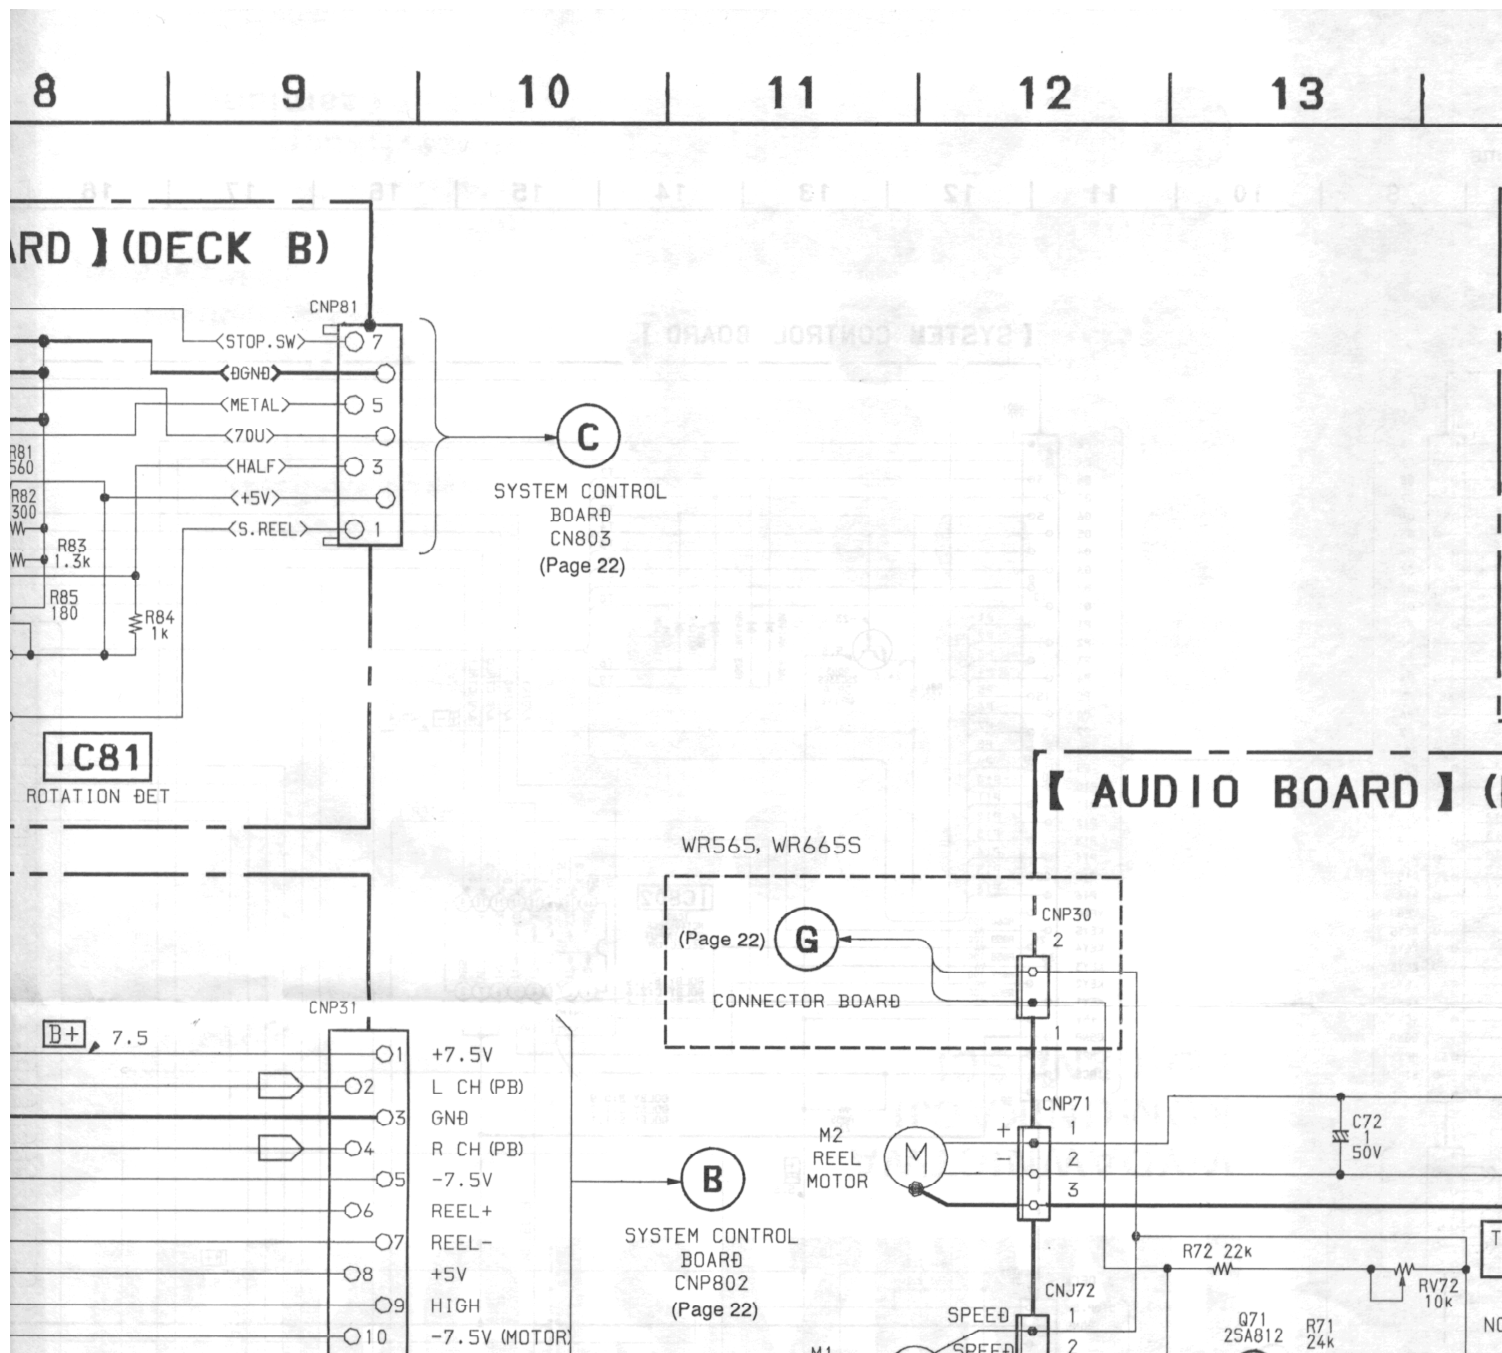

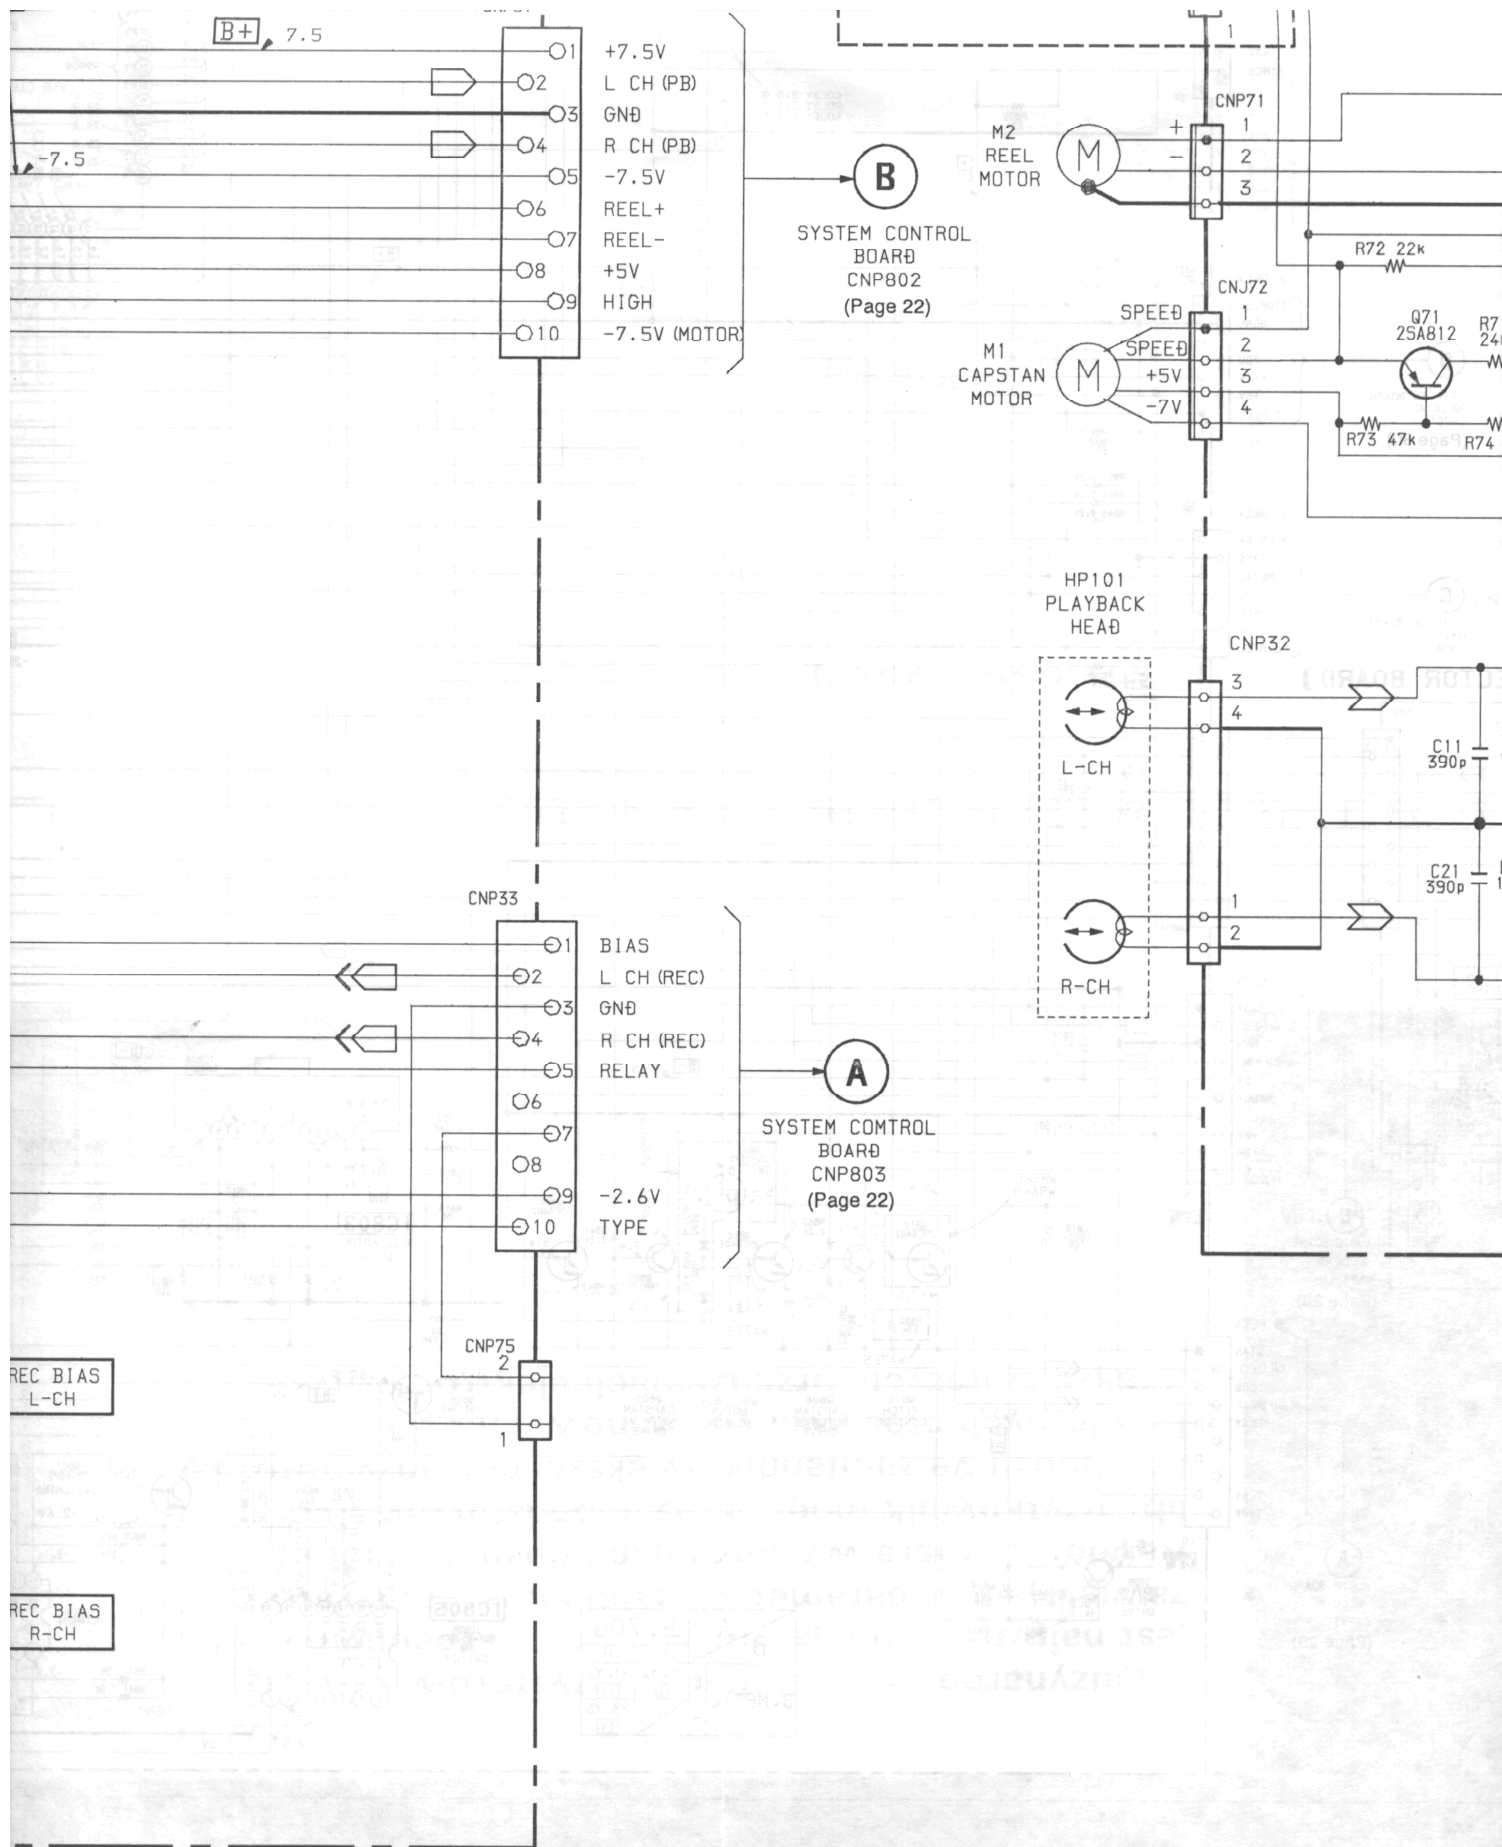






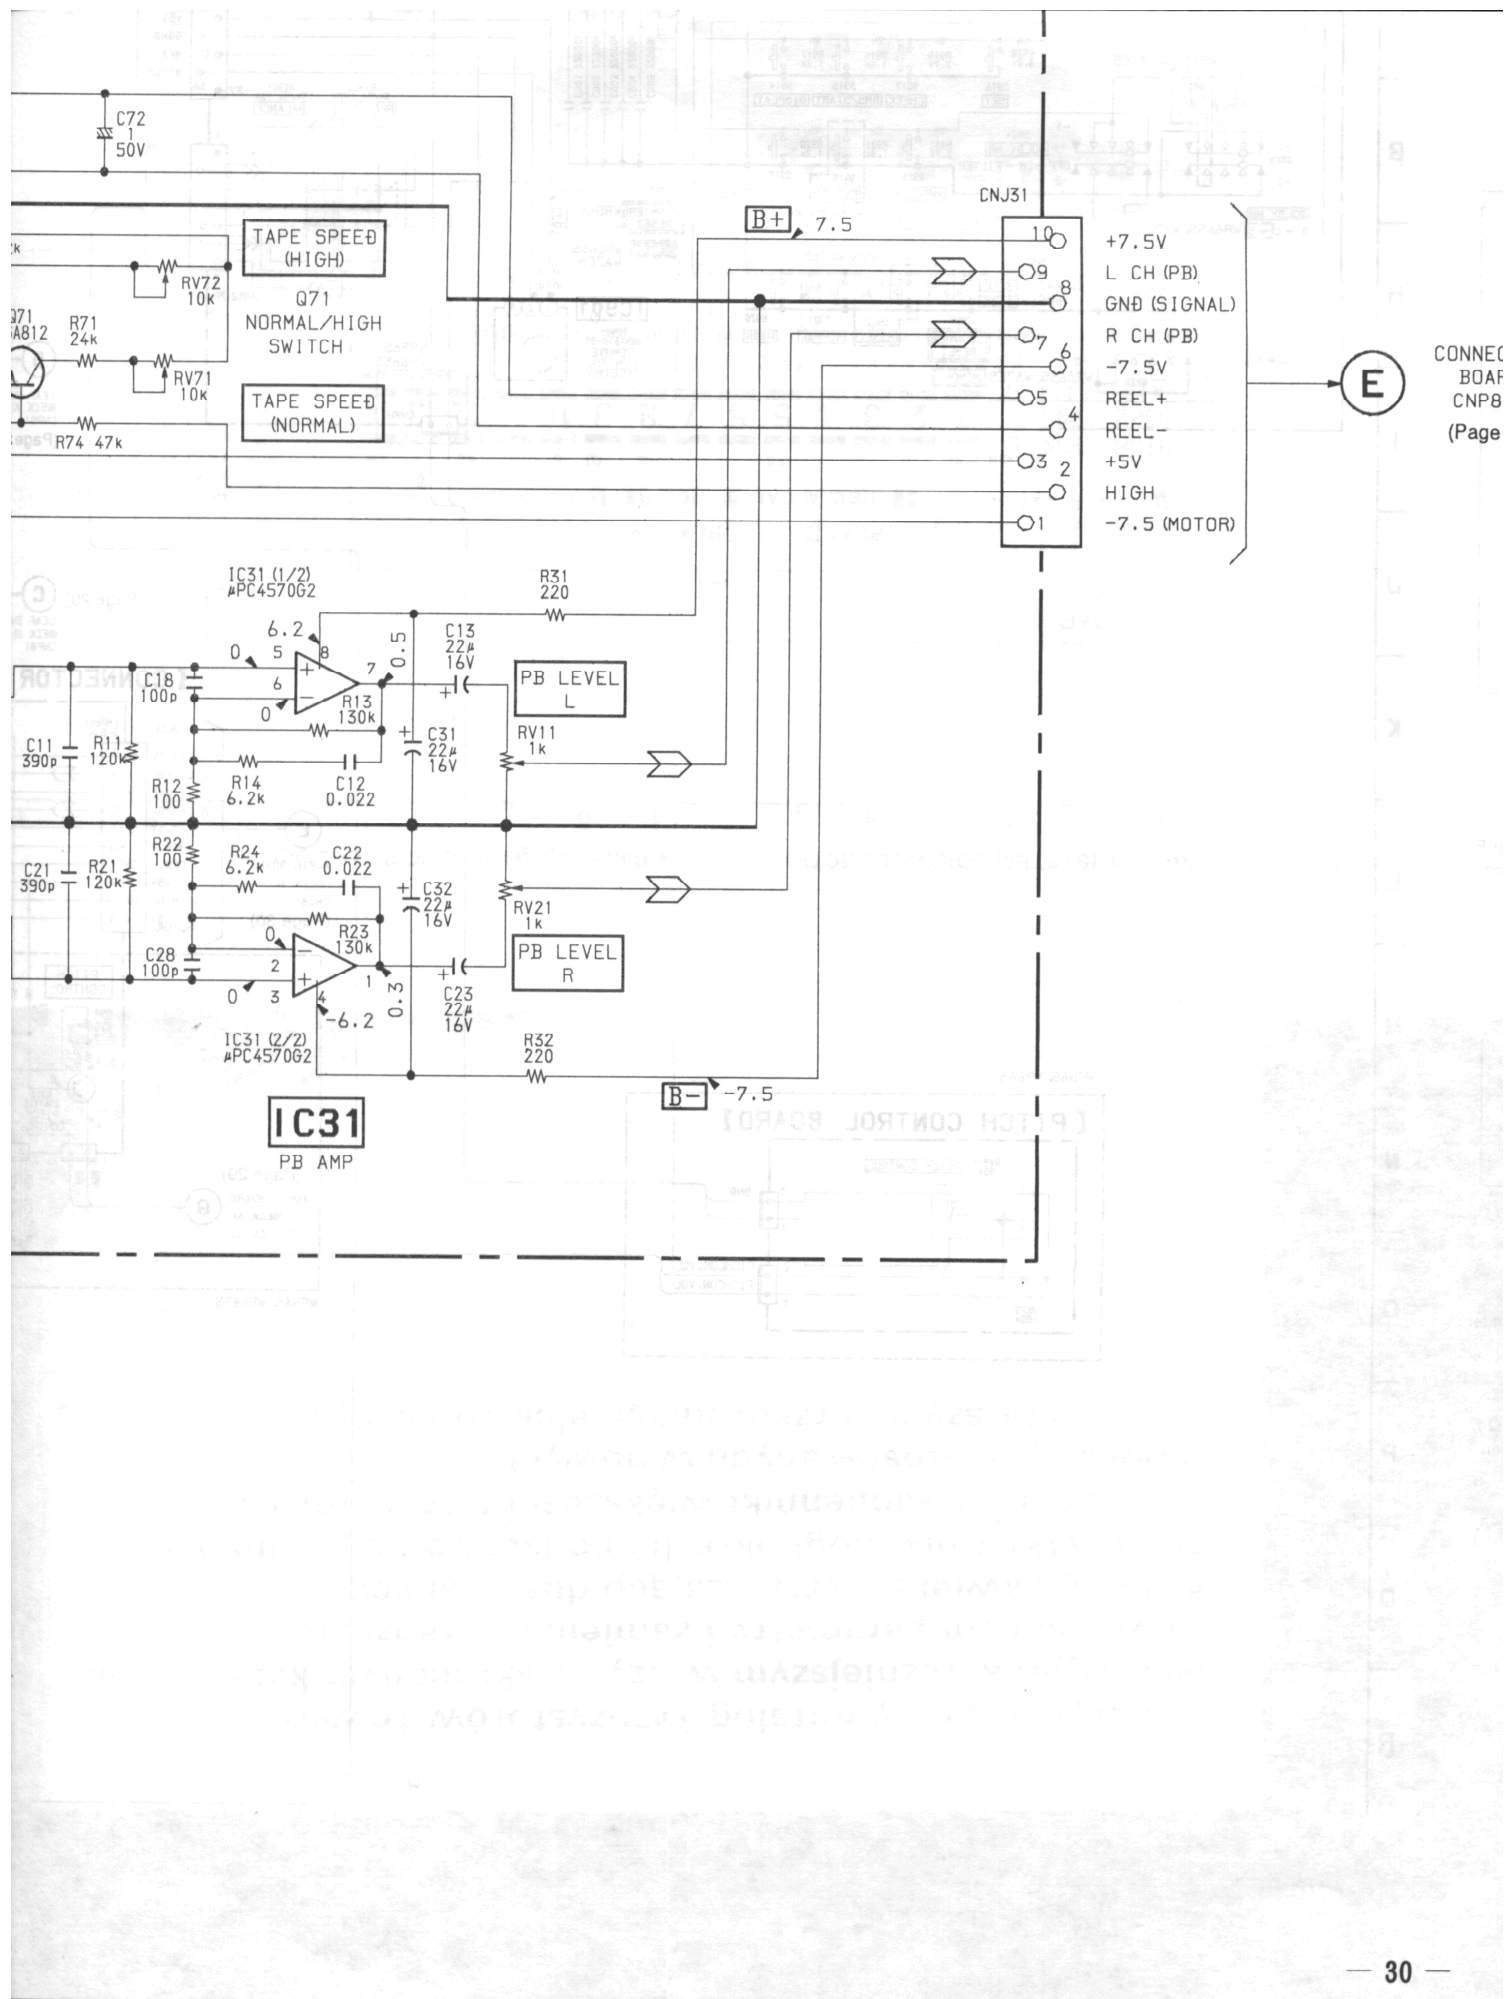


CONN  
BOAF  
CNP8  
(Page


# 5-5. PRINTED WIRING BOARDS (AUDIO SECTION)

• Refer to page 16 for Semiconductor Lead Layouts.

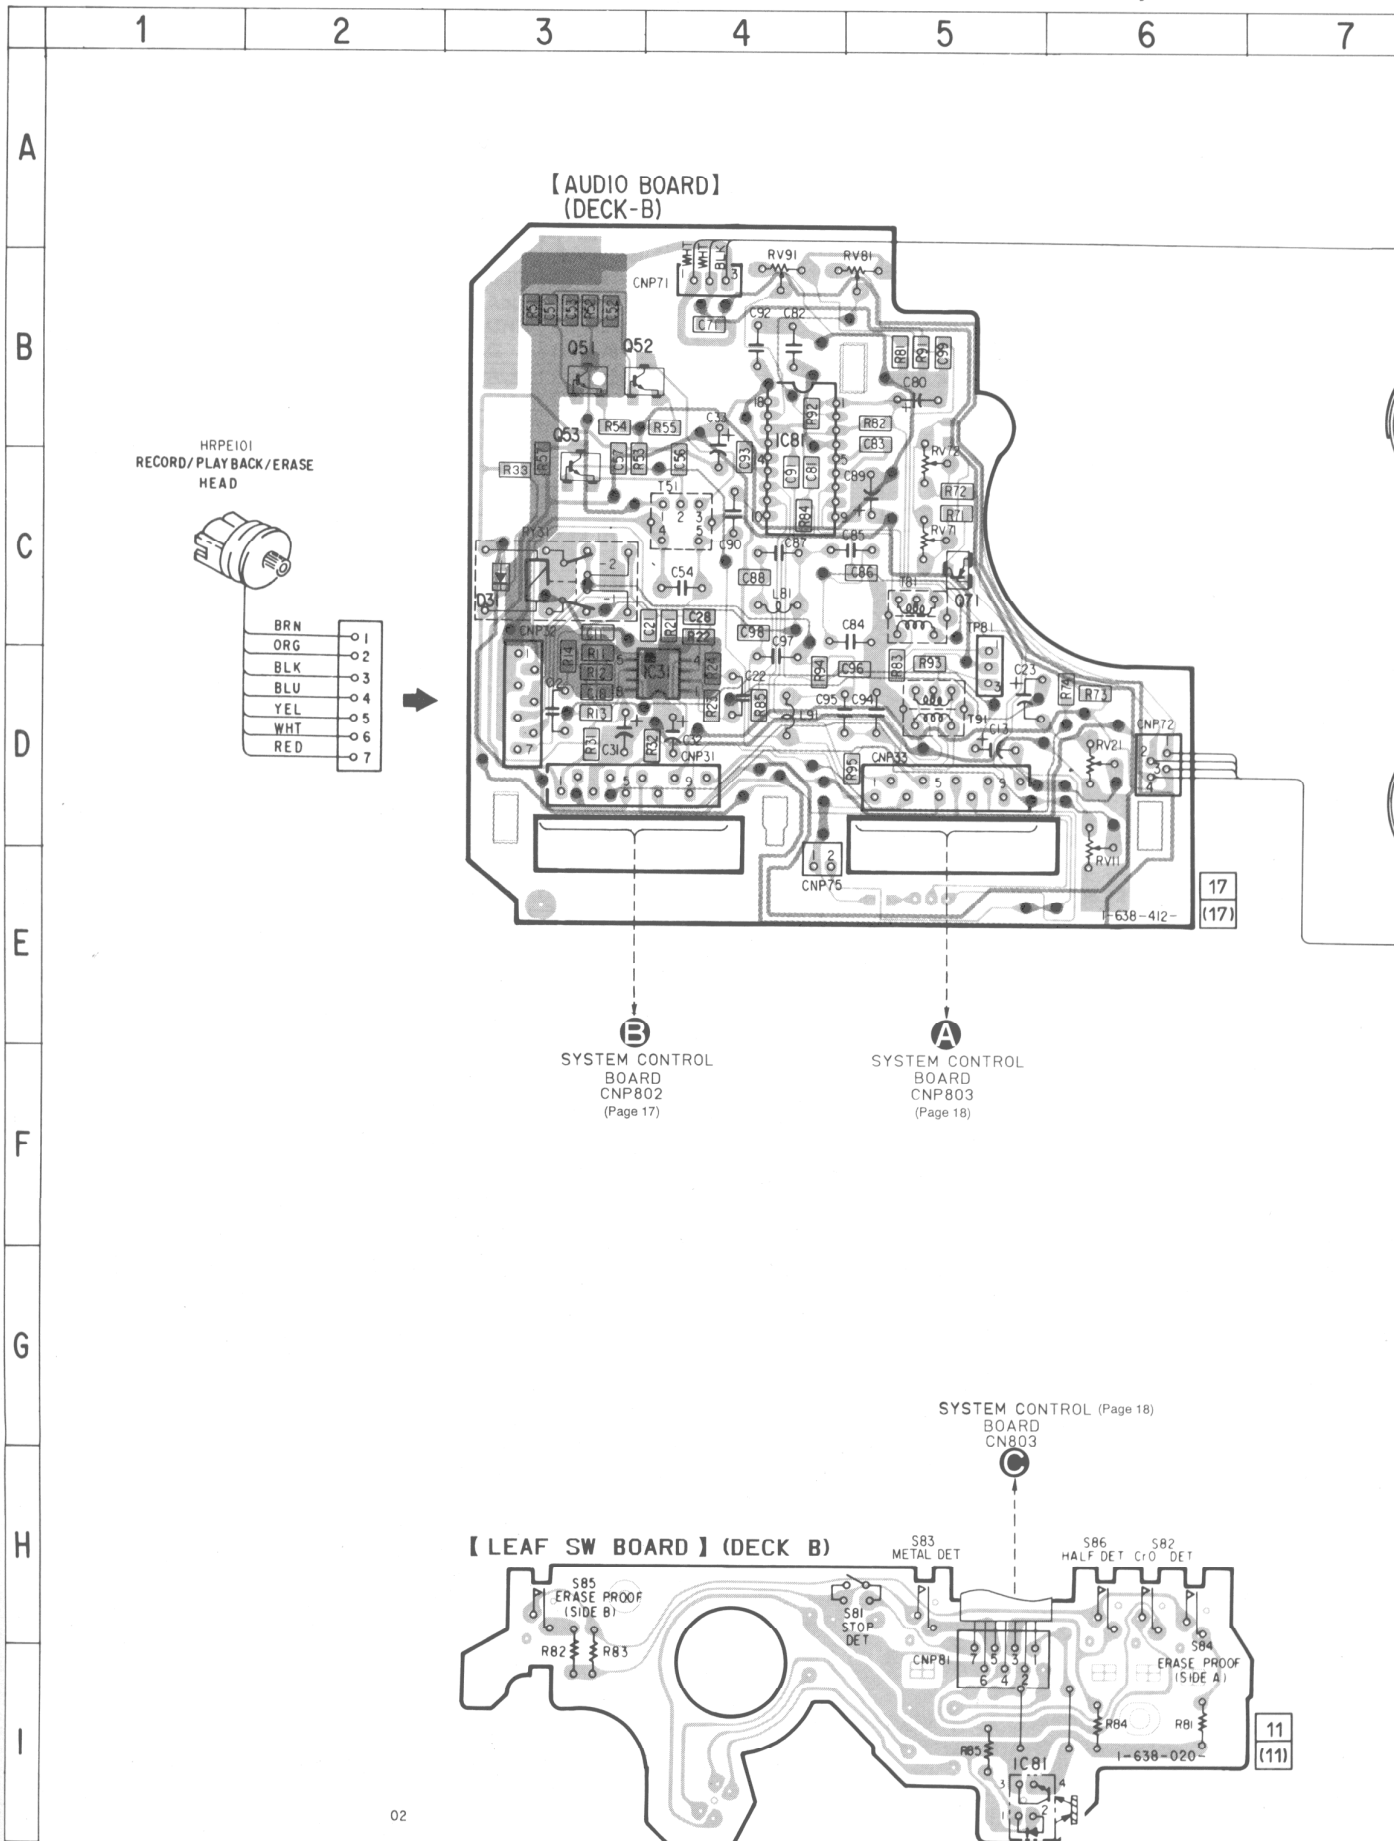

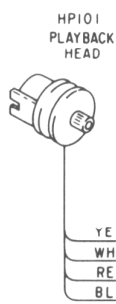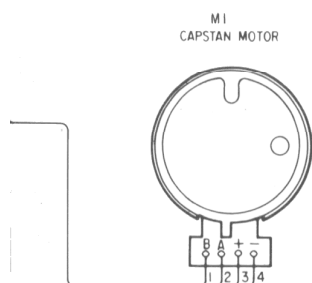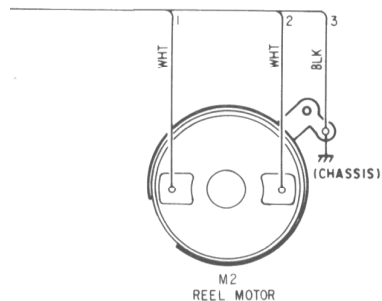


# 【AUDIO BOARD】 (DECK-A)

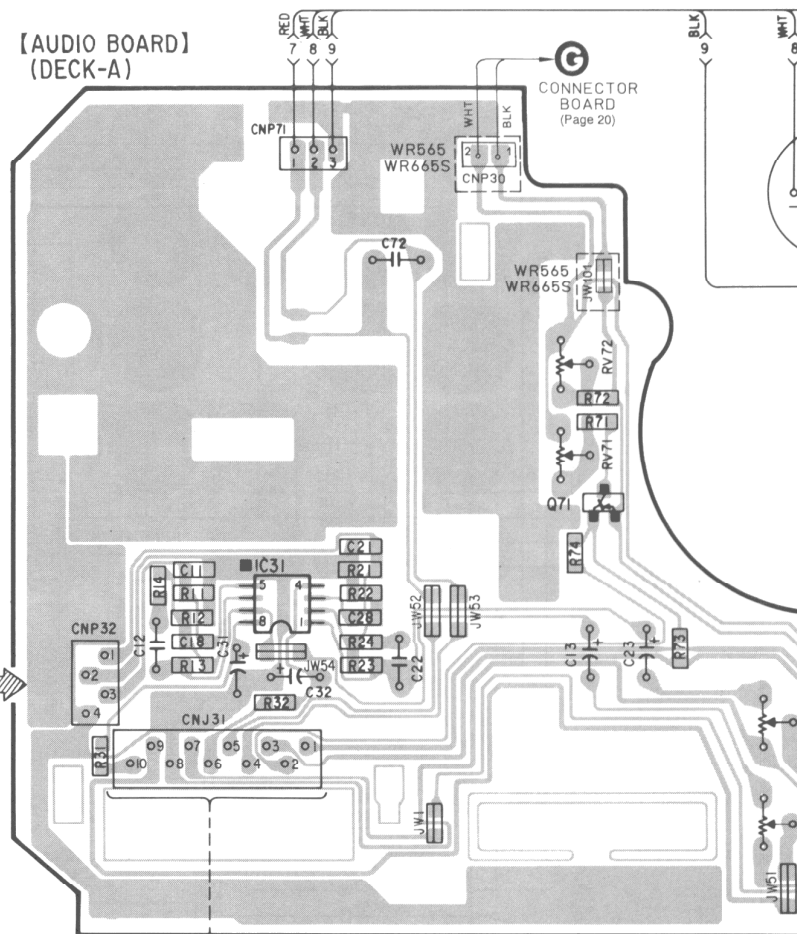

CONNECTOR  
BOARD  
CNP801  
(Page 20)


SYSTEM CONTROL (Page 19)  
BOARD  
CN802

# 【LEAF SW BOARD】(DECK A)

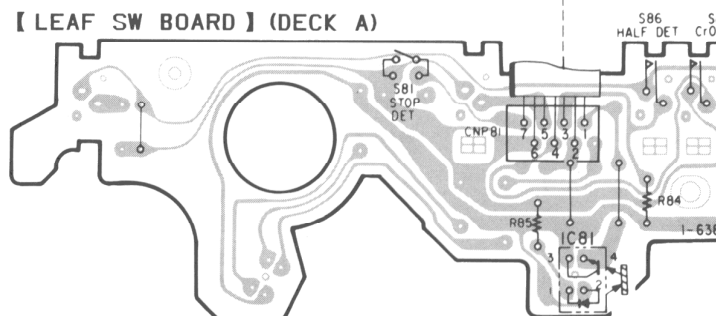

13 14 15

G

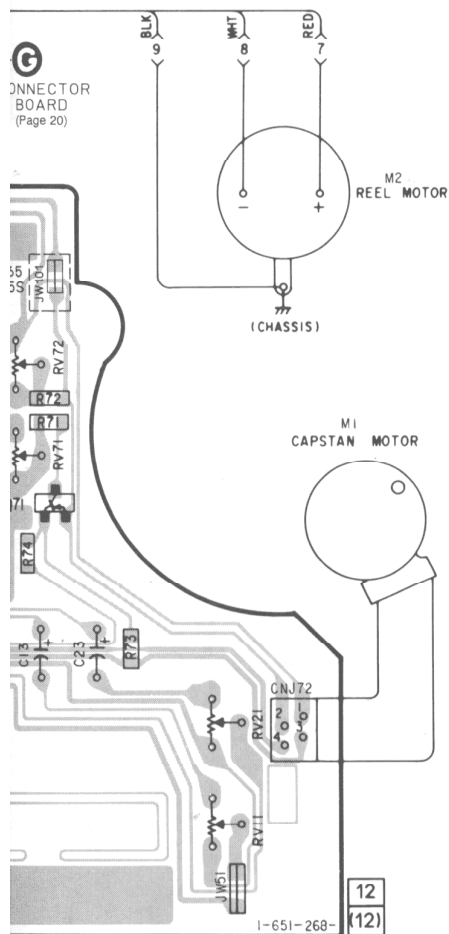
CONNECTOR  
BOARD  
(Page 20)

• SEMICONDUCTOR  
LOCATION  
(DECK-A)

Ref. No.	Location
IC31	D - 11
IC81 (LEAF SW)	I - 13
Q71	C - 13

(DECK-B)

Ref. No.	Location
D31	C - 3
IC31	D - 4
IC81 (AUDIO)	I - 5
IC81 (LEAF SW)	I - 5
Q51	B - 3
Q52	B - 3
Q53	C - 3
Q71	C - 5

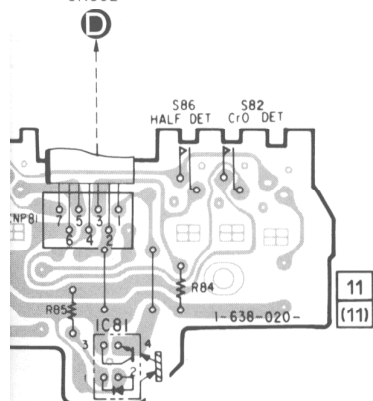
SYSTEM CONTROL (Page 19)  
BOARD  
CN802

Note:


- : parts extracted from the component side.
- : parts mounted on the conductor side.
- : Through hole.
- ▨ : Pattern on the side which is seen.
- ▩ : Pattern of the rear side.

5-6. PRINTED WIRING BOARDS (DOLBY (S) SECTION)

• Refer to page 16 for Semiconductor Lead Layouts.

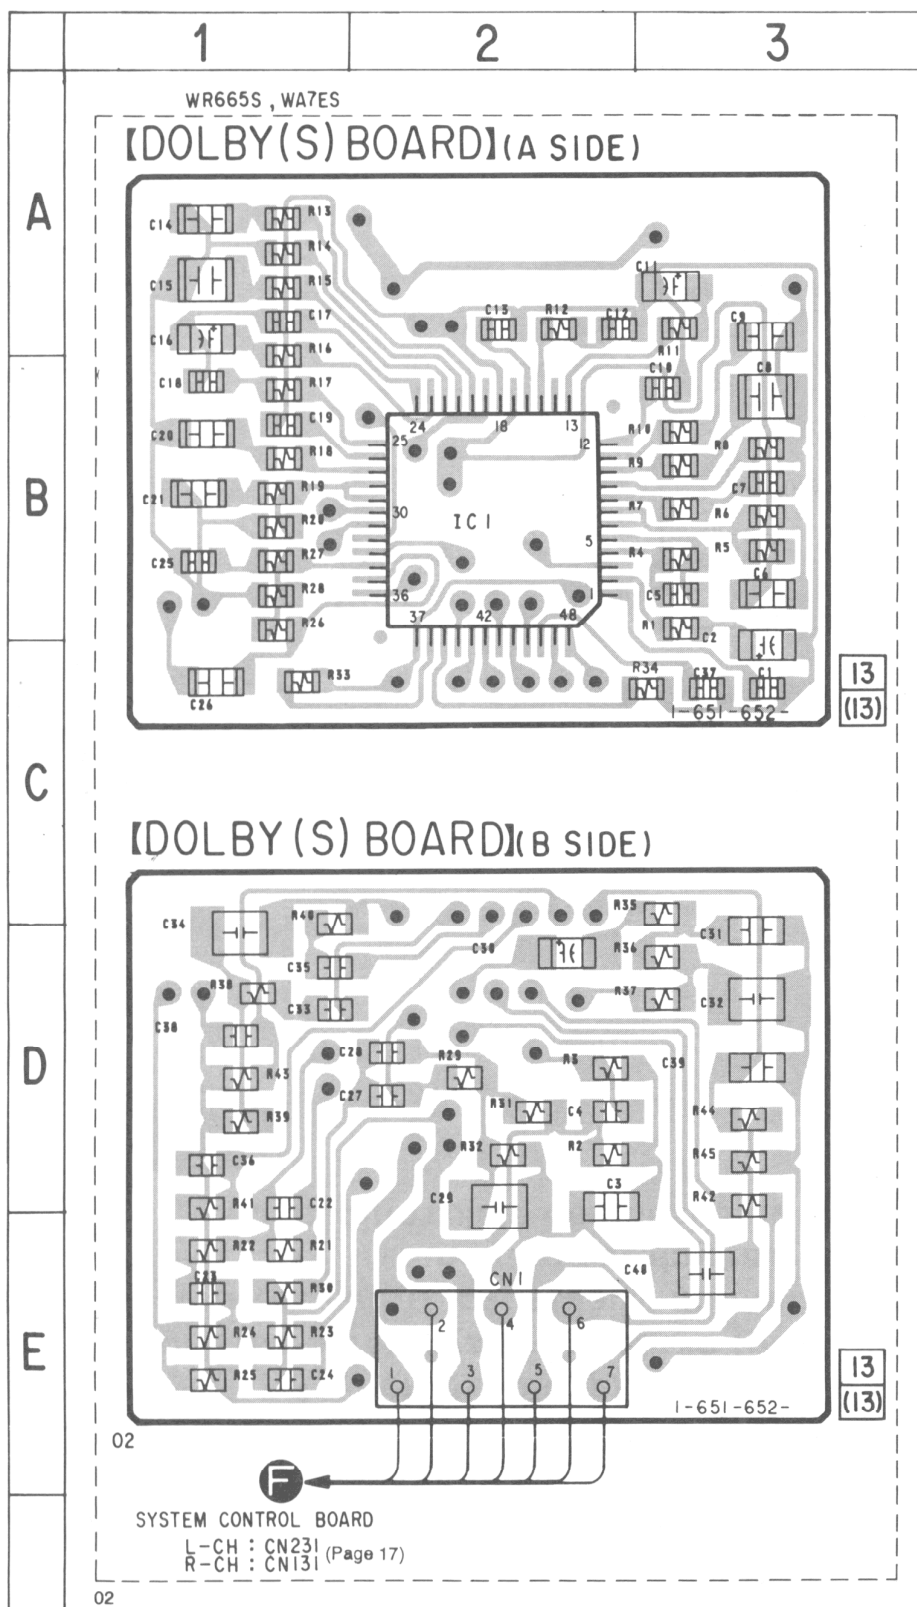

5-7. SCHEMATIC DIAGRAM (DOLBY (S)

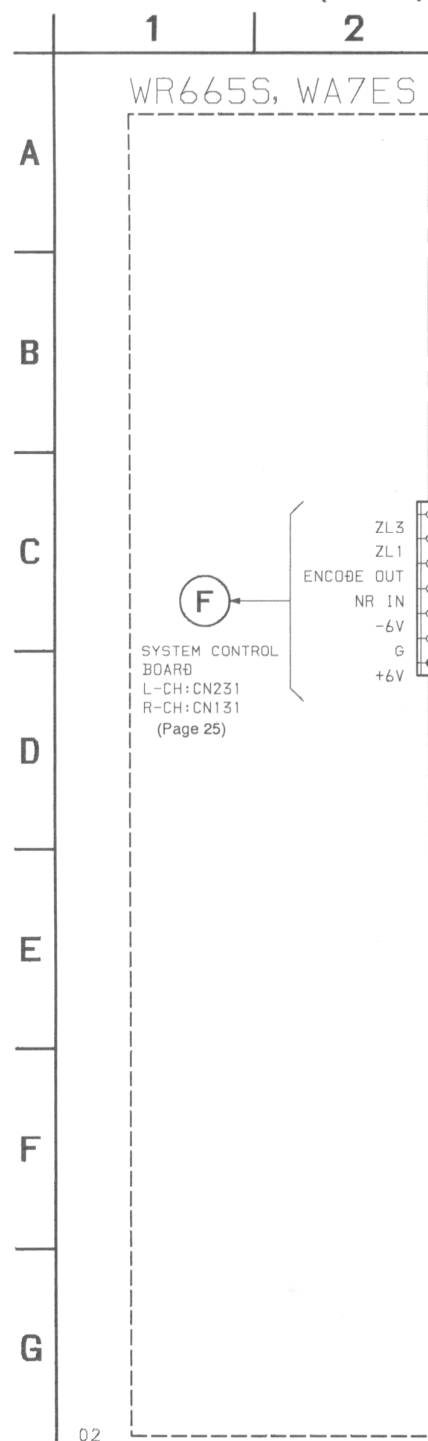

Note:

- : parts extracted from the component side.
- : Through hole.
- Pattern from the side which enables seeing.  
(The other layers' patterns are not indicated)


Caution :

Pattern face side : Parts on the pattern face side seen from (Conductor Side) the pattern face are indicated.  
Parts face side : Parts on the parts face side seen from the (Component side) parts face are indicated.

# DIAGRAM (DOLBY (S) SECTION)

65S, WA7ES

## 【 DOLBY (S) BOARD 】

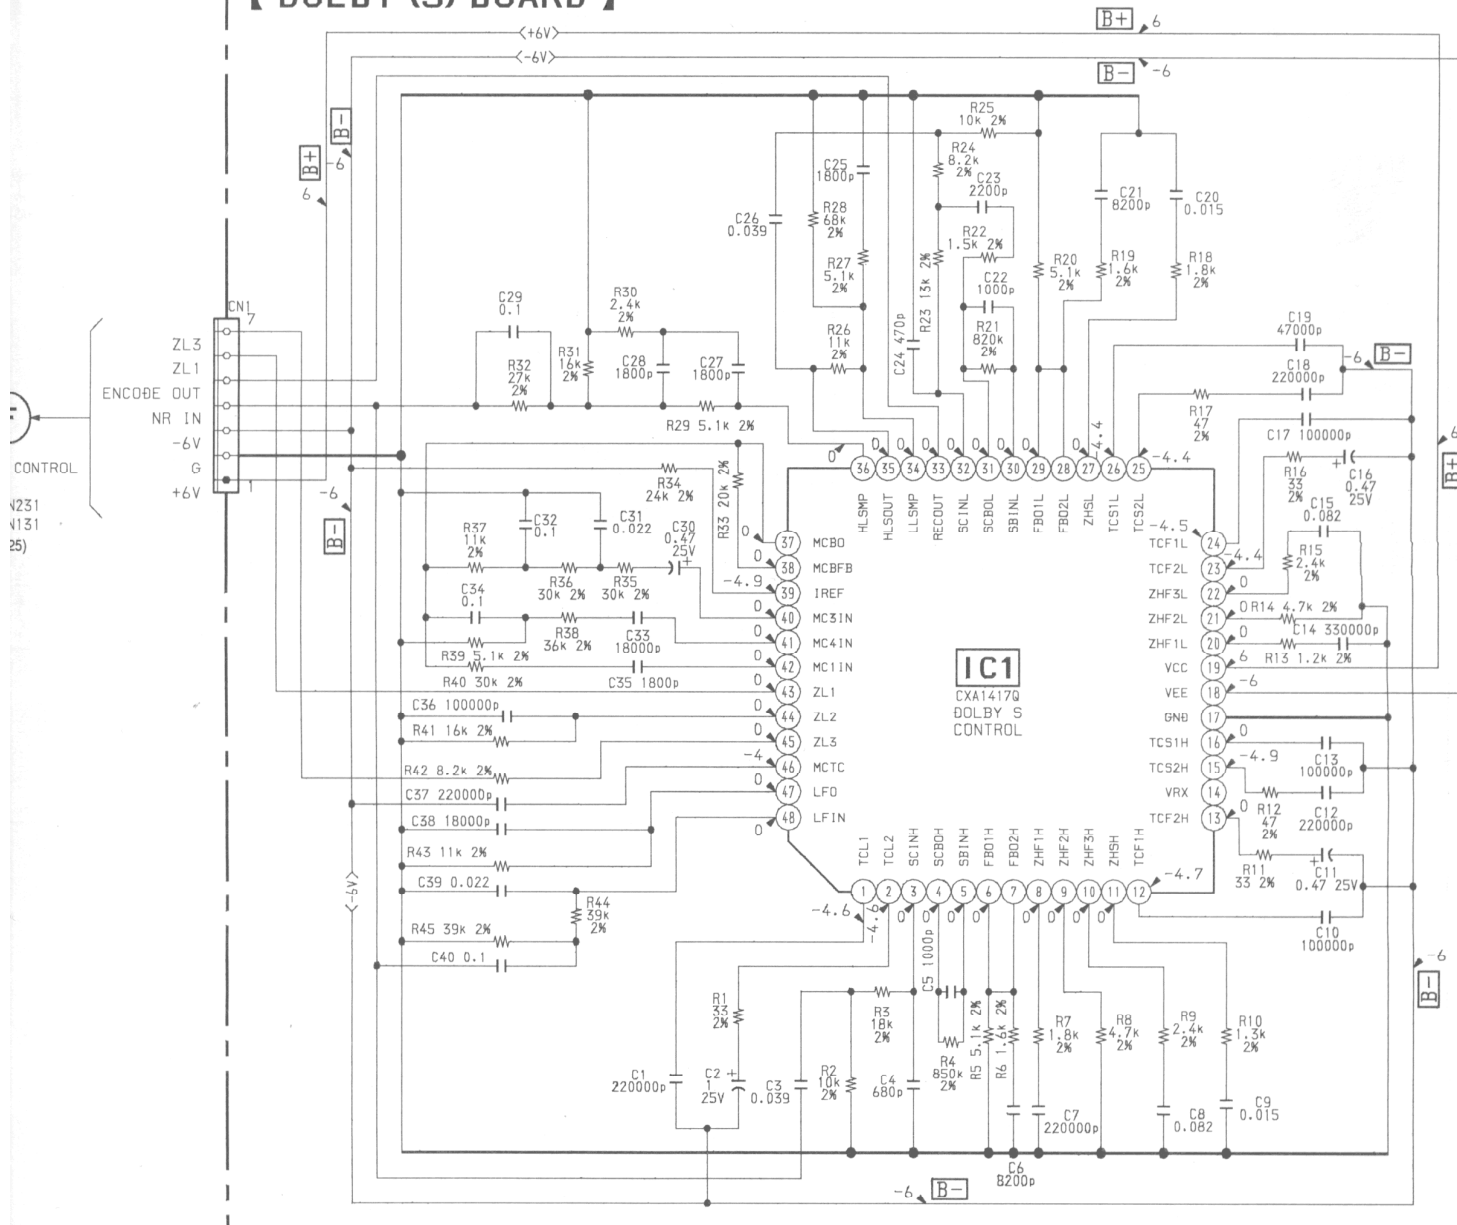

ponent side.

h enables seeing.  
are not indicated)


em face side seen from  
are indicated.  
ts face side seen from the  
dicated.

### Note :

- All capacitors are in  $\mu F$  unless otherwise noted. pF:  $\mu \mu F$  50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4}W$  or less unless otherwise specified.
- % : indicates tolerance.
- **B+** : B+ Line
- **B-** : B - Line

- : adjustment for repair.
- Voltage and waveforms are dc with respect to ground (no-signal (detuned) conditions. no mark : STOP
- Voltages are taken with a VOM ( Input impedance 10M Voltage variations may be noted due to normal product tolerances.

IC1 CXA1417Q

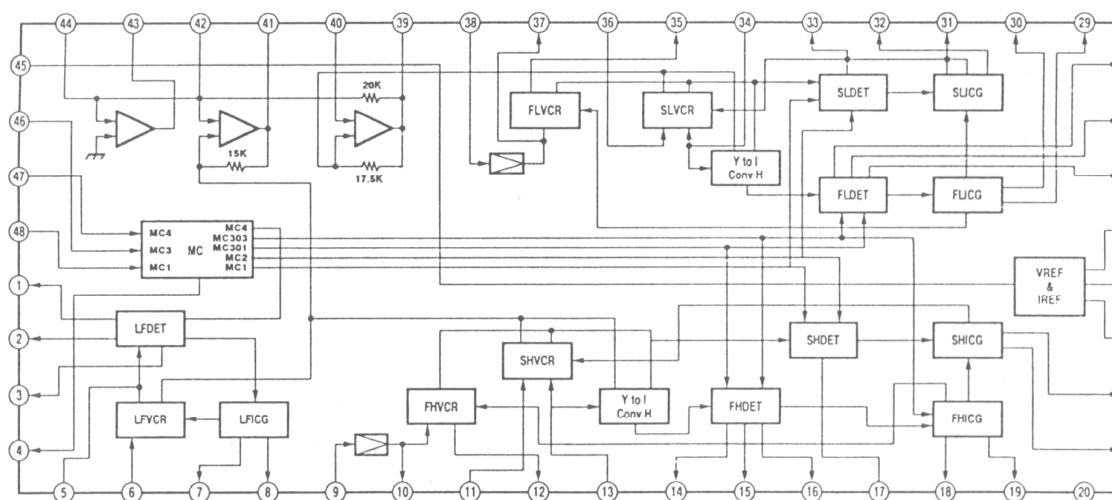[illegible]


 
a VOM ( Input impedance  $10\text{M } \Omega$  ).  
be noted due to normal production


## SECTION 6 EXPLODED VIEWS

### NOTE:

- -XX, -X mean standardized parts, so they may have some difference from the original one.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware ( # mark) list and accessories and packing materials are given in the last of this parts list.
- Abbreviation  
CND : Canadian  
G : German  
AUS : Australian  
CH : Chinese

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


### 6-1. CHASSIS SECTION

- A : POWER TRANSFORMER BOARD
- B : CONNECTOR BOARD

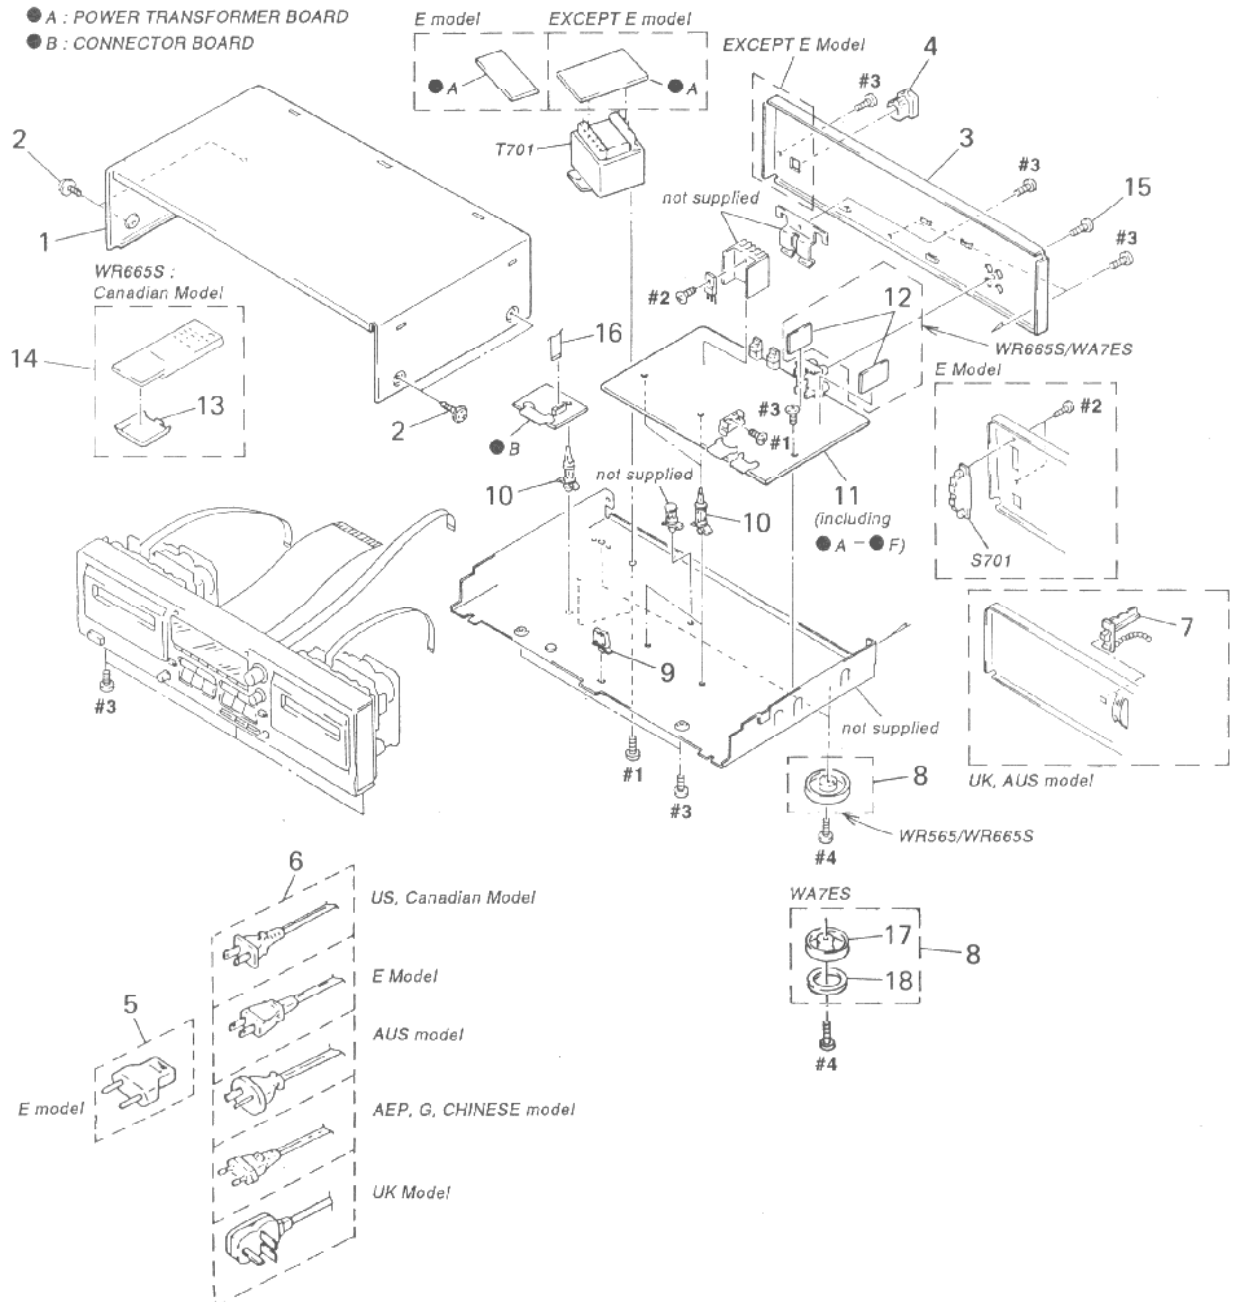

NEWS

th no reference  
views are not  
and accessories  
are given in the

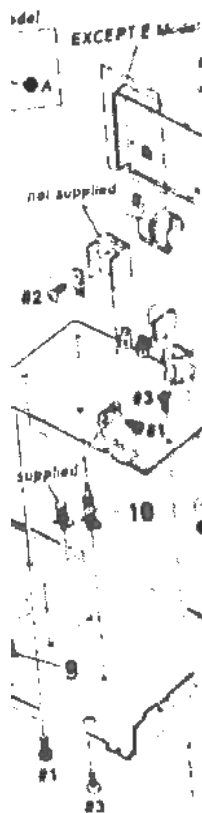

Ref. No.	Part No.	Description	Remark
* 1	4-943-088-41	CASE	
2	3-363-099-01	SCREW (CASE 3 TP2)	
* 3	3-920-372-01	PANEL, BACK (WR565:US)	
* 3	3-920-372-11	PANEL, BACK (WR565:AEP, G)	
* 3	3-920-372-21	PANEL, BACK (WR565:UK)	
* 3	3-920-372-31	PANEL, BACK (WR565:E)	
* 3	3-920-372-41	PANEL, BACK (WR565:AUS)	
* 3	3-920-372-51	PANEL, BACK (WR565:CND)	
* 3	3-920-372-61	PANEL, BACK (WR565:CH)	
* 3	3-920-373-01	PANEL, BACK (WR665S:US)	
* 3	3-920-373-11	PANEL, BACK (WR665S:AEP, G)	
* 3	3-920-373-21	PANEL, BACK (WR665S:UK)	
* 3	3-920-373-31	PANEL, BACK (WR665S:E)	
* 3	3-920-373-41	PANEL, BACK (WR665S:AUS)	
* 3	3-920-373-51	PANEL, BACK (WR665S:CND)	
* 3	3-920-373-61	PANEL, BACK (WA7ES)	
* 3	3-920-373-71	PANEL, BACK (WR665S:CH)	
* 4	3-703-244-00	BUSHING (2104), CORD (AEP, UK, G, AUS, CH)	
4	3-703-571-11	BUSHING (S) (4516), CORD (WA7ES/WR565:US, CND, E/WR665S:US, CND, E)	
△5	1-569-007-11	ADAPTER, CONVERSION 2P (E)	
△6	1-551-188-XX	CORD, POWER (E)	
△6	1-558-945-21	CORD, POWER (POLAR. SPT-1) (US, CND)	
△6	1-575-651-21	CORD, POWER (AEP, G, CH)	
△6	1-696-586-11	CORD, POWER (UK)	
△6	1-696-845-11	CORD, POWER (AUS)	
7	4-956-370-12	BAND, PLUG FIXED (UK, AUS)	
8	X-3369-842-1	FOOT ASSY (F58175S) (WR565:US, CND/WR665S:US, CND)	


Ref. No.	Part No.	Description	Remark
8	X-3369-843-1	FOOT ASSY (F58175S) (WR565:AEP, UK, I AUS, CH/WR665S:AEP, UK, E, G, AU)	
8	X-4941-291-1	FOOT ASSY (F58175S) (WA7ES)	
* 9	4-308-840-11	HOLDER, WIRE	
* 10	3-346-265-31	HOLDER, PC BOARD	
* 11	A-2007-311-A	SYSTEM CONTROL BOARD, COMPLETE (WR565:US, CND, AEP, UK, C)	
* 11	A-2007-313-A	SYSTEM CONTROL BOARD, COMPLETE (WR565:US, CND, AEP, UK, C)	
* 11	A-2007-314-A	SYSTEM CONTROL BOARD, COMPLETE (WR565:US, CND, AEP, UK, C)	
* 11	A-2007-315-A	SYSTEM CONTROL BOARD, COMPLETE (WR665S:US, CND, AEP, UK, C)	
* 11	A-2007-317-A	SYSTEM CONTROL BOARD, COMPLETE (WR665S:US, CND, AEP, UK, C)	
* 11	A-2007-318-A	SYSTEM CONTROL BOARD, COMPLETE (WR665S:US, CND, AEP, UK, C)	
* 11	A-2007-365-A	SYSTEM CONTROL BOARD, COMPLETE (WA7ES)	
* 12	A-2007-416-A	DOLBY (S) BOARD, COMPLETE (DECK A) (WA7ES, WR665S)	
13	2-181-754-01	COVER, BATTERY (WR665S:CA)	
14	1-465-738-11	REMOTE COMMANDER (WR665S:CA)	
15	3-704-515-01	SCREW (BV/RING)	
16	1-765-216-11	WIRE (FLAT TYPE) (11 CORE)	
17	3-318-688-51	FOOT (F58175S) (WA7ES)	
18	4-923-836-11	CUSHION (WA7ES)	
18	4-923-836-21	CUSHION (WA7ES)	
△S701	1-692-155-11	SELECTOR, POWER VOLTAGE (E)	
△T701	1-427-782-11	TRANSFORMER, POWER (US, CND)	
△T701	1-427-783-11	TRANSFORMER, POWER (AEP, UK, G, AUS, CH)	
△T701	1-427-784-11	TRANSFORMER, POWER (E)	

### 6-3. MECHANISM SECTION 1

(TCM-190RA14CL : DECK-A) : TC-WR565/WR665S

(TCM-190RA12CL : DECK-A) : TC-WA7ES

(TCM-190RB12CL : DECK-B) : TC-WR565/WR665S/TC-WA7ES

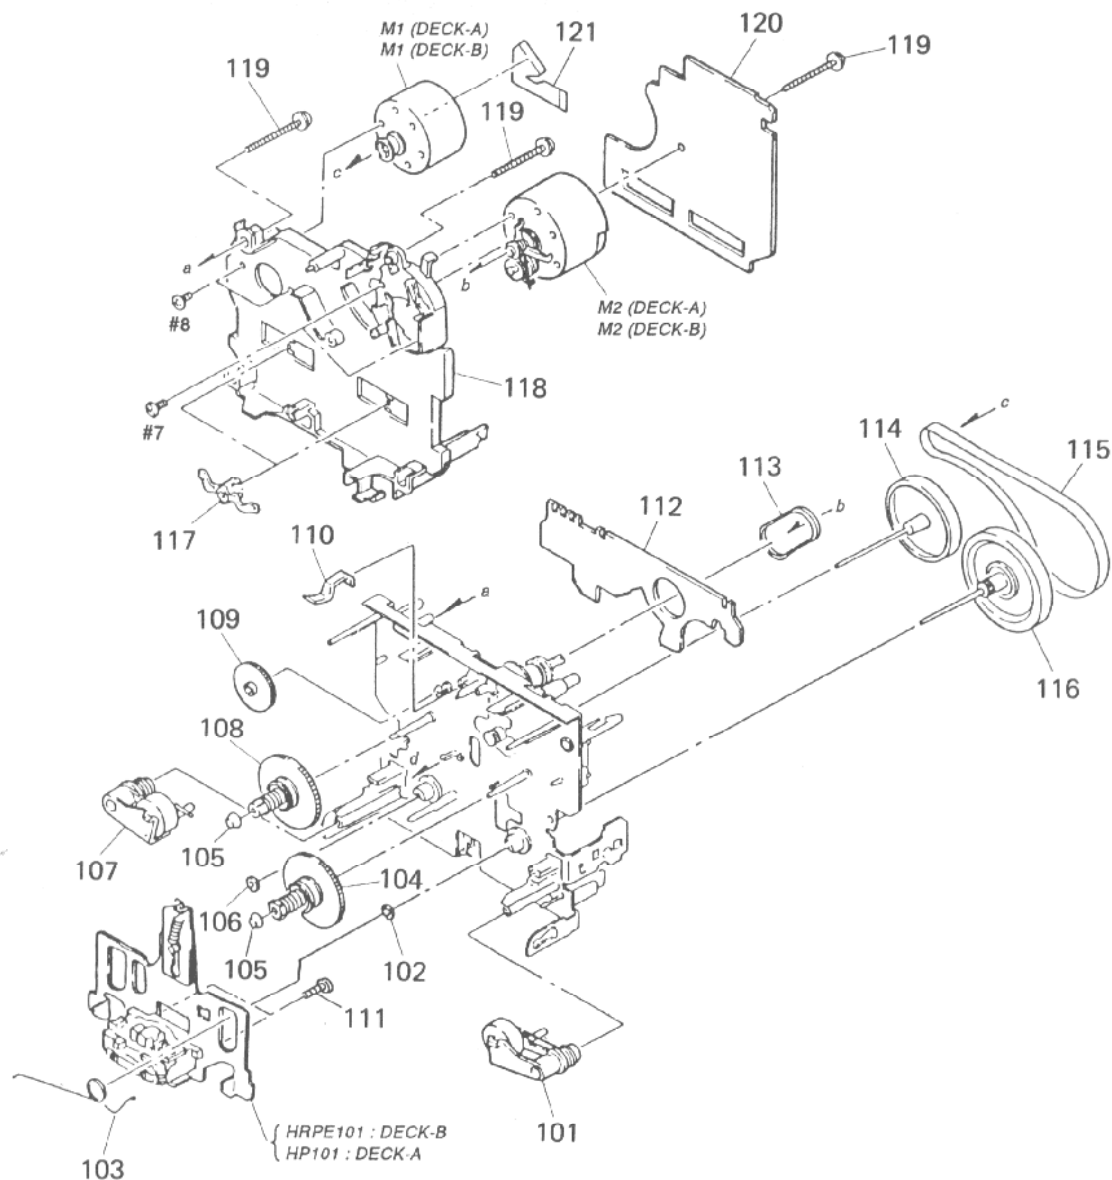


Ref.No.	Part No.	Description	Remark
101	X-3366-047-1	LEVER (PINCH F) ASSY	
102	3-356-713-01	WASHER	
103	3-907-362-01	SPRING, TORSION	
104	X-3366-970-1	TABLE ASSY, REEL	
105	3-362-308-01	CAP (REEL)	
106	3-356-714-01	WASHER	
107	X-3366-048-1	LEVER (PINCH R) ASSY	
108	X-3366-971-1	TABLE ASSY (B), REEL	
109	3-359-424-01	GEAR (REV GEAR)	
110	3-359-430-01	SPRING (CASSETTE RETAINER), LEAF	
111	3-388-848-01	SCREW (P2×6) (B TIGHT)	
* 112	1-638-020-11	LEAF SW BOARD (DECK A)	
* 112	1-638-020-11	LEAF SW BOARD (DECK B)	
113	3-359-466-01	BELT (FR), SQUARE	
114	X-3367-630-1	FLYWHEEL (REV) ASSY	
115	3-359-417-01	BELT (FLAT), CAPSTAN	

Ref.No.	Part No.	Description	Remark
116	X-3367-629-1	FLYWHEEL (FWD) ASSY	
117	3-575-321-00	RETAINER, THRUST, CAPSTAN	
118	3-359-436-11	BASE (THRUST RETAINER), FITTING	
119	3-359-414-01	SCREW (+PTPHW 2×23)	
* 120	A-2007-040-A	AUDIO BOARD, COMPLETE (DECK B)	
* 120	A-2007-266-A	AUDIO BOARD, COMPLETE (DECK A)	(WA7ES)
* 120	A-2007-339-A	AUDIO BOARD, COMPLETE (DECK A)	(WR565, WR665S)
121	1-638-983-11	PC BOARD, MOTOR FLEXIBLE	
HP101	A-2003-757-A	BASE ASSY, HEAD (PLAY BACK) (DECK A)	
HRPE101A	2003-930-A	BASE ASSY, HEAD (RECORD, PLAYBACK, ERASE) (DECK B)	
M1	X-3365-377-2	MOTOR ASSY, CAPSTAN (DECK A)	
M1	X-3365-377-2	MOTOR ASSY, CAPSTAN (DECK B)	
M2	X-3363-501-1	MOTOR ASSY, REEL (DECK A)	
M2	X-3363-501-1	MOTOR ASSY, REEL (DECK B)	

## 6-2. FRONT PANEL SECTION

- C : HEADPHONE BOARD
- D : PICH CONTROL BOARD
- E : PANEL BOARD
- F : POWER SWITCH BOARD

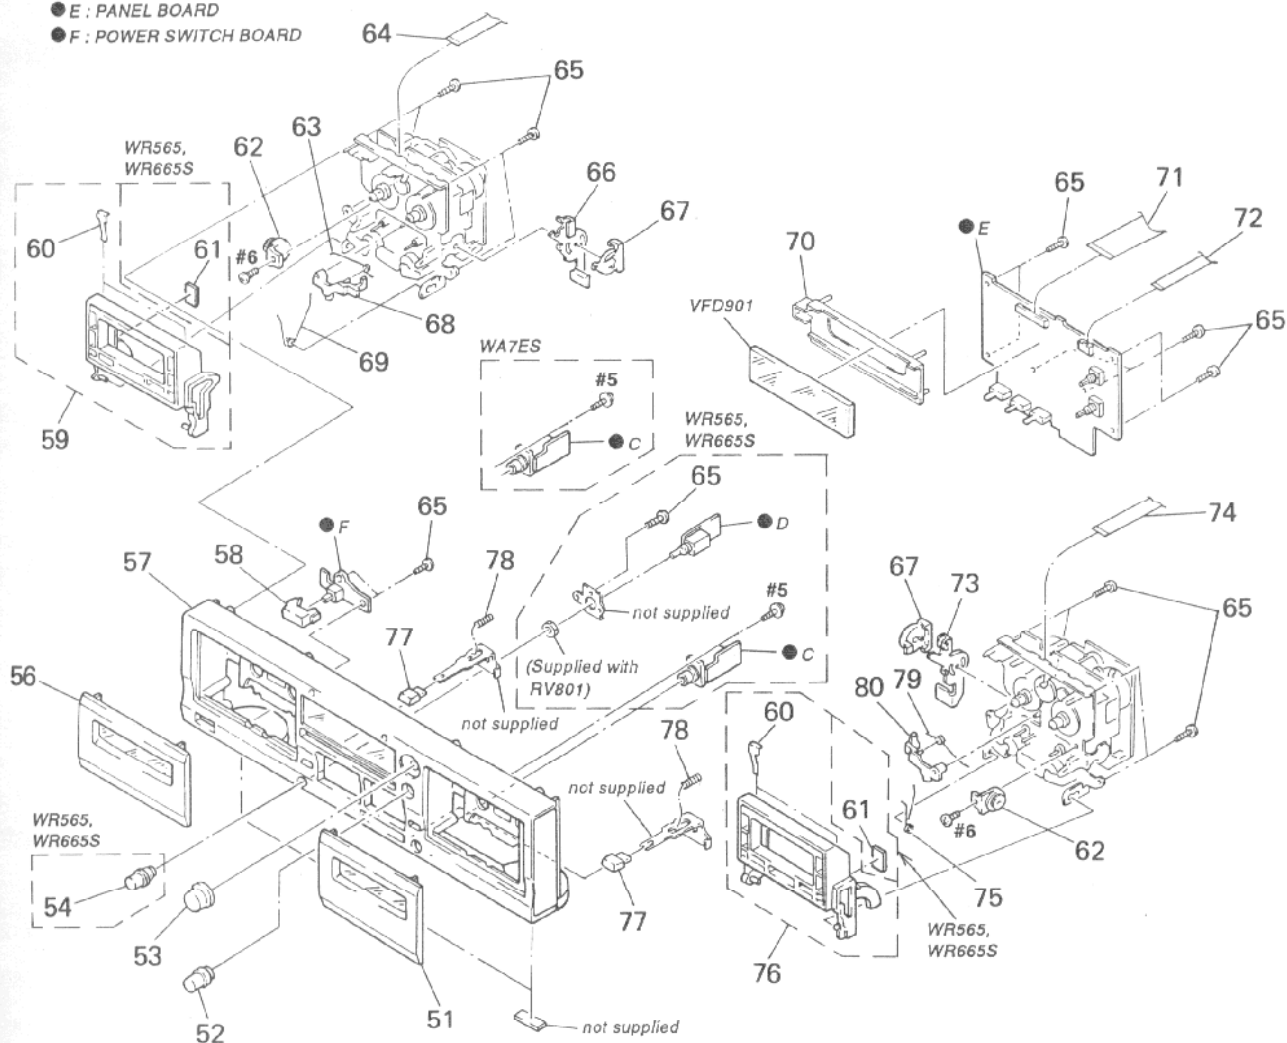

Ref.No.	Part No.	Description	Remark
51	X-3369-653-1	LID (B) ASSY, CASSETTE (WR565)	
51	X-3369-655-1	LID (B) ASSY, CASSETTE (WR665S)	
51	X-3369-657-1	LID (B) ASSY, CASSETTE (WA7ES)	
52	3-367-431-01	KNOB (BAL)	
53	3-909-661-01	KNOB (REC)	
54	3-920-370-01	KNOB (TS) (WR565, WR665S)	
56	X-3369-652-1	LID (A) ASSY, CASSETTE (WR565)	
56	X-3369-654-1	LID (A) ASSY, CASSETTE (WR665S)	
56	X-3369-656-1	LID (A) ASSY, CASSETTE (WA7ES)	
57	X-3369-646-1	PANEL ASSY, FRONT (WR565:US, CND)	
57	X-3369-647-1	PANEL ASSY, FRONT (WR565:ABP, UK, E, G, AUS, CH)	
57	X-3369-648-1	PANEL ASSY, FRONT (WR665S:US)	
57	X-3369-649-1	PANEL ASSY, FRONT (WR665S:CND)	
57	X-3369-650-1	PANEL ASSY, FRONT (WR665S:CH)	
57	X-3369-651-1	PANEL ASSY, FRONT (WA7ES)	
58	3-354-932-01	BUTTON (POWER)	
59	A-2004-502-A	HOLDER (R) ASSY, CASSETTE (WA7ES)	
59	A-4325-164-A	HOLDER (R) ASSY, CASSETTE (WR565, WR665S)	
60	3-308-823-11	DETENT, CASSETTE	
* 61	3-387-151-01	CUSHION, RUBBER (WR565, WR665S)	

Ref.No.	Part No.	Description	Remark
62	3-354-963-01	DAMPER	
63	3-354-962-01	SPRING (EJ SAFTY SPRING R)	
64	1-765-214-11	WIRE (FLAT TYPE) (7 CORE)	
65	4-951-620-01	SCREW (2.6×8), +BVTP	
* 66	3-354-954-01	LEVER (LOCK LEVER R)	
67	3-354-957-01	JOINT (LOCK LEVER)	
68	3-354-956-01	LEVER (EJ SAFTY LEVER R)	
69	3-354-960-01	SPRING (LOADING R), TORSION	
* 70	3-377-337-11	HOLDER (FL)	
71	1-765-217-11	WIRE (FLAT TYPE) (37 CORE)	
72	1-765-215-11	WIRE (FLAT TYPE) (7 CORE)	
* 73	3-354-953-01	LEVER (LOCK LEVER L)	
74	1-765-213-11	WIRE (FLAT TYPE) (7 CORE)	
75	3-354-959-01	SPRING (LOADING L), TORSION	
76	A-2004-501-A	HOLDER (L) ASSY, CASSETTE (WA7ES)	
76	A-4325-163-A	HOLDER (L) ASSY, CASSETTE (WR565, WR665S)	
77	3-377-328-11	BUTTON (EJECT)	
78	3-382-382-11	SPRING, COMPRESSION	
79	3-354-961-01	SPRING (EJ SAFTY SPRING L)	
80	3-354-955-01	LEVER (EJ SAFTY LEVER L)	

VFD901 1-517-263-11 INDICATOR TUBE, FLUORESCENT

6-3. M

(  
(  
(

Ref.

10

10

10

10

10

10

10

10

10

11

11

\* 11

\* 11

11

11

11

11


11

#### 6-4. MECHANISM SECTION 2

(TCM-190RA14CL : DECK-A) : TC-WR565/WR665S

(TCM-190RA12CL : DECK-A) : TC-WA7ES

(TCM-190RB12CL : DECK-B) : TC-WR565/WR665S/TC-WA7ES

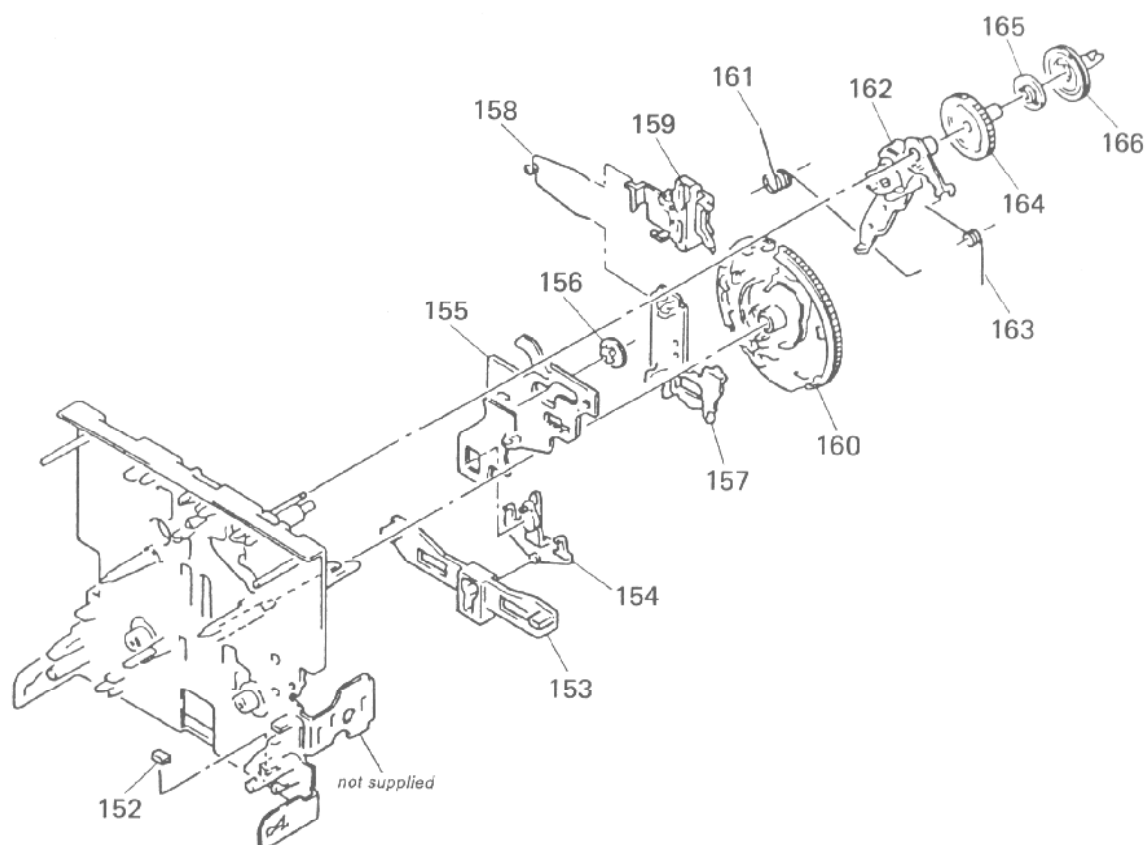

Ref.No.	Part No.	Description
---------	----------	-------------

152	3-359-469-01	SPACER
153	3-359-425-01	SLIDER (REVERSE SLIDER)
154	3-359-426-01	LEVER (REVERSE LEVER)
* 155	3-359-415-01	SLIDER (TRIGGER SLIDER)
156	3-359-448-01	GEAR (TRIGGER)
157	3-359-427-01	SLIDER (LEVERSE SLIDER)
158	3-359-454-01	SPRING, TORSION
159	3-359-429-01	SLIDER (BRAKE PLATE)

Remark

Ref.No.	Part No.	Description
---------	----------	-------------

160	3-359-420-01	GEAR (CAM GEAR)
161	3-359-456-01	SPRING (TRIGGER SPRING), TORSION
162	X-3366-569-1	ARM ASSY, FR
163	3-924-185-11	SPRING (FR ARM), TORSION
164	3-359-419-11	GEAR (FR GEAR)

165	3-359-421-01	CLUTCH (REEL DISK)
166	3-359-418-01	PULLEY (FR PULLEY)

Remark

# SECTION 7 ELECTRICAL PARTS LIST

## AUDIO (DECK A)

## AUDIO (DECK B)

### NOTE :

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms  
METAL : Metal-film resistor  
METAL OXIDE : Metal oxide-film resistor  
F : nonflammable

- Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

### SEMICONDUCTORS

In each case,  $\mu$  :  $\mu$ , for example :

$\mu A$  :  $\mu A$ ,  $\mu PA$  :  $\mu PA$

$\mu PB$  :  $\mu PB$ ,  $\mu PC$  :  $\mu PC$

$\mu PD$  :  $\mu PD$

### CAPACITORS

$\mu F$  :  $\mu F$

### COILS

$\mu H$  :  $\mu H$

### Abbreviation

CND : Canadian

G : German

AUS : Australian

CH : Chinese

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark
*	A-2007-266-A	AUDIO BOARD, COMPLETE (DECK A) (WA7ES)	
*	A-2007-339-A	AUDIO BOARD, COMPLETE (DECK A)	(WR565, WR665S)

\*\*\*\*\*

### < CAPACITOR >

C11	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C12	1-136-157-00	FILM	0.022 $\mu$ F	5%	50V
C13	1-124-234-00	ELECT	22 $\mu$ F	20%	16V
C18	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C21	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C22	1-136-157-00	FILM	0.022 $\mu$ F	5%	50V
C23	1-124-234-00	ELECT	22 $\mu$ F	20%	16V
C28	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C31	1-124-234-00	ELECT	22 $\mu$ F	20%	16V
C32	1-124-234-00	ELECT	22 $\mu$ F	20%	16V
C72	1-124-499-11	ELECT, NONPOLAR 1 $\mu$ F		20%	50V

### < JACK >

* CNJ31	1-580-782-11	CONNECTOR, BOARD TO BOARD	
CNJ72	1-764-902-11	CONNECTOR, FFC/FPC 4P	

### < CONNECTOR >

* CNP30	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P	
			(WR565, WR665S)
* CNP32	1-580-772-11	PIN, CONNECTOR (PC BOARD) 4P	
* CNP71	1-564-719-11	PIN, CONNECTOR (SMALL TYPE) 3P	

### < IC >

IC31	8-759-106-02	IC	$\mu$ PC4570G2
------	--------------	----	----------------

### < JUMPER RESISTOR >

JW1	1-216-295-00	METAL CHIP	0	5%	1/10W
JW51	1-216-296-00	METAL CHIP	0	5%	1/8W
JW52	1-216-296-00	METAL CHIP	0	5%	1/8W
JW53	1-216-296-00	METAL CHIP	0	5%	1/8W
JW54	1-216-296-00	METAL CHIP	0	5%	1/8W
JW101	1-216-295-00	METAL CHIP	0	5%	1/8W
					(WR565, WR665S)

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

### < TRANSISTOR >

Q71	8-729-216-22	TRANSISTOR	2SA1162-G
-----	--------------	------------	-----------

### < RESISTOR >

R11	1-216-099-00	METAL CHIP	120K	5%	1/10W
R12	1-216-025-00	METAL GLAZE	100	5%	1/10W
R13	1-216-100-00	METAL GLAZE	130K	5%	1/10W
R14	1-216-068-00	METAL CHIP	6.2K	5%	1/10W
R21	1-216-099-00	METAL CHIP	120K	5%	1/10W
R22	1-216-025-00	METAL GLAZE	100	5%	1/10W
R23	1-216-100-00	METAL GLAZE	130K	5%	1/10W
R24	1-216-068-00	METAL CHIP	6.2K	5%	1/10W
R31	1-216-033-00	METAL CHIP	220	5%	1/10W
R32	1-216-033-00	METAL CHIP	220	5%	1/10W
R71	1-216-082-00	METAL GLAZE	24K	5%	1/10W
R72	1-216-081-00	METAL CHIP	22K	5%	1/10W
R73	1-216-089-00	METAL CHIP	47K	5%	1/10W
R74	1-216-089-00	METAL CHIP	47K	5%	1/10W

### < VARIABLE RESISTOR >

RV11	1-241-761-11	RES, ADJ, CARBON 1K (PB LEVEL, L)	
RV21	1-241-761-11	RES, ADJ, CARBON 1K (PB LEVEL, R)	
RV71	1-241-630-11	RES, ADJ, CARBON 10K (TAPE SPEED, NORMAL)	
RV72	1-241-630-11	RES, ADJ, CARBON 10K (TAPE SPEED, HIGH)	

\*\*\*\*\*

*	A-2007-040-A	AUDIO BOARD, COMPLETE (DECK B)	
			*****

### < CAPACITOR >

C11	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C12	1-136-157-00	FILM	0.022 $\mu$ F	5%	50V
C13	1-124-234-00	ELECT	22 $\mu$ F	20%	16V
C18	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C21	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C22	1-136-157-00	FILM	0.022 $\mu$ F	5%	50V
C23	1-124-234-00	ELECT	22 $\mu$ F	20%	16V
C28	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C31	1-124-234-00	ELECT	22 $\mu$ F	20%	16V
C32	1-124-234-00	ELECT	22 $\mu$ F	20%	16V

# AUDIO (DECK B)

Ref.No.	Part No.	Description	Remark
C33	1-124-234-00	ELECT 22uF	20% 16V
C51	1-164-161-11	CERAMIC CHIP 0.0022uF	10% 100V
C52	1-164-161-11	CERAMIC CHIP 0.0022uF	10% 100V
C53	1-163-019-00	CERAMIC CHIP 0.0068uF	10% 50V
C54	1-136-601-11	FILM 0.01uF	5% 630V
C56	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C57	1-164-346-11	CERAMIC CHIP 1uF	16V
C71	1-164-346-11	CERAMIC CHIP 1uF	16V
C80	1-124-234-00	ELECT 22uF	20% 16V
C81	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C82	1-136-157-00	FILM 0.022uF	5% 50V
C83	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C84	1-136-478-11	FILM 470PF	5% 630V
C85	1-136-433-11	FILM 100PF	5% 630V
C86	1-163-143-00	CERAMIC CHIP 0.0012uF	5% 50V
C87	1-136-273-91	FILM 75PF	5% 630V
C88	1-163-003-11	CERAMIC CHIP 330PF	10% 50V
C89	1-124-234-00	ELECT 22uF	20% 16V
C90	1-107-584-11	CERAMIC 4PF	0.25PF 500V
C91	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C92	1-136-157-00	FILM 0.022uF	5% 50V
C93	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C94	1-136-478-11	FILM 470PF	5% 630V
C95	1-136-433-11	FILM 100PF	5% 630V
C96	1-163-143-00	CERAMIC CHIP 0.0012uF	5% 50V
C97	1-136-273-91	FILM 75PF	5% 630V
C98	1-163-003-11	CERAMIC CHIP 330PF	10% 50V
C99	1-164-005-11	CERAMIC CHIP 0.47uF	25V
< CONNECTOR >			
* CNP31	1-580-782-11	CONNECTOR, BOARD TO BOARD	
* CNP32	1-580-781-11	PIN, CONNECTOR (PC BOARD) 7P	
* CNP33	1-580-782-11	CONNECTOR, BOARD TO BOARD	
* CNP71	1-564-719-11	PIN, CONNECTOR (SMALL TYPE) 3P	
CNP72	1-764-902-11	CONNECTOR, FFC/FPC 4P	
* CNP75	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P	
< DIODE >			
D31	8-719-404-46	DIODE MA110	
< IC >			
IC31	8-759-106-02	IC uPC4570G2	
IC81	8-759-106-56	IC uPC1297CA	
< COIL >			
L81	1-410-780-11	INDUCTOR 27mH	
L91	1-410-780-11	INDUCTOR 27mH	

Ref.No.	Part No.	Description	Remark
< TRANSISTOR >			
Q51	8-729-808-01	TRANSISTOR 2SD1622-S	
Q52	8-729-808-01	TRANSISTOR 2SD1622-S	
Q53	8-729-808-01	TRANSISTOR 2SD1622-S	
Q71	8-729-216-22	TRANSISTOR 2SA1162-G	
< RESISTOR >			
R11	1-216-099-00	METAL CHIP 120K 5%	1/10W
R12	1-216-025-00	METAL GLAZE 100 5%	1/10W
R13	1-216-100-00	METAL GLAZE 130K 5%	1/10W
R14	1-216-067-00	METAL CHIP 5.6K 5%	1/10W
R21	1-216-099-00	METAL CHIP 120K 5%	1/10W
R22	1-216-025-00	METAL GLAZE 100 5%	1/10W
R23	1-216-100-00	METAL GLAZE 130K 5%	1/10W
R24	1-216-067-00	METAL CHIP 5.6K 5%	1/10W
R31	1-216-033-00	METAL CHIP 220 5%	1/10W
R32	1-216-033-00	METAL CHIP 220 5%	1/10W
R33	1-216-085-00	METAL CHIP 4.7K 5%	1/10W
R51	1-216-097-00	METAL CHIP 100K 5%	1/10W
R52	1-216-097-00	METAL CHIP 100K 5%	1/10W
R53	1-216-073-00	METAL CHIP 10K 5%	1/10W
R54	1-216-309-00	METAL CHIP 5.6 5%	1/10W
R55	1-216-309-00	METAL CHIP 5.6 5%	1/10W
R57	1-216-298-00	METAL CHIP 2.2 5%	1/10W
R71	1-216-082-00	METAL GLAZE 24K 5%	1/10W
R72	1-216-081-00	METAL CHIP 22K 5%	1/10W
R73	1-216-089-00	METAL CHIP 47K 5%	1/10W
R74	1-216-089-00	METAL CHIP 47K 5%	1/10W
R81	1-216-073-00	METAL CHIP 10K 5%	1/10W
R82	1-216-085-00	METAL CHIP 33K 5%	1/10W
R83	1-216-001-00	METAL CHIP 10 5%	1/10W
R84	1-216-101-00	METAL CHIP 150K 5%	1/10W
R85	1-216-075-00	METAL CHIP 12K 5%	1/10W
R91	1-216-073-00	METAL CHIP 10K 5%	1/10W
R92	1-216-085-00	METAL CHIP 33K 5%	1/10W
R93	1-216-001-00	METAL CHIP 10 5%	1/10W
R94	1-216-101-00	METAL CHIP 150K 5%	1/10W
R95	1-216-075-00	METAL CHIP 12K 5%	1/10W
< VARIABLE RESISTOR >			
RV11	1-241-761-11	RES, ADJ, CARBON 1K (PB LEVEL, L)	
RV21	1-241-761-11	RES, ADJ, CARBON 1K (PB LEVEL, R)	
RV71	1-241-630-11	RES, ADJ, CARBON 10K (TAPE SPEED, NORMAL)	
RV72	1-241-630-11	RES, ADJ, CARBON 10K (TAPE SPEED, HIGH)	
RV81	1-241-786-11	RES, ADJ, CARBON 22K (REC BIAS, L)	
RV91	1-241-786-11	RES, ADJ, CARBON 22K (REC BIAS, R)	

# AUDIO (DECK B)

# DOLBY (S)

Ref.No.	Part No.	Description	Remark
		< RELAY >	
RY31	1-515-913-11	RELAY	
		< TRANSFORMER >	
T51	1-406-417-11	COIL, BIAS OSCILLATION	
T81	1-433-381-11	TRANSFORMER, BIAS OSCILLATOR	
T91	1-433-381-11	TRANSFORMER, BIAS OSCILLATOR	
		< TEST PIN >	
* TP81	1-568-449-11	HOUSING, CONNECTOR (PC BOARD) 3P	
*****			
*	A-2007-416-A	DOLBY (S) BOARD, COMPLETE (WA7ES, WRG65S)	
*****			
		< CAPACITOR >	
C1	1-164-222-11	CERAMIC CHIP 0.22uF	25V
C2	1-135-177-21	TANTALUM CHIP 1uF	20%
C3	1-104-558-11	FILM CHIP 0.039uF	5%
C4	1-163-007-11	CERAMIC CHIP 680PF	10%
C5	1-163-009-11	CERAMIC CHIP 0.001uF	10%
C6	1-164-717-11	CERAMIC CHIP 0.0082uF	5%
C7	1-164-222-11	CERAMIC CHIP 0.22uF	25V
C8	1-104-562-11	FILM CHIP 0.082uF	5%
C9	1-104-553-11	FILM CHIP 0.015uF	5%
C10	1-165-319-11	CERAMIC CHIP 0.1uF	50V
C11	1-135-145-11	TANTALUM CHIP 0.47uF	10%
C12	1-164-222-11	CERAMIC CHIP 0.22uF	25V
C13	1-165-319-11	CERAMIC CHIP 0.1uF	50V
C14	1-162-568-11	CERAMIC CHIP 0.33uF	10%
C15	1-104-562-11	FILM CHIP 0.082uF	5%
C16	1-135-145-11	TANTALUM CHIP 0.47uF	10%
C17	1-165-319-11	CERAMIC CHIP 0.1uF	50V
C18	1-164-222-11	CERAMIC CHIP 0.22uF	25V
C19	1-163-035-00	CERAMIC CHIP 0.047uF	50V
C20	1-104-553-11	FILM CHIP 0.015uF	5%
C21	1-164-717-11	CERAMIC CHIP 0.0082uF	5%
C22	1-163-009-11	CERAMIC CHIP 0.001uF	10%
C23	1-164-161-11	CERAMIC CHIP 0.0022uF	10%
C24	1-163-005-11	CERAMIC CHIP 470PF	10%
C25	1-163-012-00	CERAMIC CHIP 0.0018uF	10%
C26	1-104-558-11	FILM CHIP 0.039uF	5%
C27	1-163-012-00	CERAMIC CHIP 0.0018uF	10%
C28	1-163-012-00	CERAMIC CHIP 0.0018uF	10%
C29	1-104-563-11	FILM CHIP 0.1uF	5%
C30	1-135-145-11	TANTALUM CHIP 0.47uF	10%
C31	1-104-555-11	FILM CHIP 0.022uF	5%
C32	1-104-563-11	FILM CHIP 0.1uF	5%

Ref.No.	Part No.	Description	Remark
C33	1-163-024-00	CERAMIC CHIP 0.018uF	10%
C34	1-104-563-11	FILM CHIP 0.1uF	5%
C35	1-163-012-00	CERAMIC CHIP 0.0018uF	10%
C36	1-165-319-11	CERAMIC CHIP 0.1uF	50V
C37	1-164-222-11	CERAMIC CHIP 0.22uF	25V
C38	1-163-024-00	CERAMIC CHIP 0.018uF	10%
C39	1-104-555-11	FILM CHIP 0.022uF	5%
C40	1-104-563-11	FILM CHIP 0.1uF	5%
		< CONNECTOR >	
CN1	1-695-092-11	SOCKET, CONNECTOR 7P	
		< IC >	
IC1	8-752-056-51	IC CXA1417Q	
		< RESISTOR >	
R1	1-216-615-11	METAL CHIP 33 0.5%	1/10W
R2	1-208-806-11	METAL GLAZE 10K 2%	1/10W
R3	1-208-812-11	METAL GLAZE 18K 2%	1/10W
R4	1-216-119-00	METAL CHIP 820K 5%	1/10W
R5	1-208-799-11	METAL GLAZE 5.1K 2%	1/10W
R6	1-208-787-11	METAL GLAZE 1.6K 2%	1/10W
R7	1-216-657-11	METAL CHIP 1.8K 0.5%	1/10W
R8	1-216-667-11	METAL CHIP 4.7K 0.5%	1/10W
R9	1-208-791-11	METAL GLAZE 2.4K 2%	1/10W
R10	1-216-052-00	METAL CHIP 1.3K 5%	1/10W
R11	1-216-615-11	METAL CHIP 33 0.5%	1/10W
R12	1-216-619-11	METAL CHIP 47 0.5%	1/10W
R13	1-208-784-11	METAL GLAZE 1.2K 2%	1/10W
R14	1-216-667-11	METAL CHIP 4.7K 0.5%	1/10W
R15	1-208-791-11	METAL GLAZE 2.4K 2%	1/10W
R16	1-216-615-11	METAL CHIP 33 0.5%	1/10W
R17	1-216-619-11	METAL CHIP 47 0.5%	1/10W
R18	1-216-657-11	METAL CHIP 1.8K 0.5%	1/10W
R19	1-208-787-11	METAL GLAZE 1.6K 2%	1/10W
R20	1-208-799-11	METAL GLAZE 5.1K 2%	1/10W
R21	1-216-119-00	METAL CHIP 820K 5%	1/10W
R22	1-216-655-11	METAL CHIP 1.5K 0.5%	1/10W
R23	1-216-678-11	METAL CHIP 13K 0.5%	1/10W
R24	1-216-673-11	METAL CHIP 8.2K 0.5%	1/10W
R25	1-208-806-11	METAL GLAZE 10K 2%	1/10W
R26	1-216-676-11	METAL CHIP 11K 0.5%	1/10W
R27	1-208-799-11	METAL GLAZE 5.1K 2%	1/10W
R28	1-216-695-11	METAL CHIP 68K 0.5%	1/10W
R29	1-208-799-11	METAL GLAZE 5.1K 2%	1/10W
R30	1-208-791-11	METAL GLAZE 2.4K 2%	1/10W
R31	1-208-811-11	METAL GLAZE 16K 2%	1/10W
R32	1-216-685-11	METAL CHIP 27K 0.5%	1/10W

## DOLBY (S)

## LEAF SW (DECK A)

## LEAF SW (DECK B)

## SYSTEM CONTROL

## TRANSFORMER

## PANEL

## CONNECTOR

## POWER SWITCH

## PITCH CONTROL

## HEADPHONE

Ref. No.	Part No.	Description	Remark
R33	1-208-813-11	METAL GLAZE	20K 2% 1/10W
R34	1-216-684-11	METAL CHIP	24K 0.5% 1/10W
R35	1-208-817-11	METAL GLAZE	30K 2% 1/10W
R36	1-208-817-11	METAL GLAZE	30K 2% 1/10W
R37	1-216-676-11	METAL CHIP	11K 0.5% 1/10W
R38	1-208-819-11	METAL GLAZE	36K 2% 1/10W
R39	1-208-799-11	METAL GLAZE	5.1K 2% 1/10W
R40	1-208-817-11	METAL GLAZE	30K 2% 1/10W
R41	1-208-811-11	METAL GLAZE	16K 2% 1/10W
R42	1-216-673-11	METAL CHIP	8.2K 0.5% 1/10W
R43	1-216-676-11	METAL CHIP	11K 0.5% 1/10W
R44	1-216-689-11	METAL CHIP	39K 0.5% 1/10W
R45	1-216-689-11	METAL CHIP	39K 0.5% 1/10W
*****			
*	1-638-020-11	LEAF SW BOARD (DECK A)	*****
< CONNECTOR >			
* CNP81	1-568-850-11	SOCKET, CONNECTOR 7P	
< IC >			
IC81	8-749-924-10	IC PHONT REFLECTOR NJL5165K-B (H1)	
< RESISTOR >			
R84	1-249-417-11	CARBON	1K 5% 1/4W
R85	1-249-408-11	CARBON	180 5% 1/4W
< SWITCH >			
S81	1-571-958-11	SWITCH, PUSH (1 KEY) (STOP DET)	
S82	1-571-281-21	SWITCH, LEAF (CrO <sub>2</sub> DET)	
S86	1-571-281-21	SWITCH, LEAF (HALF DET)	
*****			
*	1-638-020-11	LEAF SW BOARD (DECK B)	*****
< CONNECTOR >			
* CNP81	1-568-850-11	SOCKET, CONNECTOR 7P	
< IC >			
IC81	8-749-924-10	IC PHONT REFLECTOR NJL5165K-B (H1)	
< RESISTOR >			
R81	1-249-414-11	CARBON	560 5% 1/4W
R82	1-247-818-11	CARBON	300 5% 1/4W
R83	1-247-834-11	CARBON	1.3K 5% 1/4W
R84	1-249-417-11	CARBON	1K 5% 1/4W
R85	1-249-408-11	CARBON	180 5% 1/4W

Ref. No.	Part No.	Description	Remark
< SWITCH >			
S81	1-571-958-11	SWITCH, PUSH (1 KEY) (STOP DET)	
S82	1-571-281-21	SWITCH, LEAF (CrO <sub>2</sub> DET)	
S83	1-571-281-21	SWITCH, LEAF (METAL DET)	
S84	1-571-281-21	SWITCH, LEAF (ERASE PROOF, SIDE A)	
S85	1-571-281-21	SWITCH, LEAF (ERASE PROOF, SIDE B)	
S86	1-571-281-21	SWITCH, LEAF (HALF DET)	
*****			
*	A-2007-311-A	SYSTEM CONTROL BOARD, COMPLETE (WR565:US, CND, AEP, UK, G, CH)	
*	A-2007-365-A	SYSTEM CONTROL BOARD, COMPLETE (W7ES)	
*	A-2007-313-A	SYSTEM CONTROL BOARD, COMPLETE (WR565:AUS)	
*	A-2007-314-A	SYSTEM CONTROL BOARD, COMPLETE (WR565:E)	
*	A-2007-317-A	SYSTEM CONTROL BOARD, COMPLETE (WR665S:AUS)	
*	A-2007-318-A	SYSTEM CONTROL BOARD, COMPLETE (WR665S:E)	
*	A-2007-315-A	SYSTEM CONTROL BOARD, COMPLETE (WR665S:US, CND, AEP, UK, G, CH)	
*****			
TRANSFORMER BOARD			
*****			
PANEL BOARD			
*****			
CONNECTOR BOARD			
*****			
POWER SWITCH BOARD			
*****			
PITCH CONTROL BOARD (WR565, WR665S)			
*****			
HEADPHONE BOARD			
*****			
< CAPACITOR >			
C101	1-162-302-11	CERAMIC	0.0022uF 30% 16V
C102	1-124-907-11	ELECT	10uF 20% 50V
C103	1-124-907-11	ELECT	10uF 20% 50V
C104	1-137-368-11	FILM	0.0047uF 5% 50V
C105	1-136-165-00	FILM	0.1uF 5% 50V
C106	1-136-163-00	FILM	0.068uF 5% 50V
C107	1-124-907-11	ELECT	10uF 20% 50V
C108	1-124-925-11	ELECT	2.2uF 20% 100V
C109	1-162-282-31	CERAMIC	100PF 10% 50V
C110	1-124-925-11	ELECT	2.2uF 20% 100V

## SYSTEM CONTROL

## TRANSFORMER

## PANEL

## CONNECTOR

## POWER SWITCH

## PITCH CONTROL

## HEADPHONE

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C111	1-124-927-11	ELECT 4.7uF	20% 100V	C529	1-124-443-00	ELECT 100uF	20% 10V
C112	1-124-925-11	ELECT 2.2uF	20% 100V	C541	1-130-494-11	MYLAR 0.082uF	5% 50V
C113	1-124-907-11	ELECT 10uF	20% 50V	C542	1-137-457-11	FILM 0.0027uF	5% 50V
			(WA7ES, WR665S)	C543	1-136-161-00	FILM 0.047uF	5% 50V
C114	1-124-916-11	ELECT 22uF	20% 63V	C544	1-137-366-11	FILM 0.0022uF	5% 50V
			(WA7ES, WR665S)				
C115	1-124-927-11	ELECT 4.7uF	20% 100V	C545	1-124-907-11	ELECT 10uF	20% 50V
							(WA7ES, WR665S)
C116	1-137-342-11	FILM 0.0039uF	50% 50V	C546	1-124-907-11	ELECT 10uF	20% 50V
C121	1-124-927-11	ELECT 4.7uF	20% 100V				(WA7ES, WR665S)
C122	1-124-902-00	ELECT 0.47uF	20% 50V	C551	1-161-494-00	CERAMIC 0.022uF	25V
C123	1-164-159-11	CERAMIC 0.1uF	50V	C701	1-124-927-11	ELECT 4.7uF	20% 100V
C124	1-124-927-11	ELECT 4.7uF	20% 100V	C702	1-126-016-11	ELECT 4700uF	20% 16V (WA7ES)
C125	1-126-962-11	ELECT 3.3uF	20% 50V	C702	1-124-898-11	ELECT 4700uF	20% 16V
C141	1-124-907-11	ELECT 10uF	20% 50V				(WR565, WR665S)
C201	1-162-302-11	CERAMIC 0.0022uF	30% 16V	C703	1-126-016-11	ELECT 4700uF	20% 16V (WA7ES)
C202	1-124-907-11	ELECT 10uF	20% 50V	C703	1-124-898-11	ELECT 4700uF	20% 16V
C203	1-124-907-11	ELECT 10uF	20% 50V				(WR565, WR665S)
				C704	1-124-927-11	ELECT 4.7uF	20% 100V
C204	1-137-368-11	FILM 0.0047uF	5% 50V	C705	1-124-472-11	ELECT 470uF	20% 10V
C205	1-136-165-00	FILM 0.1uF	5% 50V				
C206	1-136-163-00	FILM 0.068uF	5% 50V	C706	1-124-927-11	ELECT 4.7uF	20% 100V
C207	1-124-907-11	ELECT 10uF	20% 50V	C707	1-124-762-00	ELECT 4700uF	20% 10V
C208	1-124-925-11	ELECT 2.2uF	20% 100V	C708	1-126-926-11	ELECT 1000uF	20% 10V
							(WR565, WR665S)
C209	1-162-282-31	CERAMIC 100PF	10% 50V	C708	1-124-473-11	ELECT 1000uF	20% 10V (WA7ES)
C210	1-124-925-11	ELECT 2.2uF	20% 100V	C709	1-124-910-11	ELECT 47uF	20% 50V
C211	1-124-927-11	ELECT 4.7uF	20% 100V				
C212	1-124-925-11	ELECT 2.2uF	20% 100V	C710	1-124-907-11	ELECT 10uF	20% 50V
C213	1-124-907-11	ELECT 10uF	20% 50V	C711	1-124-927-11	ELECT 4.7uF	20% 100V
			(WA7ES, WR665S)	C801	1-164-159-11	CERAMIC 0.1uF	50V
C214	1-124-916-11	ELECT 22uF	20% 63V	C802	1-124-902-00	ELECT 0.47uF	20% 50V
			(WA7ES, WR665S)	C803	1-124-443-00	ELECT 100uF	20% 10V
C215	1-124-927-11	ELECT 4.7uF	20% 100V				
C216	1-137-342-11	FILM 0.0039uF	50% 50V	C804	1-164-159-11	CERAMIC 0.1uF	50V
C221	1-124-927-11	ELECT 4.7uF	20% 100V	C805	1-164-159-11	CERAMIC 0.1uF	50V
C222	1-124-902-00	ELECT 0.47uF	20% 50V	C810	1-162-288-31	CERAMIC 330PF	10% 50V
				C811	1-164-159-11	CERAMIC 0.1uF	50V
C223	1-164-159-11	CERAMIC 0.1uF	50V	C812	1-162-288-31	CERAMIC 330PF	10% 50V
C224	1-124-927-11	ELECT 4.7uF	20% 100V				
C225	1-126-962-11	ELECT 3.3uF	20% 50V	C813	1-164-159-11	CERAMIC 0.1uF	50V
C241	1-124-907-11	ELECT 10uF	20% 50V	C814	1-124-907-11	ELECT 10uF	20% 50V
C501	1-124-907-11	ELECT 10uF	20% 50V	C815	1-124-902-00	ELECT 0.47uF	20% 50V
				C816	1-126-103-11	ELECT 470uF	20% 16V
C502	1-126-176-11	ELECT 220uF	20% 10V	C817	1-126-103-11	ELECT 470uF	20% 16V
C503	1-161-494-00	CERAMIC 0.022uF	25V				
C521	1-124-443-00	ELECT 100uF	20% 10V	C818	1-124-360-00	ELECT 1000uF	20% 16V
C522	1-124-443-00	ELECT 100uF	20% 10V	C901	1-161-494-00	CERAMIC 0.022uF	25V
C523	1-124-443-00	ELECT 100uF	20% 10V				(PANEL BOARD)
				C902	1-161-494-00	CERAMIC 0.022uF	25V
C524	1-124-902-00	ELECT 0.47uF	20% 50V				(PANEL BOARD)
C525	1-124-925-11	ELECT 2.2uF	20% 100V	C903	1-161-494-00	CERAMIC 0.022uF	25V
C526	1-124-916-11	ELECT 22uF	20% 63V				(PANEL BOARD)
C527	1-126-916-11	ELECT 1000uF	20% 6.3V	C904	1-161-494-00	CERAMIC 0.022uF	25V
C528	1-124-902-00	ELECT 0.47uF	20% 50V				(PANEL BOARD)

## SYSTEM CONTROL

## TRANSFORMER

## PANEL

## CONNECTOR

## POWER SWITCH

## PITCH CONTROL

## HEADPHONE

Ref. No.	Part No.	Description	Remark
C905	1-161-494-00	CERAMIC 0.022uF	25V (PANEL BOARD)
< CONNECTOR >			
CN131	1-695-087-11	PIN, CONNECTOR (PC BOARD) 7P	(WA7ES, WR665S)
CN231	1-695-087-11	PIN, CONNECTOR (PC BOARD) 7P	(WA7ES, WR665S)
* CN502	1-568-826-11	SOCKET, CONNECTOR 7P	
* CN801	1-764-700-11	SOCKET, CONNECTOR 37P	
* CN802	1-568-826-11	SOCKET, CONNECTOR 7P	
* CN803	1-568-826-11	SOCKET, CONNECTOR 7P	
* CN804	1-568-830-11	SOCKET, CONNECTOR 11P	
* CN805	1-568-830-11	SOCKET, CONNECTOR 11P (CONNECTOR BOARD)	
* CN810	1-568-951-11	PIN, CONNECTOR 2P (CONNECTOR BOARD)	
* CN901	1-764-701-11	SOCKET, CONNECTOR 37P (PANEL BOARD)	
* CN902	1-568-850-11	SOCKET, CONNECTOR 7P (PANEL BOARD)	
* CN906	1-564-495-11	PIN, CONNECTOR 2P (WR565, WR665S)	
< CONNECTOR >			
CNP501	1-506-468-11	PIN, CONNECTOR 3P	
CNP701	1-766-280-11	PIN, CONNECTOR (PC BOARD) 7P	
* CNP702	1-568-954-11	PIN, CONNECTOR 5P	
* CNP703	1-580-230-31	PIN, CONNECTOR (PC BOARD) 2P	(TRANSFORMER BOARD) (EXCEPT E)
CNP704	1-766-280-11	PIN, CONNECTOR (PC BOARD) 7P	(TRANSFORMER BOARD)
* CNP801	1-691-916-11	CONNECTOR, BOARD TO BOARD	(CONNECTOR BOARD)
* CNP802	1-691-916-11	CONNECTOR, BOARD TO BOARD	
* CNP803	1-691-916-11	CONNECTOR, BOARD TO BOARD	
< DIODE >			
D121	8-719-933-33	DIODE HZS6A1L	
D221	8-719-933-33	DIODE HZS6A1L	
D501	8-719-987-63	DIODE 1N4148M	
D502	8-719-987-63	DIODE 1N4148M	
D503	8-719-107-94	DIODE ISS202-1 (WA7ES, WR665S)	
D504	8-719-107-94	DIODE ISS202-1 (WA7ES, WR665S)	
D505	8-719-107-94	DIODE ISS202-1 (WA7ES, WR665S)	
D506	8-719-107-94	DIODE ISS202-1 (WA7ES, WR665S)	
D521	8-719-987-63	DIODE 1N4148M	
D531	8-719-987-63	DIODE 1N4148M	
D541	8-719-987-63	DIODE 1N4148M	
D542	8-719-987-63	DIODE 1N4148M	
D701	8-719-024-99	DIODE 11ES2-NTA2B	
D702	8-719-024-99	DIODE 11ES2-NTA2B	
D703	8-719-024-99	DIODE 11ES2-NTA2B	
D704	8-719-024-99	DIODE 11ES2-NTA2B	

Ref. No.	Part No.	Description	Remark
D705	8-719-024-99	DIODE 11ES2-NTA2B	
D706	8-719-024-99	DIODE 11ES2-NTA2B	
D707	8-719-024-99	DIODE 11ES2-NTA2B	
D708	8-719-987-63	DIODE 1N4148M	
D709	8-719-000-78	DIODE UZL-7L2	
D710	8-719-933-33	DIODE HZS6A1L	
D711	8-719-933-33	DIODE HZS6A1L	
D712	8-719-987-63	DIODE 1N4148M	
D713	8-719-987-63	DIODE 1N4148M	
D714	8-719-000-78	DIODE UZL-7L2	
D715	8-719-933-33	DIODE HZS6A1L	
D801	8-719-987-63	DIODE 1N4148M	
D802	8-719-987-63	DIODE 1N4148M	
D803	8-719-987-63	DIODE 1N4148M	
D804	8-719-987-63	DIODE 1N4148M	
D805	8-719-987-63	DIODE 1N4148M (WR565, WR665S)	
D806	8-719-987-63	DIODE 1N4148M (WR565, WR665S)	
D807	8-719-987-63	DIODE 1N4148M	
< IC >			
IC501	8-752-066-35	IC CXA1563S	
IC502	8-759-634-51	IC M5218AP	
IC503	8-759-634-50	IC M5218AL	
IC504	8-759-634-50	IC M5218AL	
IC521	8-752-058-57	IC CXA1599Q	
IC541	8-759-634-51	IC M5218AP	
IC701	8-759-634-51	IC M5218AP	
IC801	8-752-862-32	IC CXP82316-053Q	
IC802	8-759-000-48	IC MC14052BCP	
IC803	8-759-822-38	IC LA6510	
IC804	8-759-916-14	IC SN74HC04AN	
IC805	8-759-000-48	IC MC14052BCP	
IC806	8-759-165-82	IC PST600E-T	
IC901	8-741-810-59	IC SBX1610-59 (PANEL BOARD)	
< JACK >			
J501	1-565-258-11	JACK, PIN 4P (LINE IN/OUT)	
J502	1-568-519-41	JACK, LARGE TYPE (PHONES)	(HEADPHONE BOARD)
< COIL >			
L801	1-420-872-00	COIL, AIR-CORE	
L802	1-420-872-00	COIL, AIR-CORE	
< FILTER >			
LPF101	1-233-271-11	FILTER, LOW PASS	
LPF201	1-233-271-11	FILTER, LOW PASS	

## SYSTEM CONTROL

## TRANSFORMER

## PANEL

## CONNECTOR

## POWER SWITCH

## PITCH CONTROL

## HEADPHONE

Ref.No.	Part No.	Description	Remark
< TRANSISTOR >			
Q101	8-729-900-74	TRANSISTOR DTC143TS	
Q102	8-729-900-74	TRANSISTOR DTC143TS	
Q121	8-729-922-37	TRANSISTOR 2SD2144S	
Q122	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q201	8-729-900-74	TRANSISTOR DTC143TS	
Q202	8-729-900-74	TRANSISTOR DTC143TS	
Q221	8-729-922-37	TRANSISTOR 2SD2144S	
Q222	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q501	8-729-900-65	TRANSISTOR DTA144ES	
Q502	8-729-900-65	TRANSISTOR DTA144ES	
Q503	8-729-900-65	TRANSISTOR DTA144ES	
Q504	8-729-900-65	TRANSISTOR DTA144ES	
Q505	8-729-900-65	TRANSISTOR DTA144ES	
Q521	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q522	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q523	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q525	8-729-900-89	TRANSISTOR DTC144ES	
Q526	8-729-900-65	TRANSISTOR DTA144ES	
Q527	8-729-900-89	TRANSISTOR DTC144ES	
Q541	8-729-900-89	TRANSISTOR DTC144ES	
Q542	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q701	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q702	8-729-209-15	TRANSISTOR 2SD2012	
Q703	8-729-900-74	TRANSISTOR DTC143TS	
Q704	8-729-900-74	TRANSISTOR DTC143TS	
Q705	8-729-141-83	TRANSISTOR 2SB1094-LK	
Q706	8-729-209-15	TRANSISTOR 2SD2012	
Q707	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q708	8-729-140-04	TRANSISTOR 2SB1116A-L	
Q801	8-729-900-80	TRANSISTOR DTC114ES	
Q802	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q803	8-729-900-89	TRANSISTOR DTC144ES	
Q804	8-729-900-80	TRANSISTOR DTC114ES	
Q805	8-729-801-93	TRANSISTOR 2SD1387	
Q806	8-729-801-93	TRANSISTOR 2SD1387	
Q807	8-729-900-89	TRANSISTOR DTC144ES	
Q808	8-729-900-65	TRANSISTOR DTA144ES	
Q809	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q810	8-729-900-80	TRANSISTOR DTC114ES (WR565, WR665S)	
Q811	8-729-900-65	TRANSISTOR DTA144ES (WA7BS, WR665S)	
Q812	8-729-900-80	TRANSISTOR DTC114ES	
Q813	8-729-900-65	TRANSISTOR DTA144ES (WR565, WR665S)	
Q920	8-729-119-76	TRANSISTOR 2SA1175-HFE	
(CONNECTOR BOARD) (WR565, WR665S)			
< RESISTOR >			
R101	1-249-432-11	CARBON 18K 5% 1/4W	

Ref.No.	Part No.	Description	Remark
R102	1-249-421-11	CARBON 2.2K 5% 1/4W	
R103	1-249-420-11	CARBON 1.8K 5% 1/4W	
R104	1-249-441-11	CARBON 100K 5% 1/4W	
R105	1-249-424-11	CARBON 3.9K 5% 1/4W	
R109	1-249-429-11	CARBON 10K 5% 1/4W	
R110	1-249-429-11	CARBON 10K 5% 1/4W	
R111	1-249-435-11	CARBON 33K 5% 1/4W	
R112	1-247-846-11	CARBON 4.3K 5% 1/4W	
R113	1-247-887-00	CARBON 220K 5% 1/4W	
R114	1-249-429-11	CARBON 10K 5% 1/4W	
R115	1-249-433-11	CARBON 22K 5% 1/4W	
R117	1-249-437-11	CARBON 47K 5% 1/4W	
R118	1-249-425-11	CARBON 4.7K 5% 1/4W	
R119	1-249-429-11	CARBON 10K 5% 1/4W	
R121	1-249-434-11	CARBON 27K 5% 1/4W	
R122	1-249-417-11	CARBON 1K 5% 1/4W	
R123	1-249-421-11	CARBON 2.2K 5% 1/4W	
R124	1-247-887-00	CARBON 220K 5% 1/4W	
R125	1-249-421-11	CARBON 2.2K 5% 1/4W	
R126	1-247-807-31	CARBON 100 5% 1/4W	
R127	1-247-807-31	CARBON 100 5% 1/4W	
R128	1-249-421-11	CARBON 2.2K 5% 1/4W	
R129	1-249-439-11	CARBON 68K 5% 1/4W	
R131	1-249-437-11	CARBON 47K 5% 1/4W	
R132	1-249-409-11	CARBON 220 5% 1/4W	
R141	1-249-441-11	CARBON 100K 5% 1/4W	
R142	1-249-435-11	CARBON 33K 5% 1/4W	
R201	1-249-432-11	CARBON 18K 5% 1/4W	
R202	1-249-421-11	CARBON 2.2K 5% 1/4W	
R203	1-249-420-11	CARBON 1.8K 5% 1/4W	
R204	1-249-441-11	CARBON 100K 5% 1/4W	
R205	1-249-424-11	CARBON 3.9K 5% 1/4W	
R209	1-249-429-11	CARBON 10K 5% 1/4W	
R210	1-249-429-11	CARBON 10K 5% 1/4W	
R211	1-249-435-11	CARBON 33K 5% 1/4W	
R212	1-247-846-11	CARBON 4.3K 5% 1/4W	
R213	1-247-887-00	CARBON 220K 5% 1/4W	
R214	1-249-429-11	CARBON 10K 5% 1/4W	
R215	1-249-433-11	CARBON 22K 5% 1/4W	
R217	1-249-437-11	CARBON 47K 5% 1/4W	
R218	1-249-425-11	CARBON 4.7K 5% 1/4W	
R219	1-249-429-11	CARBON 10K 5% 1/4W	
R221	1-249-434-11	CARBON 27K 5% 1/4W	
R222	1-249-417-11	CARBON 1K 5% 1/4W	
R223	1-249-421-11	CARBON 2.2K 5% 1/4W	
R224	1-247-887-00	CARBON 220K 5% 1/4W	
R225	1-249-421-11	CARBON 2.2K 5% 1/4W	
R226	1-247-807-31	CARBON 100 5% 1/4W	
R227	1-247-807-31	CARBON 100 5% 1/4W	

## SYSTEM CONTROL

## TRANSFORMER

## PANEL

## CONNECTOR

## POWER SWITCH

## PITCH CONTROL

## HEADPHONE

Ref. No.	Part No.	Description	Remark
R228	1-249-421-11	CARBON 2. 2K 5%	1/4W
R229	1-249-439-11	CARBON 68K 5%	1/4W
R231	1-249-437-11	CARBON 47K 5%	1/4W
R232	1-249-409-11	CARBON 220 5%	1/4W
R241	1-249-441-11	CARBON 100K 5%	1/4W
R242	1-249-435-11	CARBON 33K 5%	1/4W
R501	1-215-452-00	METAL 20K 1%	1/4W
R502	1-249-417-11	CARBON 1K 5%	1/4W
R503	1-249-435-11	CARBON 33K 5%	1/4W
R505	1-249-435-11	CARBON 33K 5%	1/4W
R506	1-249-433-11	CARBON 22K 5%	1/4W
R508	1-249-433-11	CARBON 22K 5%	1/4W
R509	1-249-435-11	CARBON 33K 5%	1/4W
R521	1-215-455-00	METAL 27K 1%	1/4W
R522	1-249-429-11	CARBON 10K 5%	1/4W
R523	1-249-429-11	CARBON 10K 5%	1/4W
R524	1-249-417-11	CARBON 1K 5%	1/4W
R525	1-247-872-11	CARBON 51K 5%	1/4W
R526	1-249-417-11	CARBON 1K 5%	1/4W
R527	1-249-413-11	CARBON 470 5%	1/4W
△R528	1-212-863-00	FUSIBLE 18 5%	1/4W F
R529	1-249-437-11	CARBON 47K 5%	1/4W
R530	1-249-429-11	CARBON 10K 5%	1/4W
R531	1-249-437-11	CARBON 47K 5%	1/4W
R532	1-249-417-11	CARBON 1K 5%	1/4W
R533	1-249-432-11	CARBON 18K 5%	1/4W
R534	1-249-430-11	CARBON 12K 5%	1/4W
R535	1-249-437-11	CARBON 47K 5%	1/4W
R536	1-249-437-11	CARBON 47K 5%	1/4W
R538	1-249-435-11	CARBON 33K 5%	1/4W
R541	1-249-426-11	CARBON 5. 6K 5%	1/4W
R542	1-249-433-11	CARBON 22K 5%	1/4W
R543	1-249-436-11	CARBON 39K 5%	1/4W
R544	1-249-441-11	CARBON 100K 5%	1/4W
R545	1-249-437-11	CARBON 47K 5%	1/4W
R546	1-249-441-11	CARBON 100K 5%	1/4W
R547	1-247-846-11	CARBON 4. 3K 5%	1/4W
R701	1-249-421-11	CARBON 2. 2K 5%	1/4W
R702	1-249-422-11	CARBON 2. 7K 5%	1/4W
R703	1-249-429-11	CARBON 10K 5%	1/4W
R704	1-249-422-11	CARBON 2. 7K 5%	1/4W
R705	1-249-425-11	CARBON 4. 7K 5%	1/4W
R706	1-249-427-11	CARBON 6. 8K 5%	1/4W
R707	1-249-419-11	CARBON 1. 5K 5%	1/4W
R708	1-249-429-11	CARBON 10K 5%	1/4W
R709	1-249-419-11	CARBON 1. 5K 5%	1/4W
R710	1-249-425-11	CARBON 4. 7K 5%	1/4W
R711	1-249-427-11	CARBON 6. 8K 5%	1/4W
R712	1-249-427-11	CARBON 6. 8K 5%	1/4W

Ref. No.	Part No.	Description	Remark
R713	1-249-417-11	CARBON 1K 5%	1/4W
R714	1-249-422-11	CARBON 2. 7K 5%	1/4W
R715	1-249-431-11	CARBON 15K 5%	1/4W
R716	1-249-430-11	CARBON 12K 5%	1/4W
R717	1-249-437-11	CARBON 47K 5%	1/4W
△R718	1-219-137-11	FUSIBLE 0. 33 10%	1/4W F
R719	1-249-414-11	CARBON 560 5%	1/4W
△R720	1-219-139-11	FUSIBLE 0. 68 10%	1/4W F
△R721	1-219-139-11	FUSIBLE 0. 68 10%	1/4W F
R801	1-249-417-11	CARBON 1K 5%	1/4W
R802	1-249-441-11	CARBON 100K 5%	1/4W
R803	1-249-435-11	CARBON 33K 5%	1/4W
R804	1-249-433-11	CARBON 22K 5%	1/4W
R805	1-249-433-11	CARBON 22K 5%	1/4W
R806	1-249-429-11	CARBON 10K 5%	1/4W
R807	1-249-429-11	CARBON 10K 5%	1/4W
R808	1-249-433-11	CARBON 22K 5%	1/4W
R809	1-249-430-11	CARBON 12K 5%	1/4W
R810	1-249-433-11	CARBON 22K 5%	1/4W
R811	1-249-433-11	CARBON 22K 5%	1/4W
R812	1-249-433-11	CARBON 22K 5%	1/4W
R813	1-247-807-31	CARBON 100 5%	1/4W
R814	1-249-430-11	CARBON 12K 5%	1/4W
R815	1-249-433-11	CARBON 22K 5%	1/4W
R816	1-249-433-11	CARBON 22K 5%	1/4W
R817	1-249-433-11	CARBON 22K 5%	1/4W
R818	1-247-807-31	CARBON 100 5%	1/4W
R819	1-249-434-11	CARBON 27K 5%	1/4W
R820	1-249-434-11	CARBON 27K 5%	1/4W
R821	1-249-434-11	CARBON 27K 5%	1/4W
R822	1-249-434-11	CARBON 27K 5%	1/4W
R823	1-249-429-11	CARBON 10K 5%	1/4W
R824	1-249-429-11	CARBON 10K 5%	1/4W
R825	1-249-429-11	CARBON 10K 5%	1/4W
R826	1-249-429-11	CARBON 10K 5%	1/4W
R827	1-249-421-11	CARBON 2. 2K 5%	1/4W
R828	1-247-874-11	CARBON 62K 5%	1/4W
R829	1-247-866-11	CARBON 30K 5%	1/4W
R830	1-249-431-11	CARBON 15K 5%	1/4W
R831	1-247-852-11	CARBON 7. 5K 5%	1/4W
R835	1-249-433-11	CARBON 22K 5%	1/4W
R836	1-247-852-11	CARBON 7. 5K 5%	1/4W
R841	1-249-421-11	CARBON 2. 2K 5%	1/4W
R842	1-249-429-11	CARBON 10K 5%	1/4W
R843	1-249-421-11	CARBON 2. 2K 5%	1/4W
R844	1-249-429-11	CARBON 10K 5%	1/4W
R845	1-249-422-11	CARBON 2. 7K 5%	1/4W
R846	1-249-422-11	CARBON 2. 7K 5%	1/4W
R847	1-249-422-11	CARBON 2. 7K 5%	1/4W

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

## SYSTEM CONTROL

## TRANSFORMER

## PANEL

## CONNECTOR

## POWER SWITCH

## PITCH CONTROL

## HEADPHONE

Ref. No.	Part No.	Description	Remark
R848	1-249-434-11	CARBON 27K 5% 1/4W	
R849	1-249-421-11	CARBON 2.2K 5% 1/4W	
R850	1-249-421-11	CARBON 2.2K 5% 1/4W	
R851	1-249-421-11	CARBON 2.2K 5% 1/4W	
R852	1-249-434-11	CARBON 27K 5% 1/4W	
R853	1-249-421-11	CARBON 2.2K 5% 1/4W	
R854	1-249-421-11	CARBON 2.2K 5% 1/4W	
R855	1-249-433-11	CARBON 22K 5% 1/4W	
R856	1-247-807-31	CARBON 100 5% 1/4W	
R857	1-247-807-31	CARBON 100 5% 1/4W	
R858	1-247-807-31	CARBON 100 5% 1/4W	
R859	1-247-807-31	CARBON 100 5% 1/4W	
R860	1-247-807-31	CARBON 100 5% 1/4W	
R861	1-249-441-11	CARBON 100K 5% 1/4W	
R862	1-249-422-11	CARBON 2.7K 5% 1/4W	
R863	1-249-426-11	CARBON 5.6K 5% 1/4W	
R864	1-247-852-11	CARBON 7.5K 5% 1/4W	
R865	1-247-858-11	CARBON 13K 5% 1/4W	
R866	1-249-429-11	CARBON 10K 5% 1/4W	
R867	1-247-840-00	CARBON 2.4K 5% 1/4W	
R868	1-247-852-11	CARBON 7.5K 5% 1/4W	
R869	1-249-425-11	CARBON 4.7K 5% 1/4W	
R870	1-249-430-11	CARBON 12K 5% 1/4W	
R871	1-249-430-11	CARBON 12K 5% 1/4W	
R872	1-249-436-11	CARBON 39K 5% 1/4W	
R873	1-249-437-11	CARBON 47K 5% 1/4W (CONNECTOR BOARD) (WR565, WR665S)	
R874	1-249-437-11	CARBON 47K 5% 1/4W (CONNECTOR BOARD) (WR565, WR665S)	
R875	1-247-848-11	CARBON 5.1K 5% 1/4W (CONNECTOR BOARD) (WR565, WR665S)	
R876	1-249-435-11	CARBON 33K 5% 1/4W (WR565)	
R877	1-249-435-11	CARBON 33K 5% 1/4W (WA7ES, WR665S)	
R878	1-249-435-11	CARBON 33K 5% 1/4W (WR565)	
R879	1-249-441-11	CARBON 100K 5% 1/4W (PITCH CONTROL BOARD) (WR565, WR665S)	
R880	1-249-435-11	CARBON 33K 5% 1/4W (WA7ES)	
R901	1-249-429-11	CARBON 10K 5% 1/4W (PANEL BOARD)	
R902	1-249-429-11	CARBON 10K 5% 1/4W (PANEL BOARD)	
R903	1-249-429-11	CARBON 10K 5% 1/4W (PANEL BOARD)	
R904	1-249-429-11	CARBON 10K 5% 1/4W (PANEL BOARD)	
R905	1-249-429-11	CARBON 10K 5% 1/4W (PANEL BOARD)	
R906	1-249-418-11	CARBON 1.2K 5% 1/4W (PANEL BOARD)	
R907	1-249-420-11	CARBON 1.8K 5% 1/4W (PANEL BOARD)	
R908	1-249-422-11	CARBON 2.7K 5% 1/4W (PANEL BOARD)	
R909	1-249-424-11	CARBON 3.9K 5% 1/4W (PANEL BOARD)	
R910	1-249-427-11	CARBON 6.8K 5% 1/4W (PANEL BOARD)	
R911	1-249-418-11	CARBON 1.2K 5% 1/4W (PANEL BOARD)	
R912	1-249-420-11	CARBON 1.8K 5% 1/4W (PANEL BOARD)	

Ref. No.	Part No.	Description	Remark
R913	1-249-422-11	CARBON 2.7K 5% 1/4W (PANEL BOARD)	
R914	1-249-424-11	CARBON 3.9K 5% 1/4W (PANEL BOARD)	
R915	1-249-427-11	CARBON 6.8K 5% 1/4W (PANEL BOARD)	
R916	1-249-431-11	CARBON 15K 5% 1/4W (PANEL BOARD)	
R917	1-249-418-11	CARBON 1.2K 5% 1/4W (PANEL BOARD)	
R918	1-249-420-11	CARBON 1.8K 5% 1/4W (PANEL BOARD)	
R919	1-249-422-11	CARBON 2.7K 5% 1/4W (PANEL BOARD)	
R920	1-249-418-11	CARBON 1.2K 5% 1/4W (PANEL BOARD)	
R921	1-249-420-11	CARBON 1.8K 5% 1/4W (PANEL BOARD)	
R922	1-249-424-11	CARBON 3.9K 5% 1/4W (PANEL BOARD)	
R923	1-249-418-11	CARBON 1.2K 5% 1/4W (PANEL BOARD)	
R924	1-249-420-11	CARBON 1.8K 5% 1/4W (PANEL BOARD)	
R925	1-249-422-11	CARBON 2.7K 5% 1/4W (PANEL BOARD) (WA7ES, WR665S)	
R926	1-249-427-11	CARBON 6.8K 5% 1/4W (PANEL BOARD)	
R927	1-249-427-11	CARBON 6.8K 5% 1/4W (PANEL BOARD)	
R928	1-249-431-11	CARBON 15K 5% 1/4W (PANEL BOARD) (WA7ES, WR665S)	
R929	1-249-424-11	CARBON 3.9K 5% 1/4W (PANEL BOARD)	
R930	1-249-422-11	CARBON 2.7K 5% 1/4W (PANEL BOARD)	
R931	1-249-424-11	CARBON 3.9K 5% 1/4W (PANEL BOARD) (WA7ES, WR665S)	
R931	1-249-427-11	CARBON 6.8K 5% 1/4W (PANEL BOARD) (WR565)	
< VARIABLE RESISTOR >			
RV101	1-241-630-11	RES, ADJ, CARBON 10K (REC LEVEL, L)	
RV201	1-241-630-11	RES, ADJ, CARBON 10K (REC LEVEL, R)	
RV801	1-223-848-11	RES, VAR, CARBON 50K (PITCH CONTROL) (PITCH CONTROL BOARD) (WR565, WR665S)	
RV802	1-241-765-11	RES, ADJ, CARBON 22K (PITCH CONTROL) (CONTROL BOARD) (WR565, WR665S)	
RV901	1-223-616-11	RES, VAR, CARBON 5K/5K (BALANCE) (PANEL BOARD)	
RV902	1-223-617-11	RES, VAR, CARBON 5K/5K (REC LEVEL) (PANEL BOARD)	
< SWITCH >			
ST01	1-554-118-00	SWITCH, PUSH (1 KEY) (POWER) (POWER SWITCH BOARD)	
S901	1-554-303-21	SWITCH, TACTILE (■ CLEAR) (PANEL BOARD)	
S902	1-554-303-21	SWITCH, TACTILE (> FRONT) (PANEL BOARD)	
S903	1-554-303-21	SWITCH, TACTILE (< BACK) (PANEL BOARD)	
S904	1-554-303-21	SWITCH, TACTILE (AMS ◀) (PANEL BOARD)	
S905	1-554-303-21	SWITCH, TACTILE (AMS ▶) (PANEL BOARD)	
S906	1-554-303-21	SWITCH, TACTILE (● REC) (PANEL BOARD)	
S907	1-554-303-21	SWITCH, TACTILE (■) (PANEL BOARD)	
S908	1-554-303-21	SWITCH, TACTILE (□ PAUSE) (PANEL BOARD)	
S909	1-554-303-21	SWITCH, TACTILE (>) (PANEL BOARD)	
S910	1-554-303-21	SWITCH, TACTILE (<) (PANEL BOARD)	

## SYSTEM CONTROL

## TRANSFORMER

## PANEL

## CONNECTOR

## POWER SWITCH

## PITCH CONTROL

## HEADPHONE

Ref.No.	Part No.	Description	Remark
S911	1-554-303-21	SWITCH, TACTILE (● REC MUTE) (PANEL BOARD)	
S912	1-554-303-21	SWITCH, TACTILE (AMS ◀) (PANEL BOARD)	
S913	1-554-303-21	SWITCH, TACTILE (AMS ▶) (PANEL BOARD)	
S914	1-554-303-21	SWITCH, TACTILE (DISPLAY) (PANEL BOARD)	
S915	1-554-303-21	SWITCH, TACTILE (RMS/START) (PANEL BOARD)	
S916	1-554-303-21	SWITCH, TACTILE (SET) (PANEL BOARD)	
S917	1-554-303-21	SWITCH, TACTILE (CHECK) (PANEL BOARD)	
S918	1-554-303-21	SWITCH, TACTILE (COUNTER RESET) (PANEL BOARD) (WR565)	
S918	1-554-303-21	SWITCH, TACTILE (RESET) (PANEL BOARD) (WATES, WR665S)	
S919	1-554-303-21	SWITCH, TACTILE (MEMORY) (PANEL BOARD) (WATES, WR665S)	
S920	1-554-303-21	SWITCH, TACTILE (HIGH) (PANEL BOARD)	
S921	1-554-303-21	SWITCH, TACTILE (NORMAL) (PANEL BOARD)	
S922	1-554-303-21	SWITCH, TACTILE (RESET) (PANEL BOARD) (WATES, WR665S)	
S923	1-692-126-11	SWITCH, SLIDE (DOLBY NR) (PANEL BOARD) (WATES, WR665S)	
S923	1-692-665-11	SWITCH, SLIDE (DOLBY NR) (PANEL BOARD) (WR565)	
S924	1-692-126-11	SWITCH, SLIDE (DOLBY NR) (PANEL BOARD)	
S925	1-692-126-11	SWITCH, SLIDE (DIR MODE) (PANEL BOARD)	
S926	1-554-303-21	SWITCH, TACTILE (AUTO CAL) (PANEL BOARD)	
S927	1-554-303-21	SWITCH, TACTILE (COUNTER RESET) (PANEL BOARD) (WR565)	
S927	1-554-303-21	SWITCH, TACTILE (MEMORY) (PANEL BOARD) (WATES, WR665S)	
< TEST PIN >			
* TP801	1-560-060-00	PIN, CONNECTOR 2P	
< FLUORESCENT INDICATOR TUBE >			
VFD901	1-517-263-11	INDICATOR TUBE, FLUORESCENT (PANEL BOARD)	
< CRYSTAL >			
X801	1-579-175-11	VIBRATOR, CERAMIC (10MHz)	
*****			
MISCELLANEOUS			
*****			
△5	1-569-007-11	ADAPTER, CONVERSION 2P (E)	
△6	1-551-188-XX	CORD, POWER (E)	
△6	1-558-945-21	CORD, POWER (POLAR. SPT-1) (US, CND)	
△6	1-575-651-21	CORD, POWER (AEP, G, CH)	
△6	1-696-586-11	CORD, POWER (UK)	
△6	1-696-845-11	CORD, POWER (AUS)	

Ref.No.	Part No.	Description	Remark
16	1-765-216-11	WIRE (FLAT TYPE) (11 CORE)	
67	1-765-214-11	WIRE (FLAT TYPE) (7 CORE)	
71	1-765-217-11	WIRE (FLAT TYPE) (37 CORE)	
72	1-765-215-11	WIRE (FLAT TYPE) (7 CORE)	
74	1-765-213-11	WIRE (FLAT TYPE) (7 CORE)	
121	1-638-983-11	PC BOARD, MOTOR FLEXIBLE	
HP101	A-2003-757-A	BASE ASSY, HEAD (PLAY BACK) (DECK A)	
HRPE101A	2003-930-A	BASE ASSY, HEAD (RECORD, PLAYBACK, ERASE) (DECK B)	
△S701	1-692-155-11	SELECTOR, POWER VOLTAGE (E)	
△T701	1-427-782-11	TRANSFORMER, POWER (US, CND)	
△T701	1-427-783-11	TRANSFORMER, POWER (AEP, UK, G, AUS, CH)	
△T701	1-427-784-11	TRANSFORMER, POWER (E)	
*****			
ACCESSORIES & PACKING MATERIALS			
*****			
	1-551-734-11	CORD, CONNECTION	
	3-755-288-11	MANUAL, INSTRUCTION (RM) (ENGLISH, FRENCH) (WR665S:CND)	
	3-798-411-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, SPANISH, PORTUGUESE) (WR565:AEP, E/WR665S:AEP, E)	
	3-798-411-21	MANUAL, INSTRUCTION (ENGLISH) (WR565:US, CND, UK, AUS/ WR665S:US, CND, UK, AUS)	
	3-798-411-31	MANUAL, INSTRUCTION (FRENCH) (WR565:CND/WR665S:CND/)	
	3-798-411-41	MANUAL, INSTRUCTION (GERMAN, DUTCH, SWEDISH, ITALIAN) (WR565:AEP/WR665S:AEP)	
	3-798-411-51	MANUAL, INSTRUCTION (GERMAN) (WR565:G/WR665S:G)	
	3-798-411-61	MANUAL, INSTRUCTION (CHINESE) (WR565:CH/WR665S:CH)	
	3-798-792-21	MANUAL, INSTRUCTION (ENGLISH) (WATES)	
*	3-907-887-01	CUSHION	
*	3-921-800-01	INDIVIDUAL CARTON (WR665S:US, CND, E, AUS)	
*	3-921-800-11	INDIVIDUAL CARTON (WR665S:AEP, UK, G, CH)	
*	3-921-800-21	INDIVIDUAL CARTON (WR565:US, CND, E, AUS)	
*	3-921-800-31	INDIVIDUAL CARTON (WR565:AEP, UK, G, CH)	
*	3-923-965-41	INDIVIDUAL CARTON (WATES)	

\*\*\*\*\*

The components identified by  
mark △ or dotted line with mark  
△ are critical for safety.  
Replace only with part number  
specified.

Les composants identifiés par une  
marque △ sont critiques pour la  
sécurité.  
Ne les remplacer que par une  
pièce portant le numéro spécifié.

## TC-WA7ES/WR565/WR665S

Ref.No.	Part No.	Description	Remark
***** HARDWARE LIST *****			
#1	7-685-871-01	SCREW +BVTT 3×6 (S)	
#2	7-685-646-79	SCREW +BVTP 3×8 TYPE2 IT-3	
#3	7-682-547-09	SCREW +BVTT 3×6 (S)	
#4	7-682-548-04	SCREW +BVTT 3×8 (S)	
#5	7-685-134-19	SCREW (- PTPWH) (2.6×8)	
#6	7-621-773-95	SCREW +BVTT 2.6×6 (S)	
#7	7-627-556-08	SCREW +P 2.6×2.8	
#8	7-621-775-00	SCREW +B 2.6×3	